 


14+
AGES


No.16103

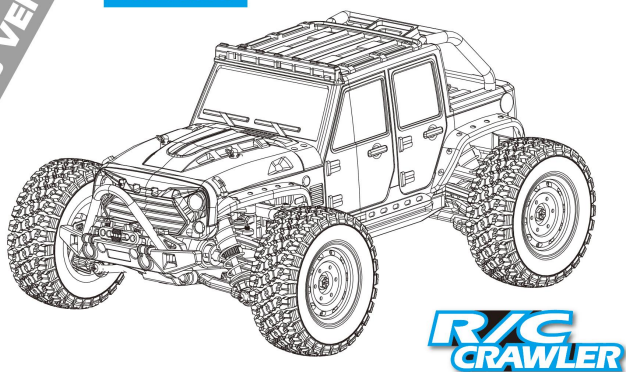

R/C
CRAWLER

- 在每次使用前，请确保已给模型车电池组充分充电。
- 本产品不是玩具，而是全比例模型车。14岁以下儿童必须在成年人密切监督下方能操作。
- Please fully charge the battery pack before each use.
- This product is not a toy, but a full-scale model car. Children under aged 14 must not operate this product unless they are closely supervised by adults.

 No.16106

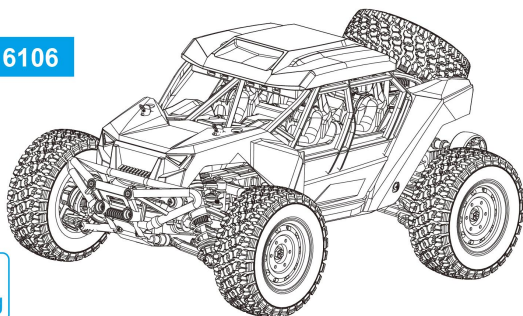


1. 内含小零件，严禁14岁以下儿童使用。
2. 需在成人的陪同下详细阅读本说明书。
3. 实物与图形可能会略有不同，请以实物为准！
1. Not for children under 14 years due to small parts.
2. Detailed scale kit for adult collectors to assemble.
3. The real object may be slightly different from the graphics, please take the real object as the standard!

14+
AGES

No.16101

 HIGH SPEED VEHICLE

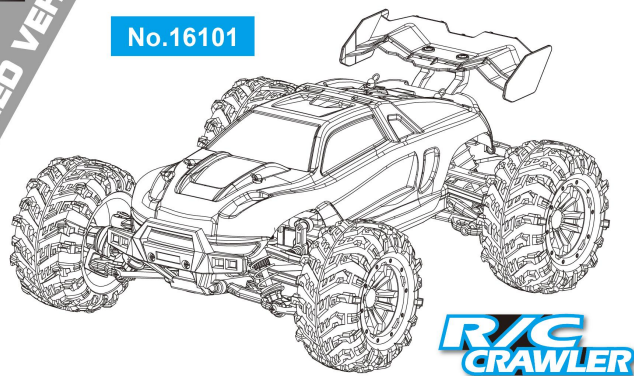

R/C
CRAWLER

产品说明书(Instruction manual)

操作前请详阅此说明书 (Please read these instructions carefully before using it)

- 在每次使用前，请确保已给模型车电池组充分充电。
- 本产品不是玩具，而是全比例模型车。14岁以下儿童必须在成年人密切监督下方能操作。
- Please fully charge the battery pack before each use.
- This product is not a toy, but a full-scale model car. Children under aged 14 must not operate this product unless they are closely supervised by adults.

No.16102



FUNCTION:
FORWARD, BACKWARD,
TURN LEFT OR RIGHT, LIGHT, DRIFT.

警告

本产品含有小零件请勿让三岁以下儿童玩耍； 本产品含电子元件，不得入水或在潮湿环境下使用； 电池充电器应定期检查其电线、 插头、 外壳和其他部件是否损坏， 发现损坏时应停止使用。

注意 事项

1. 可拆卸的小零件要放好，千万不可让小孩吞食。
2. 如操作场地有电波干扰，请另选场地操作。
3. 遥控器电源低电时，请立即停止操作。
4. 对拆除后的包装物，请不要随地丢弃，以免污染环境。
5. 请将您的遥控模型存放在干燥、阴凉的地方。
6. 不要置于近火和高温、潮湿的地方储存。
7. 当电池被水浸湿，请将水分充分地擦拭干净，如有变形，请停止使用。

电池使用注意事项

1. 车体使用一组 Li-ion 7.4V 可充电电池组；
2. 遥控器使用3节1.5V“AA”号电池；
3. 安装或更换电池时请注意极性；
4. 充电电池只能在成人监护下充电；
5. 不可混用新旧或不同型号的电池；
6. 电池电量用尽后，应从模型车内取出；
7. 接线端不应短路；
8. 非充电电池不可充电；
9. 充电电池充电前应从模型车中取出；
10. 请不要将坏的电池、电池组分解或扔到火中、水里，以免发生意外；
11. 充电器的额定输入电压必须与当地的家用电压相符；
12. 在充电过程中，充电器和电池出现微温，属于正常现象。
13. 本模型车禁止使用非原厂电池。

Warning:

Choking hazard! This product contains small parts. NOT suitable for children under 3 years. Contains electrical components and should be kept dry at all times. Regularly check the battery charger wires, plugs and shell and other components for damage. DO NOT use if any part is damaged.

Caution proceeding

 
1. Detachable small parts should be stored safely and out of reach of children.
2. If interference is experienced, turn the model off and try it again in a different area
3. Remote control will not function correctly if the batteries are low. Please replace the batteries.
4. Please discard old/used batteries in a safe manner. Consider your environment!
5. Please store the remote control in cool, dry place.
6. DO NOT expose to fire or high temperatures, moist storage.
7. Should the battery get wet, wipe immediately with a soft dry cloth. If transformed, please stop usage.

Battery use caution proceeding

1. Bodywork uses a set of Li-ion 7.4V rechargeable batteries.
2. Remote control uses 3 x 1.5V AA batteries.
3. Please pay attention to correct polarity when replacing batteries.
4. Rechargeable batteries should be charged under adult supervision.
5. DO NOT use a mix of old and new or different types of battery.
6. After the battery is exhausted, the model car should be removed.
7. DO NOT short circuit any terminals.
8. DO NOT attempt to recharge non rechargeable batteries.
9. Remove batteries from the model car when recharging.
10. DO NOT put batteries into a fire or into water.
11. The rated input voltage battery charger MUST be suitable for your mains power voltage.
12. During charging it is quite normal for the charger and batteries to heat up.
13. It is forbidden to use non original batteries for this model car.


遥控器电池的装配 Assembly of the transmitter battery

- 1** 如图所示，逆时针方向拧开螺丝，翻开电池盖。
As shown in the figure, unscrew the screws counterclockwise and open the battery cover.

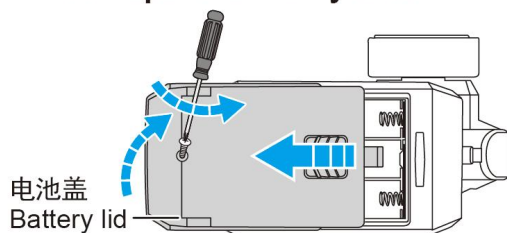


- 2** 如图所示，装入3粒AA号碱性电池并注意电池正负极是否正确装入。
Load 3 AA-size alkaline batteries as shown in the illustration. Caution: install batteries with correct polarity.

 遥控器需要使用3节1.5V
“AA”电池(不包括)
3x“AA”Size Batteries
for transmitter(Not
Included)


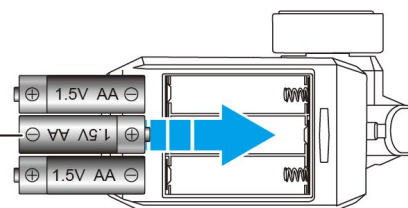


 - 3** 如图所示，合上电池盖，顺时针方向拧上螺丝。
As shown in the figure, close the battery cover and tighten the screw clockwise.

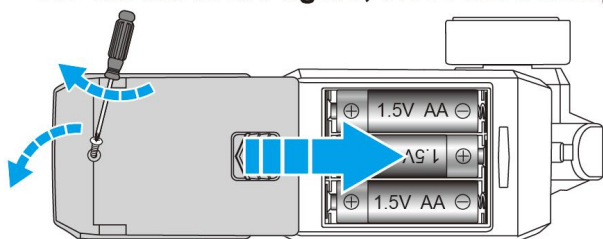

- 请勿混用新旧或不同类型的电池。
- 请及时更换耗尽的电池，请勿使用漏液电池。
- 定期检查遥控器上的电池电量。若电池电量不足，发射和接收效果将不理想。在此种情况下，车子可能会失控，这将会导致发生事故。
- Use the batteries of same brand
- Do not mix old and new batteries in use.
- Remove the batteries from the transmitter when not in use. Do not use leaky batteries.

  遥控器功能介绍 Transmitter function introduce

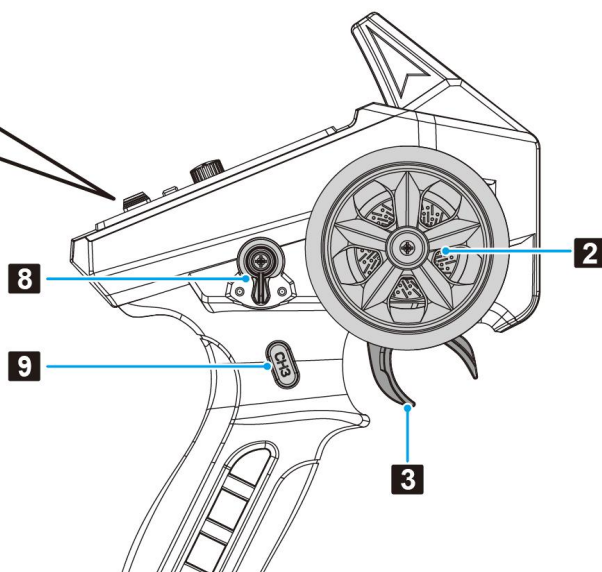
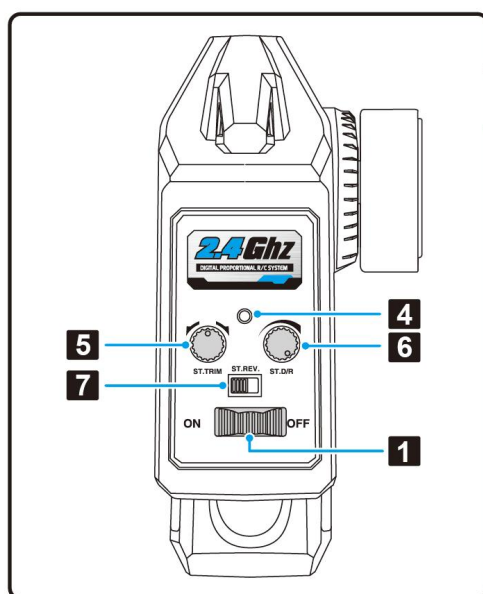


1. 遥控电源开关：打开或关闭遥控电源。
2. 转向轮：当左转转向轮时，模型车左转。当右转转向轮时，模型车右转。
3. 油门扳机：用手指向后扣动遥控器扳机，模型车将向前行驶；用手指向前推动扳机一次为刹车，松手待扳机回归中位后再向前推动，模型车将后退行驶。
4. 电源指示灯：对码时，指示灯先快闪，几秒钟后变为常亮，提示对码成功。当指示灯频率式慢闪，提示电量不足，请及时更换电池。
5. 转向微调旋钮：当车辆无法正常直线行驶时，使用该旋钮进行微调。
6. 转向角度舵量限制：当转动转向轮时，使用“转向角度舵量限制”调整轮胎转动角度大小。
7. 转向逆反向制式开关：对左右转向的正/反向切换。
8. 速度三档开关：速度分快速、中速、慢速。（初学者建议使用慢速熟悉操作）
9. 灯控按键：每按一下“CH3”按键，切换一种灯的模式。

1. Power Switch(On/Off):Slide it to switch on or off power.
2. Steering Wheel: Turn the wheel to the left, the car will turn left; Turn the wheel to the right, the car will turn right.
3. Throttle Trigger: Pull to accelerate,release to slow down, and push it to brake. Center it and then push it a second time to reverse.
4. Power LED: It flashes rapidly during connection. After connection, it stops flashing and keep lights on. Please replace batteries in case the light flash slowly which indicates the power is not enough.
5. Steering Trim: It is used to make the vehicle drive in straight line.Turning the steering trim knob to adjust.
6. Steering angle rudder amount limit: when turning the steering wheel, use "steering angle rudder amount limit" to adjust the tire rotation angle.
7. Steering Reverse Switch: It allows you to electronically switch the direction of the steering servo travel.For instance,if you move the steering wheel to the right and your vehicle turns left,flip this switch to make it turn right.
8. Speed three gear switch: speed is divided into fast speed, medium speed and slow speed. (beginners are recommended to use slow familiar operation)
9. Light control button: Press the "CH3" button once to switch the mode of one lamp.

操作模型车 To drive the vehicle

 
 
1 打开遥控器电源开关和模型车电源开关 Switch on the transmitter, and then the vehicle.

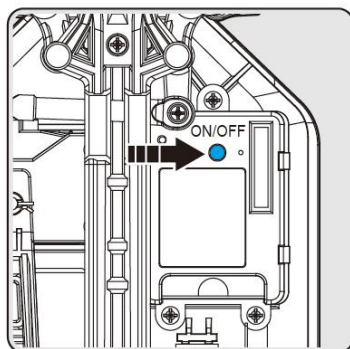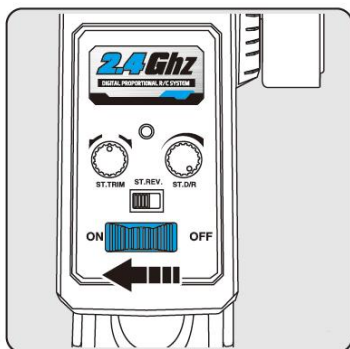

先打开遥控器电源开关，遥控器指示灯闪烁，提示正搜索需要对码的模型车，接着长按2-3秒模型车电源开关，此时遥控器指示灯转为常亮，提示对码成功。

Slide the ON/OFF switch to switch on the transmitter. Press and hold the button on the ESC/Receiver for 2-3 seconds to switch on the ESC/Receiver. The transmitter indicator turns into at this time often bright, hint is successful to the code.

 
 
2 检查油门操作 Checking up the throttle operation

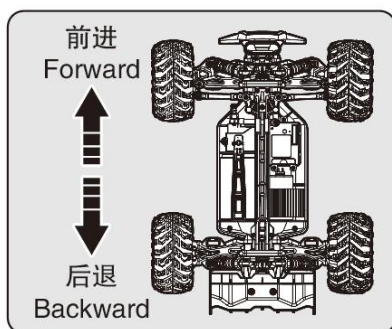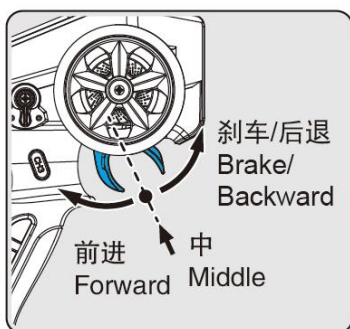

用手指向后扣动遥控器扳机，模型车将向前行驶；用手指向前推动扳机一次为刹车，松手待扳机回归中位后再向前推动则为后退行驶。

When you pull the throttle trigger, your vehicle accelerates forward. When you push the throttle trigger, your vehicle brakes. When you release the trigger then push again, your vehicle goes.

 
 
3 转向微调旋钮 Turning the steering trim to align the front wheels

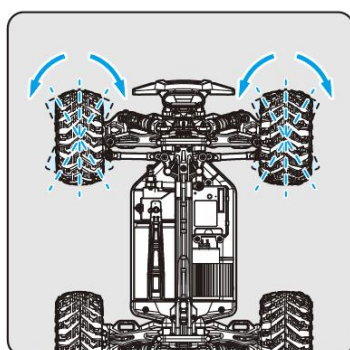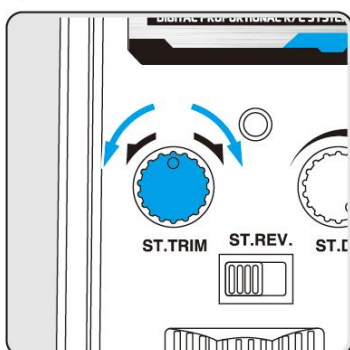


在没有操控转向轮的情况下，模型车前轮未处于中心位置时：若前轮偏向左侧，请顺时针转动转向微调旋钮进行微调；若前轮偏向右侧，请逆时针转动转向微调旋钮进行微调。If the front wheels are unaligned and off the center line the time you do not move the steering wheel on the transmitter, please turn the steering trim knob to align front wheels in line. Turn the steering trim clockwise to align them if the front wheels point to the left. Turn the steering trim anti-clockwise to align them if the front wheels point to the right.

4 转向角度舵量限制 Steering angle rudder amount limit

  转向角度将随之减小
Steering angle will be less with turning angle.

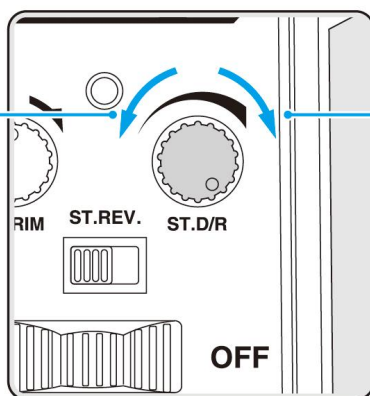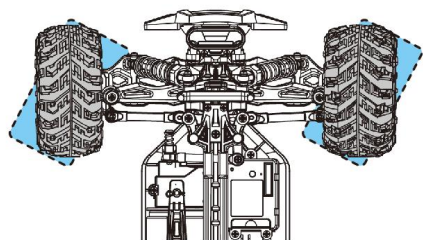



 
转向角度将随之增大
Steering angle will be increased with turning angle

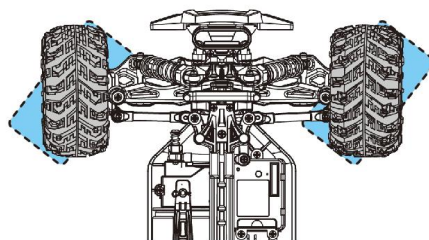

当转动转向轮时，使用“转向角度舵量限制”调整轮胎转动角度大小。

Steering angle rudder amount limit: when turning the steering wheel, use "steering angle rudder amount limit" to adjust the tire rotation angle.

   
5 转向逆反向制式开关 Turning the steering trim to align the front wheels

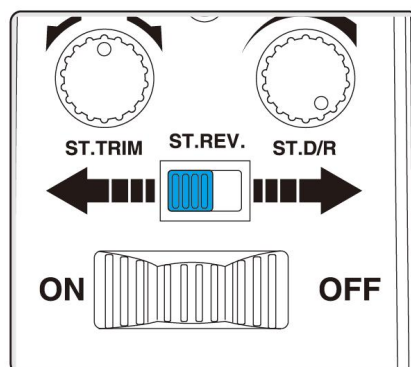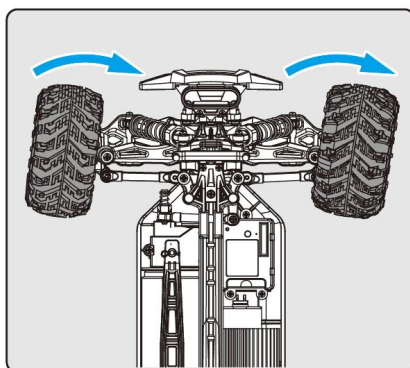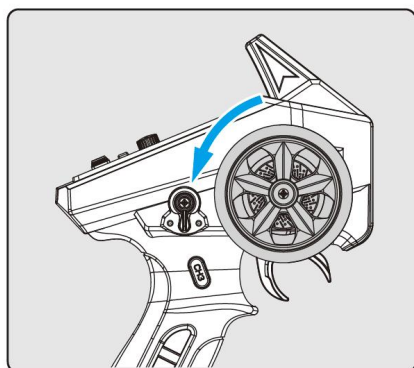

如果遥控转向轮的操作与模型车转向方向不一致。（如当左转转向轮时，模型车却右转。）请调整转向逆反向制式开关，直至操作和模型车行驶一致。


If you move the steering wheel to the right and your vehicle turns left, flip the steering reverse switch to make your vehicle turn right. If you move the steering wheel to the left and your vehicle turns right, flip the steering reverse switch to make your vehicle turn left.

 6 速度三档开关 Speed three gear switch

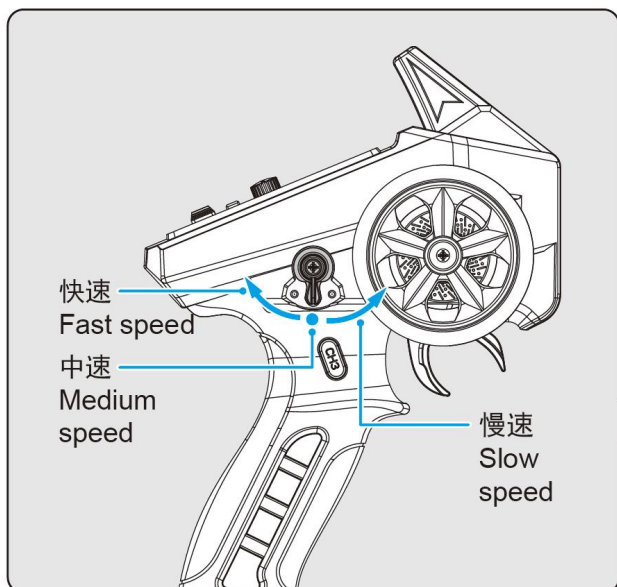



速度三档开关：速度分快速、中速、慢速。（初学者建议使用慢速熟悉操作）

 Speed three gear switch: speed is divided into fast speed, medium speed and slow speed. (Beginners are recommended to use slow familiar operation)

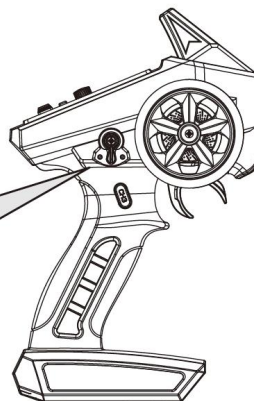

结束操作模型车 To stop driving the vehicle

  
1 关闭遥控器电源开关和模型车电源开关 Switch OFF the transmitter, and then the vehicle.

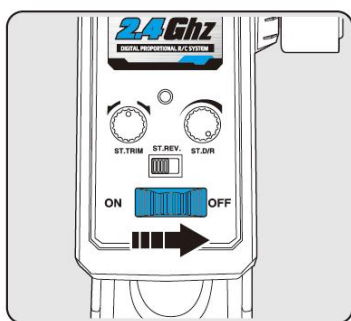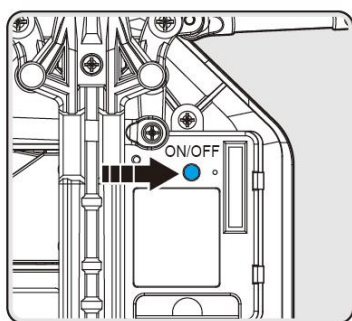

长按2-3秒模型车电源开关，关闭模型车电源。模型车电源指示灯熄灭。接着关闭遥控器电源开关。

Press and hold the button on the ESC/Receiver for 2-3 seconds to switch off the ESC/Receiver. Slide the ON/OFF switch to switch off the transmitter.

 2 检查和清理 Check and straighten out

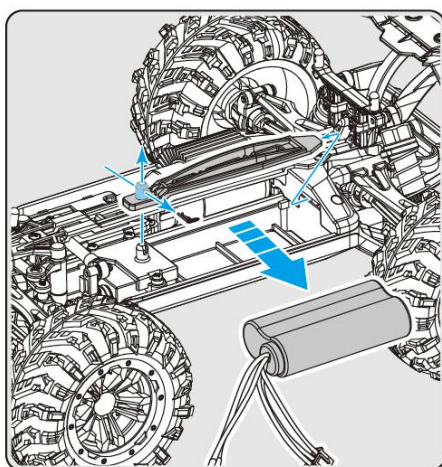

1. 检查模型车是否有零件损坏和松动请及时修理或更换。用软刷和软布清理车身污垢后，将其存放于阴凉处，远离高温热源，远离儿童触手可及之处。

2. 请将电池从模型车上取出，存放于阴凉处。

1. Clean the vehicle with the soft cloth and brush, and store it in dry, cool and clean place away from the reach of children.

2. Disconnect and take out the battery pack if not in use.

 
 
注：每次使用前，请先将电池充满电量。当模型车速度明显下降时，建议立刻对模型车电池充电，以免电池过放而损伤电池。若电池长时间闲置，需定期1-2周左右充电。

Note: please fully charge the battery before each use. When the speed of the model car drops significantly, it is recommended to charge the model car battery immediately to avoid battery damage due to over discharge of the battery. If the battery is idle for a long time, it needs to be charged regularly for about 1-2 weeks.

模型车的维护 Maintenance guide

1. 若长时间不使用，请将模型车和遥控内电池取出。
 2. 每次使用前，确保电池是充满电的状态。
 3. 每次使用前或使用后，仔细检查模型车电路接线是否紧固，没有脱落的接头。仔细检查车轮是否紧固，松垮的车轮会造成传动轴，车轮杯或轮座等部件的过度磨损。
 4. 检查传动齿轮是否需要上润滑油。
 5. 闲置的电池需要充电后（充至50-60%电量）保存于干燥，阴凉处，避免儿童触及。
 6. 每次使用后，请仔细检查模型车各部件是否完整，及时维修或更换。用细毛刷清扫模型车内的沙土，泥灰等污垢，然后用软布擦拭干净。
1. If it is not used for a long time, please take out the battery in the model car and remote control.
 2. Make sure the battery is fully charged before each use.
 3. Before or after each use, carefully check whether the circuit wiring of the model car is fastened and there is no dropped connector. Carefully check whether the wheels are fastened. Loose wheels will cause excessive wear of transmission shaft, wheel cup or wheel seat.
 4. Check whether the transmission gear needs to be lubricated.
 5. The idle battery needs to be stored in a dry and cool place after charging (up to 50-60% of the power) to avoid children's touch.
 6. After each use, please carefully check whether all parts of the model car are complete and repair or replace them in time. Use a fine brush to clean the sand, dirt and other dirt in the model car, and then use a soft cloth to wipe it clean.

模型车电池充电 Charging the battery pack

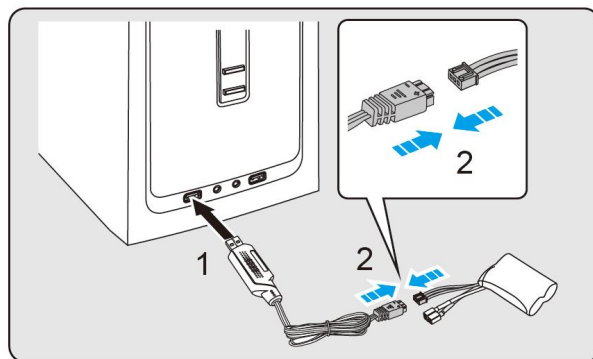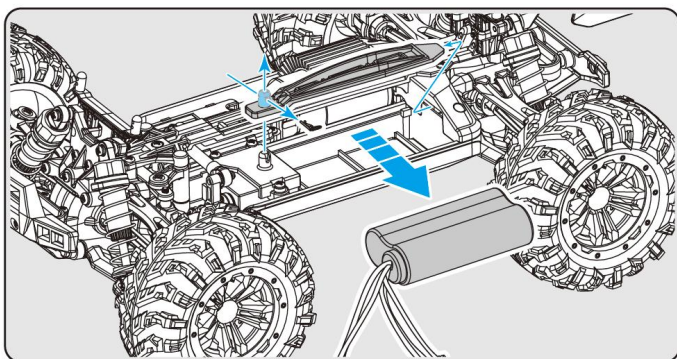

1. 如图所示，取下底盘电池。
 2. 连接USB充电线，将USB线插入USB充电设备口，进行充电。
 3. 充电时间约为4-4.5小时。
 4. USB指示灯说明：
 - 1) 当待机时(USB插上电源，没接上电池时)，红灯(电源灯)常亮，绿灯(充电指示灯)快闪几秒后熄灭。
 - 2) 电池充电时，红灯(电源灯)常亮，绿灯(充电指示灯)频率式慢闪，提示电池正在正常充电。
 - 3) 电池充满电后，红灯(电源灯)熄灭，绿灯停止闪烁，变为常亮状态。
1. Remove the chassis battery as shown in the figure.
 2. Connect the USB charging cable, insert the USB cable into the USB charging device port to charge.
 3. The charging time is about 4-4.5 hours.
 4. USB indicator Description:
 - 1) When standby (USB is plugged in and battery is not connected), the red light (power light) is always on, and the green light (charging indicator) flashes for a few seconds and then goes out.
 - 2) When charging the battery, the red light (power light) is always on, and the green light (charging indicator light) flashes slowly in frequency mode, indicating that the battery is charging normally.
 - 3) After the battery is fully charged, the red light (power light) goes out, the green light stops flashing and becomes normally on.



温馨提示
Reminder

可通过连接手机充电配置插头（标准5V,2A),完成充电操作，以便缩短充电时间。

The charging operation can be completed by connecting the mobile phone charging configuration plug (standard 5V, 2a), so as to shorten the charging time.

警告

-切勿使用非本厂版充电电池，以免模型车性能受损。充电时切勿无人看管。

-儿童在成人指导和监护下方能进行充电操作。切勿使用漏液或包装破损的电池。

-Do not use a non factory rechargeable battery to avoid damage to the performance of the model car. Do not leave unattended when charging.


-Children can charge under the guidance and supervision of adults. Do not use batteries with liquid leakage or damaged packaging.

解决问题指引 Solutions to problems


问题 Problem	原因 Cause	处理方法 Processing Method
模型不动 Model fails to move	1.模型中电池电量不足。 The model is of low battery.	1.请将旧电池取下充电，和安装充满电的电池或没有装入电池。 Please remove the old batteries to charge, and put in fully-charged batteries or no batteries.
	2.发动机损坏电机损坏。 The engine or the motor is damaged.	2.请及时替换新的电机。 Please replace the motor as soon as possible.
	3.电机损坏。 The motor is damaged.	3.如果传动波箱，有异响时或者稍微低速行驶一下就会变热的话请更换电机。 Please replace the engine if the transmission box produces abnormal noises or gets heated soon when the model runs at a low speed.
	4.电子调速器损坏。 The electronic speed regulator is damaged.	4.请咨询厂家是否有维修好的可能，如不行请重新购买新的。 Please consult the manufacturer whether it can be recovered. If not, get a new one.
	5.电线破损。 The wire is damaged.	5.请重新连接破损的部位并做好绝缘处理。 Please reconnect the damaged part and insulate it.
	6.断线头 The connector is damaged.	6.请检查电机电源线是否断开，如断开请重新焊接。 Please check whether the power cord of the motor is disconnected. If yes, re-weld it.
	7.电源线头松脱。 The power connector is loose.	7.检查各部位线头的接触是否存在松脱现象，如松脱，请重新插紧并固定好。 Please check whether the contact between connectors of each part is loose. If yes, please re-plug and fix them.
失去控制 Model out of control	1.车用电池和发射机的电池电量是否变低。 Whether the model or the engine is of low battery.	1.车用电池请充电，或安装充满电电池，请更换新的发射机电池。 Please charge the model batteries, or put in fully-charged batteries, or replace them with new engine batteries.
	2.接收机损坏。 The receiver is damaged.	2.请咨询厂家是否有维修好的可能，如不行请重新购买新的。 Please consult the manufacturer whether it can be recovered. If not, get a new one.
	3.扭力不足。 There lacks torsion.	3.请在活动部件涂上适当润滑油脂。 Please apply lubricant to the moving members.
	4.旋转部件润滑不当。 The rotating member is not lubricated properly.	4.请查看舵机是否出现故障，需要及时更换新的转向舵机。 Please check whether the steering gear is out of order, and replace it with a new one when necessary.
	5.转向部件损伤。 The steering part is damaged.	5.舵机上的摆臂部件损坏，确定是否需要更换新部件。 The swing arm on the steering gear is damaged. Please confirm whether to replace it with a new one.
	6.另外一种接收频率的无线电信号干扰附近的电子设备过多。 Radio signals at another receiving frequency interfere too much with nearby electronics.	6.可尝试在不同的位置来操作您的模型去另外一个可避免电磁场干扰的场地进行行驶。 Try to operate your model at a different location that avoids electromagnetic interference.
	7.旋转部件装配不当又或发生磨损。 The rotating member is not assembled properly or is worn.	7.请仔细排查发生问题的部位后，进行查看并重新组装。如发现齿轮等配件磨损严重时，请重新更换新的配件。分离操作与组装可参考说明书中正确组装方法。 Please troubleshoot carefully the part that fails, and check and re-assemble it. If the gear or any other accessory is badly worn, please replace it with a new one. Disassembly and assembly may refer to the proper instructions in the manual.
	8.超过遥控距离。 It's beyond the remote control range.	8.请将车的遥控距离始终保持在有效范围内。 Maintain the remote control of the model within the effective range.

组 装 图 Assembly view

 
1 减震器的装配 Shock Absorber

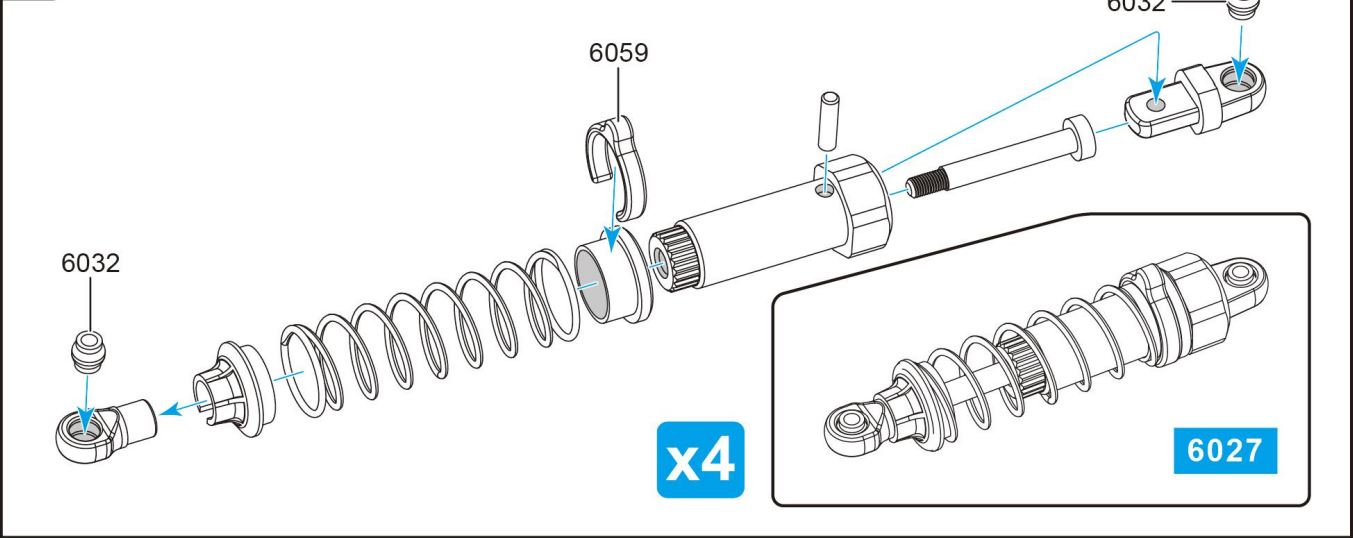

 
2 有刷减速器的装配 Brush diff. Complete [Fr./Rr.]

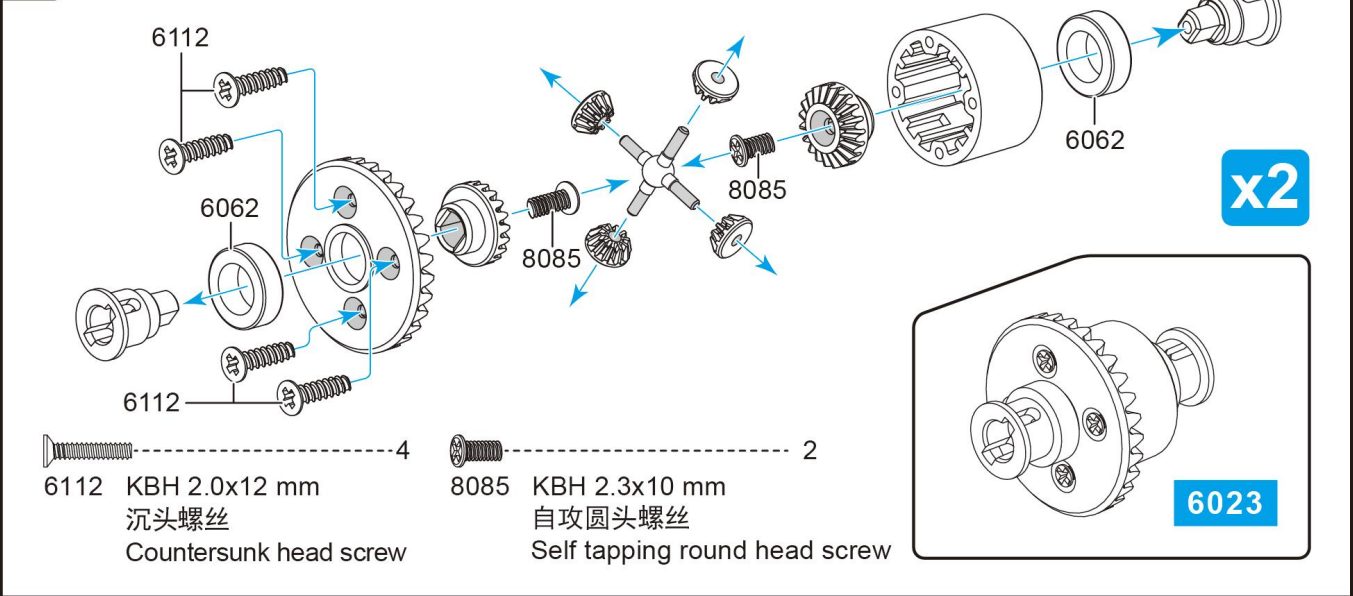

 
3 无刷差速器的装配 Brushless diff. Complete [Fr./Rr.]

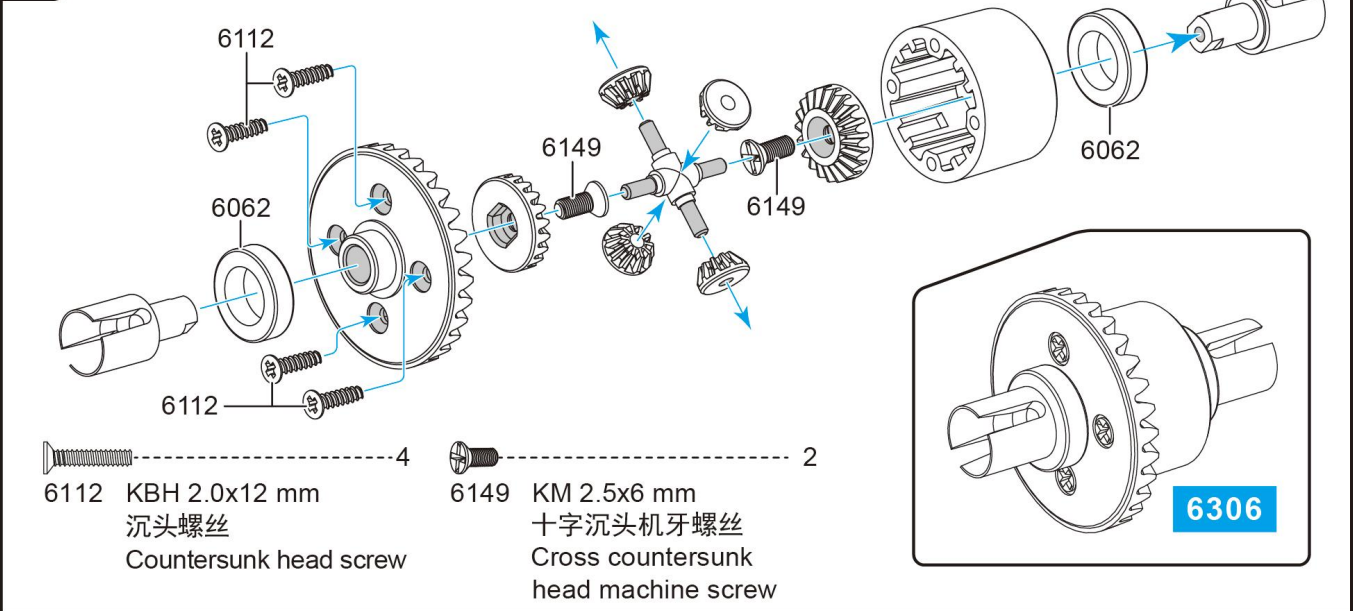

 
4 有刷中传动装置 Brush center drive shaft assembly

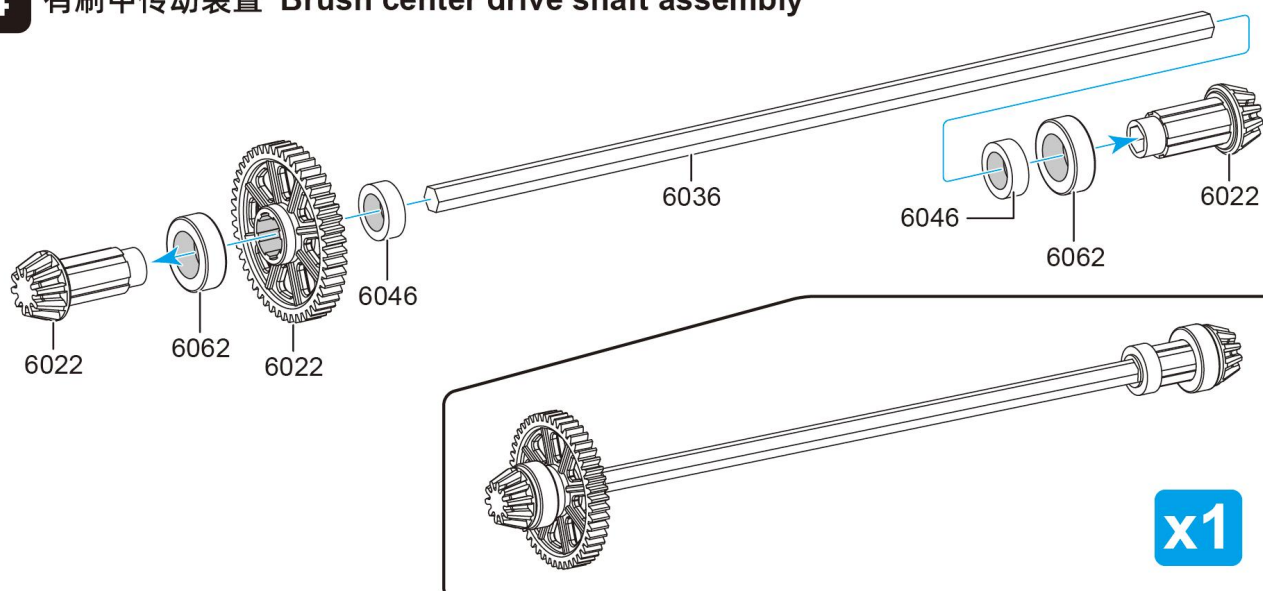


 
5 无刷中传动装置 Brushless center drive shaft assembly

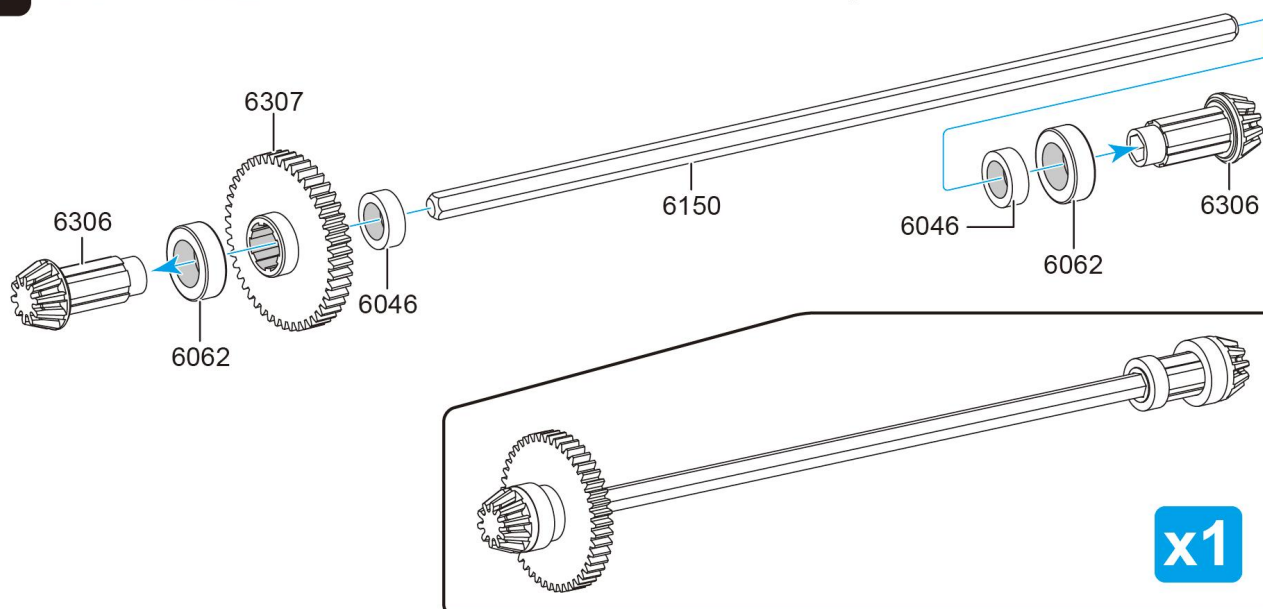

 6 五线舵机缓冲装置的装配 Five wire servo saver assembly




  6024 13.8X8.9-2.6x6 PW
台阶介子螺丝
Sidestep meson
screw

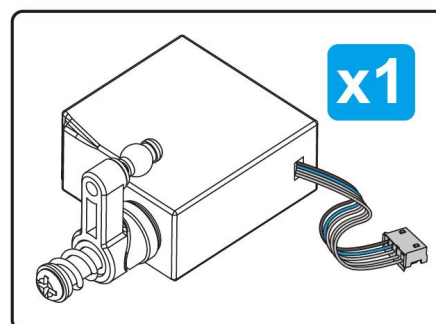


6111 PBH 2.0x10 mm
自攻圆头螺丝
Self tapping round head
screw

 7 三线舵机缓冲装置的装配 Three wire servo saver assembly

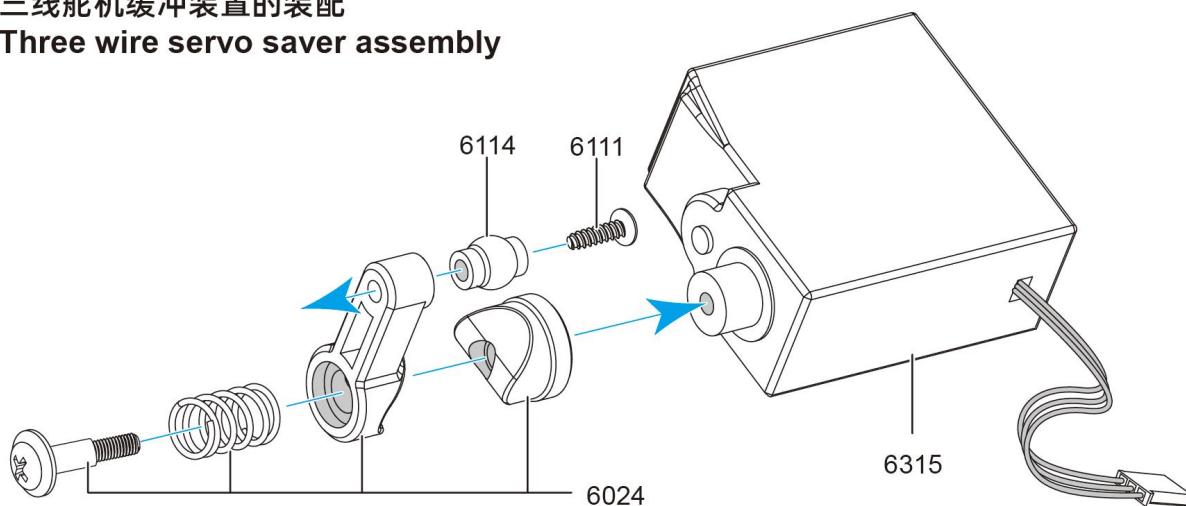


6024 13.8X8.9-2.6x6 PW
台阶介子螺丝
Sidestep meson screw

 
6111 PBH 2.0x10 mm
自攻圆头螺丝
Self tapping round head screw

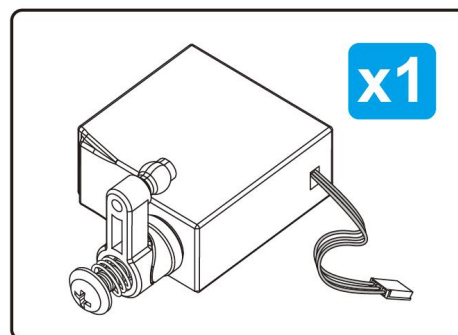


8 有刷马达的装配 Assembly of brush motor

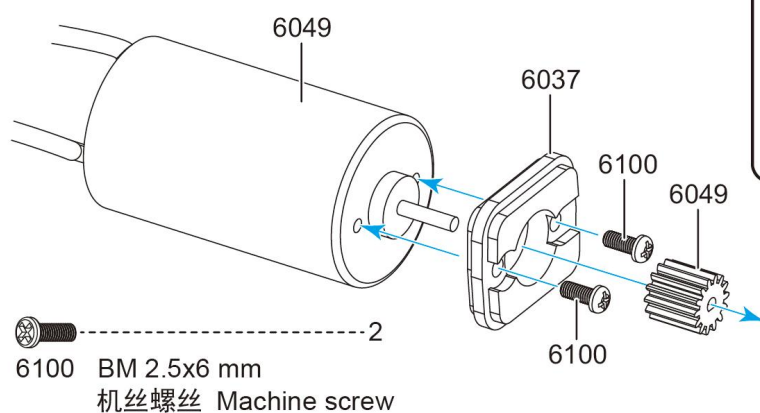 


6100 BM 2.5x6 mm
机丝螺丝 Machine screw

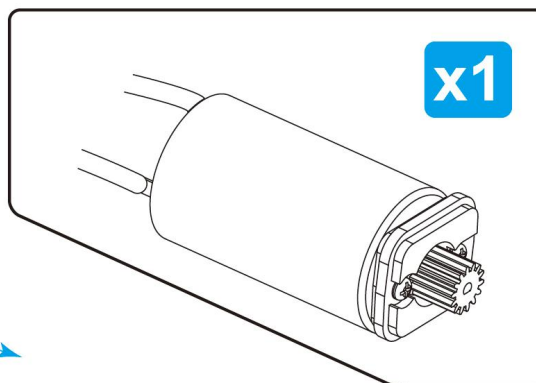 


9 无刷马达的装配 Assembly of Brushless Motor

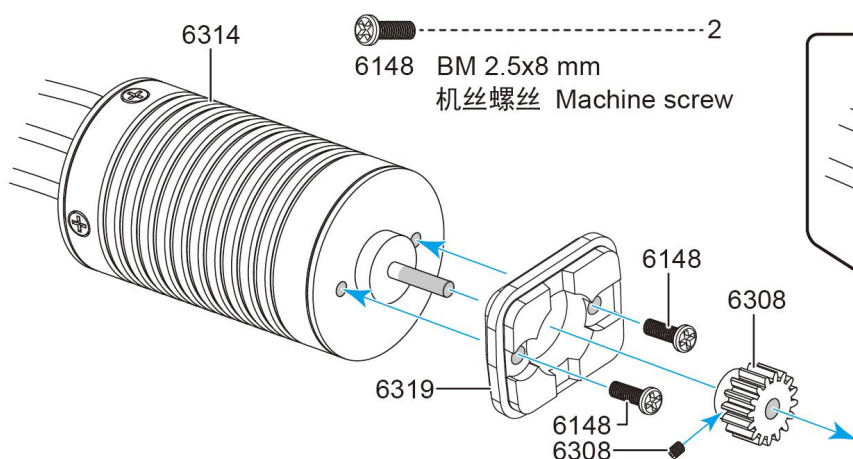 


6148 BM 2.5x8 mm
机丝螺丝 Machine screw

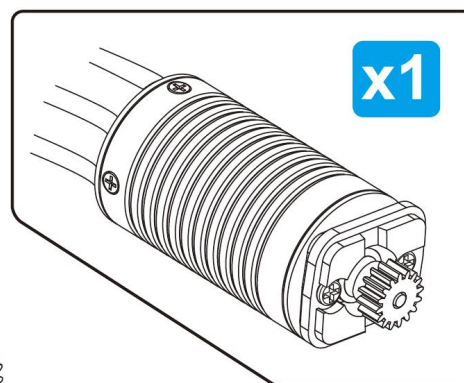 


10 有刷马达的装配 Assembly of brush motor

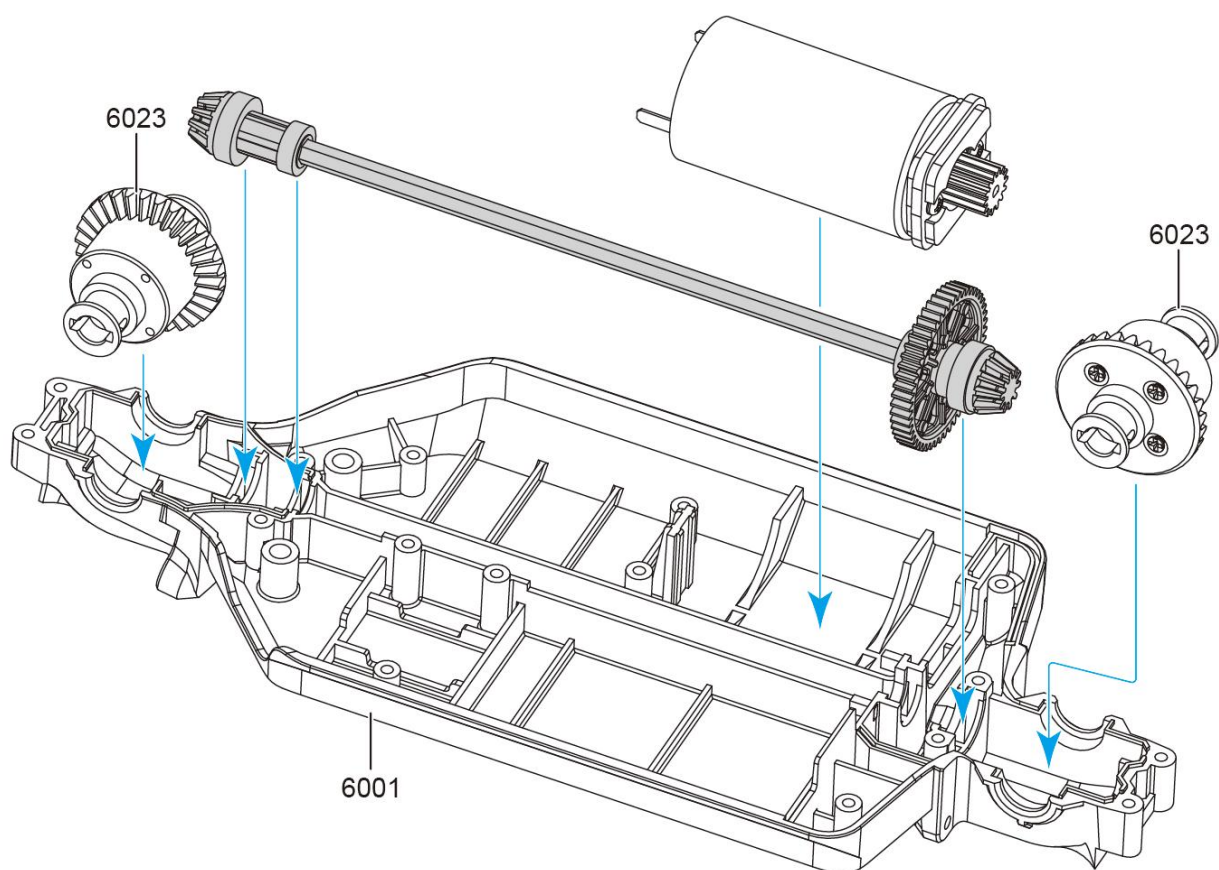 


11 无刷马达的装配 Assembly of brushless motor

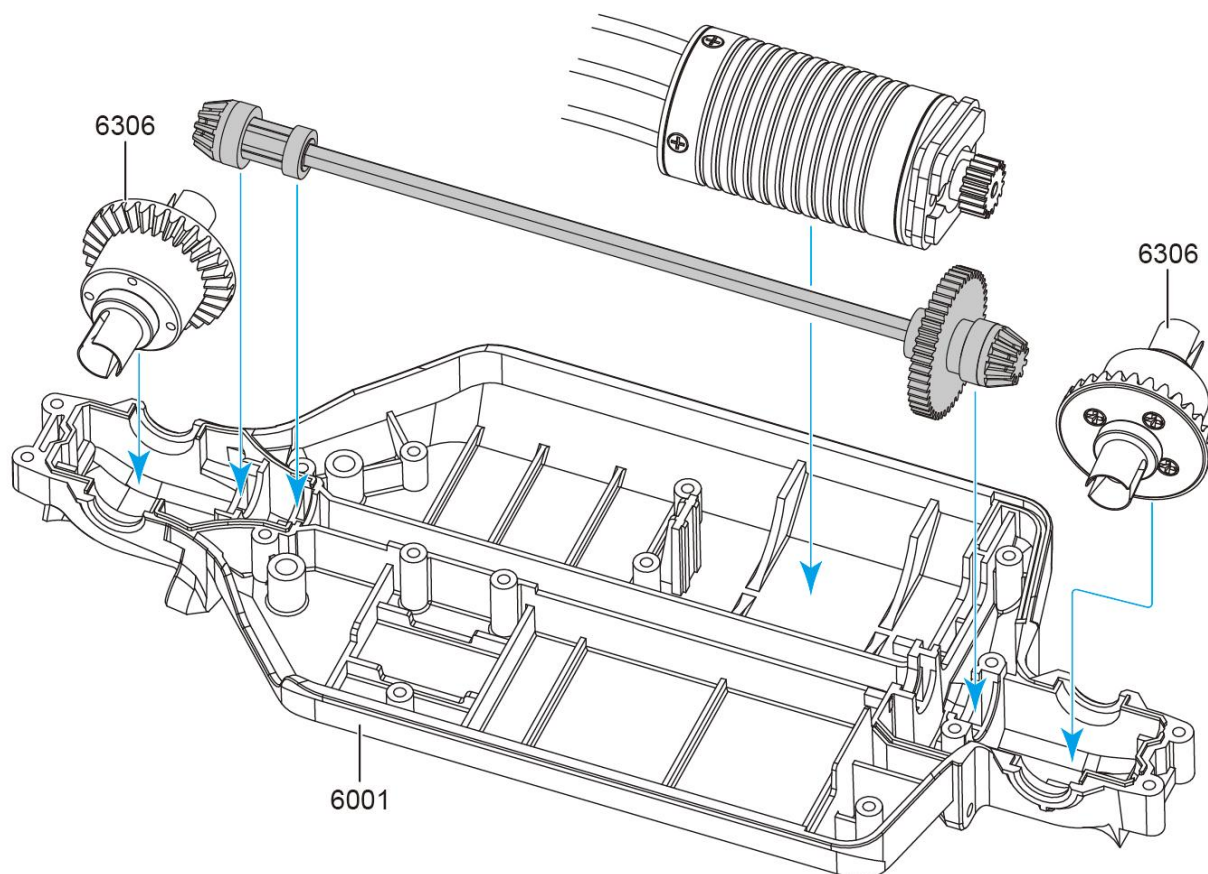 


12 波箱盖的装配 Gear box housing mount

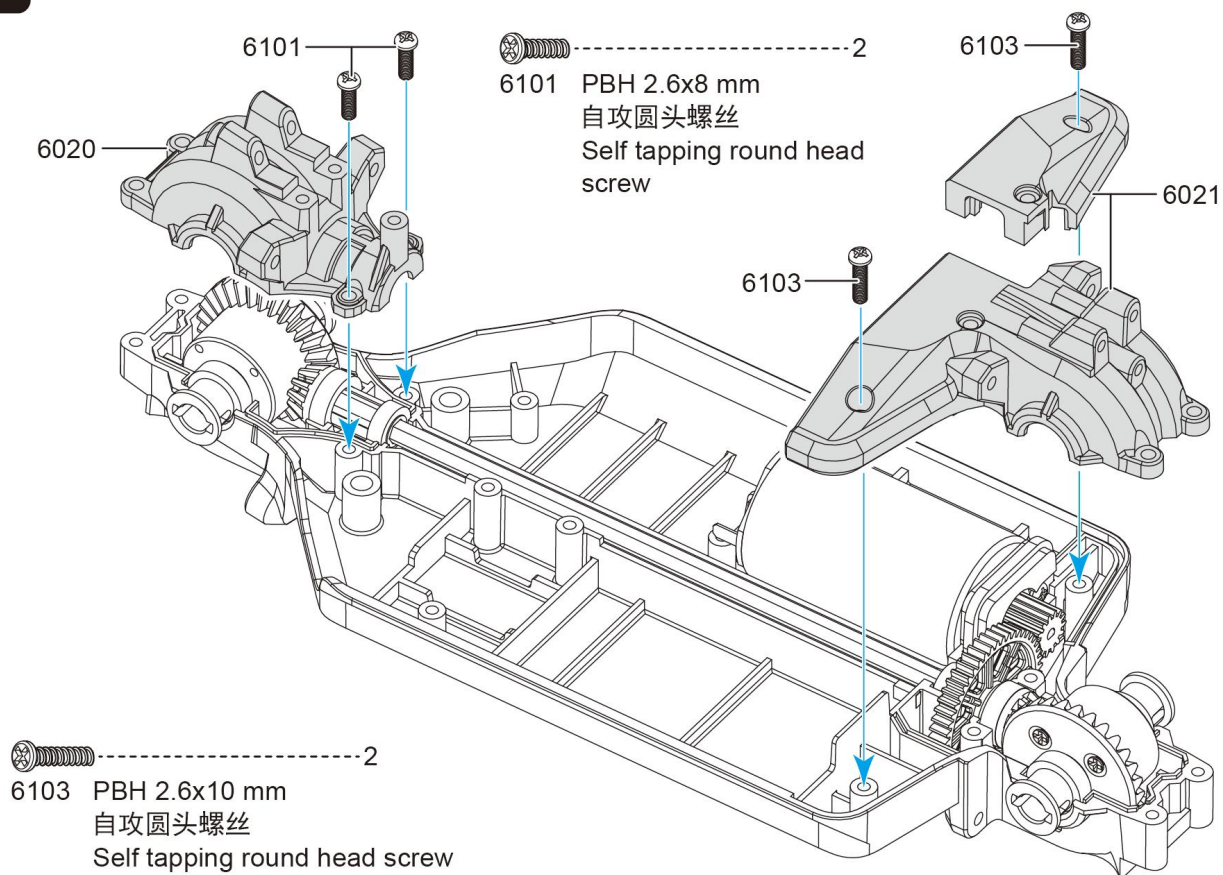 


13 安装转向装置 Steering assembly

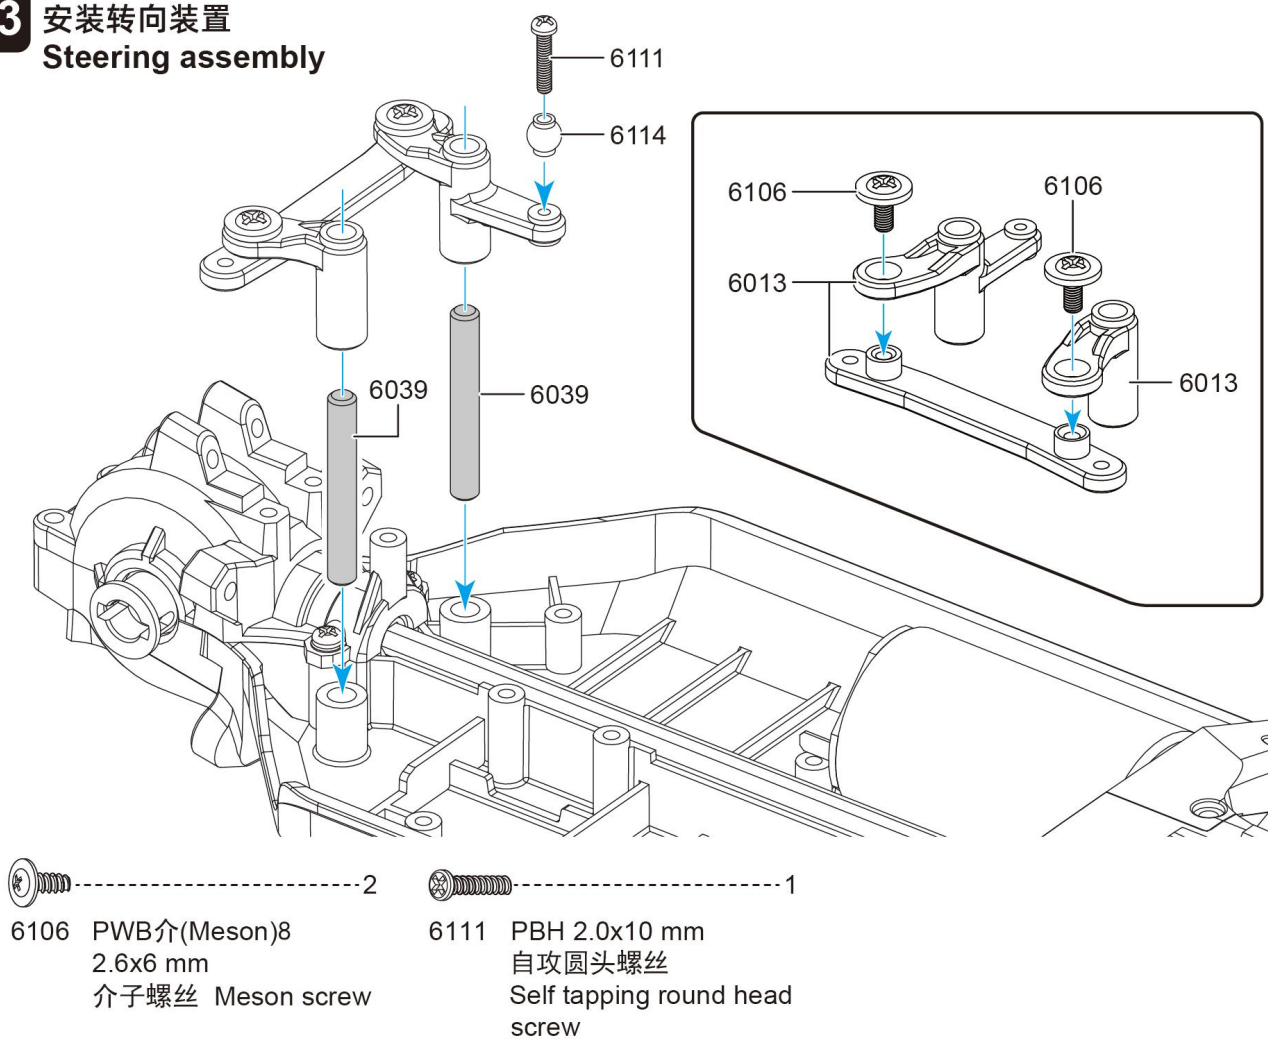 


14 舵机的装配 Receiver assembly

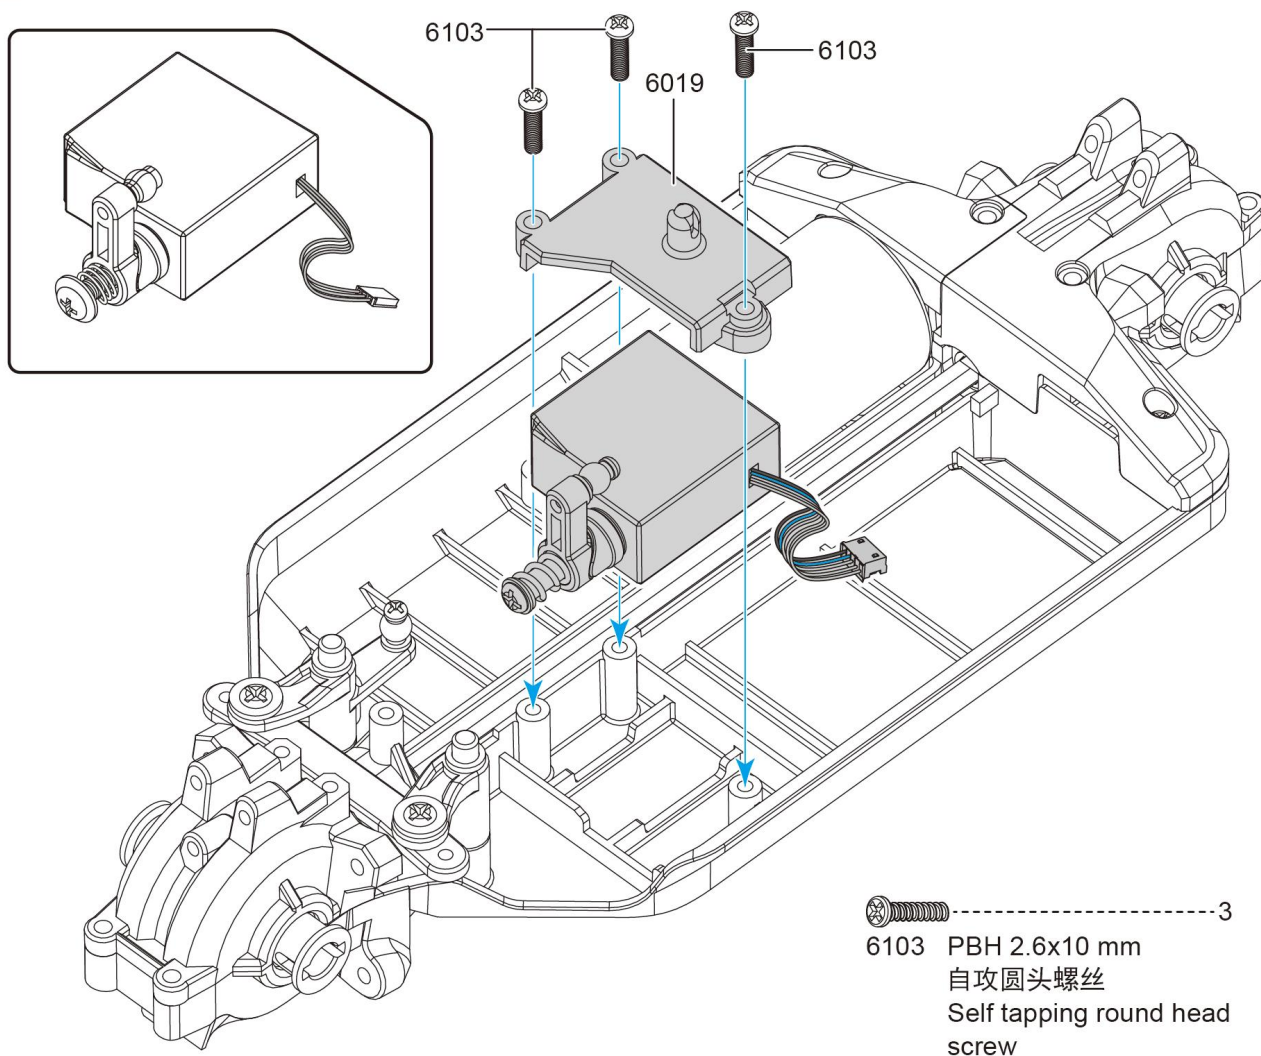 

 
15 安装转向连杆 Steering connecting rod assembly

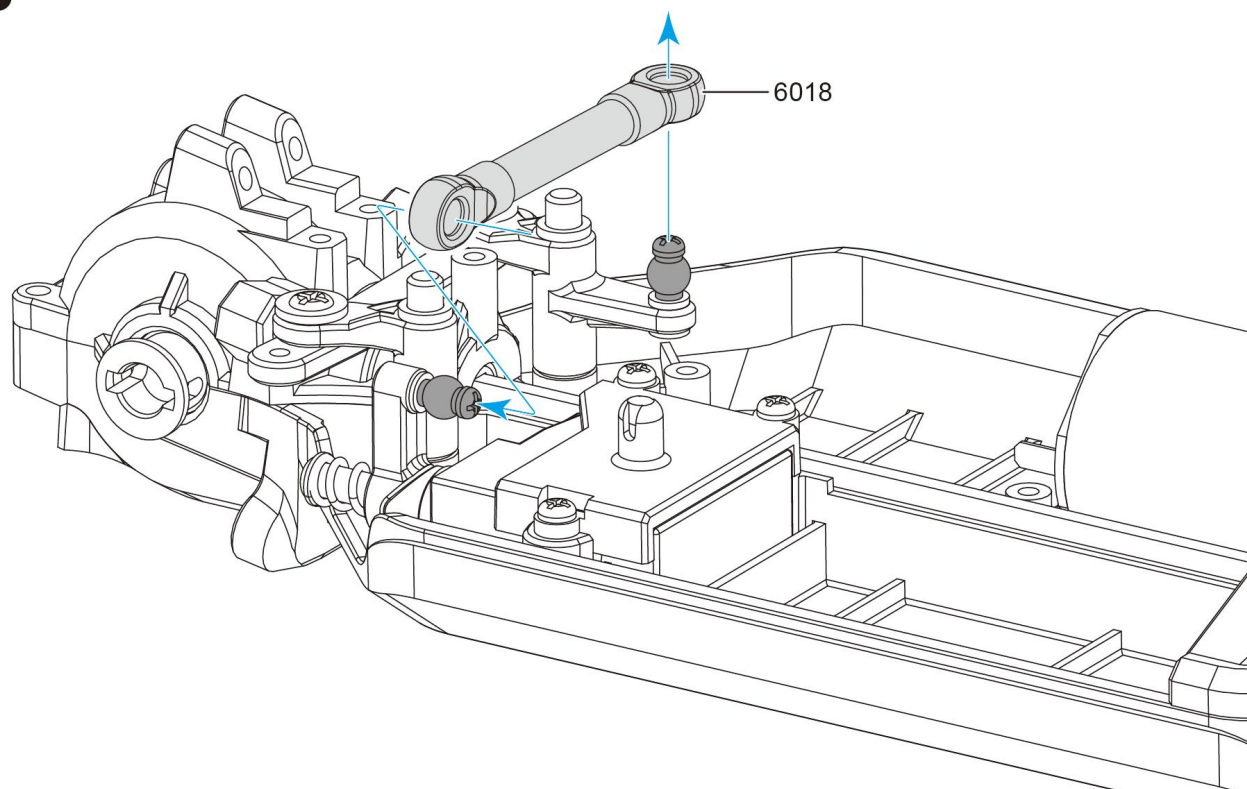

16 安装二楼板 Upper deck installation

 


 6101 PBH 2.6x8 mm
自攻圆头螺丝
Self tapping round head
screw

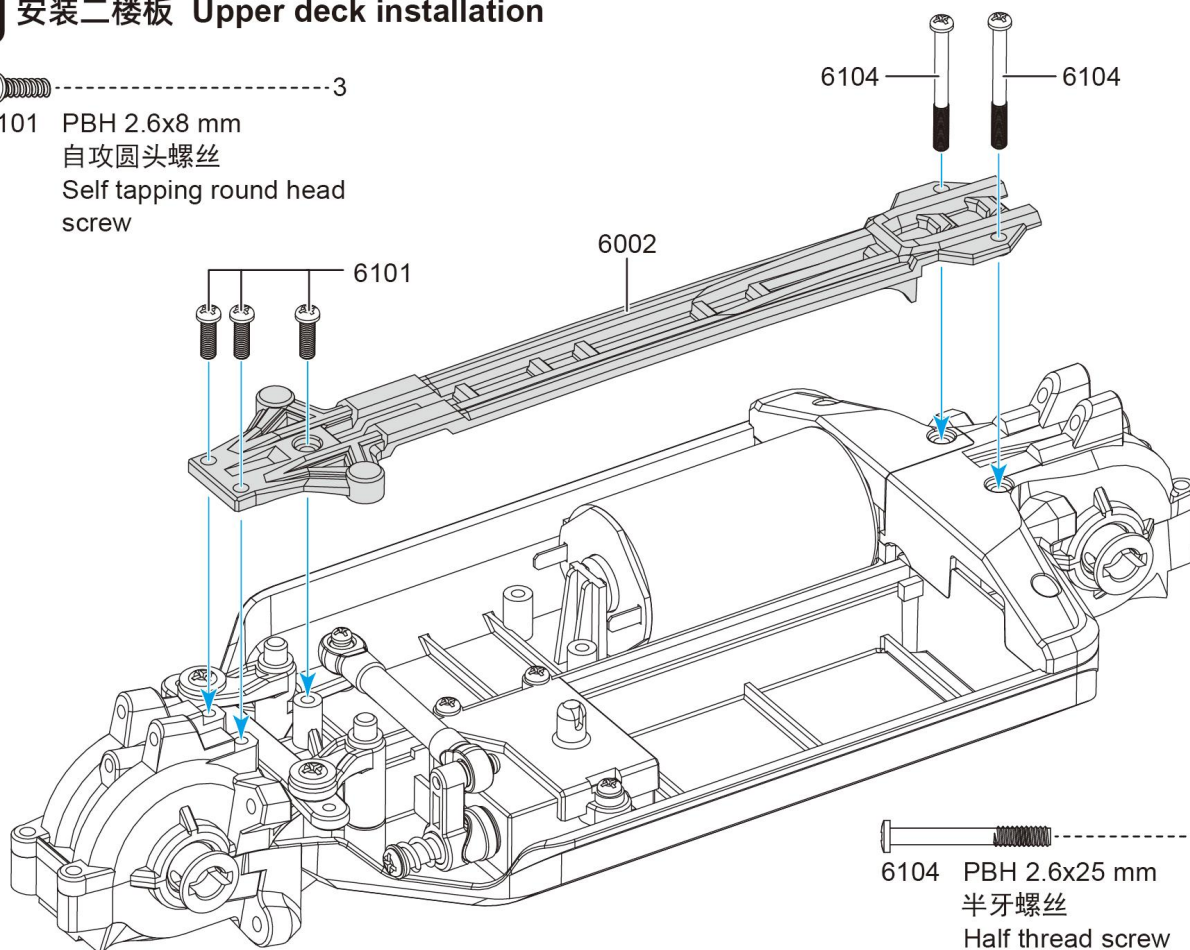


6104 PBH 2.6x25 mm
半牙螺丝
Half thread screw

 17 安装电调 ESC / Receiver installation



 6101 PBH 2.6x8 mm
自攻圆头螺丝
Self tapping round
head screw

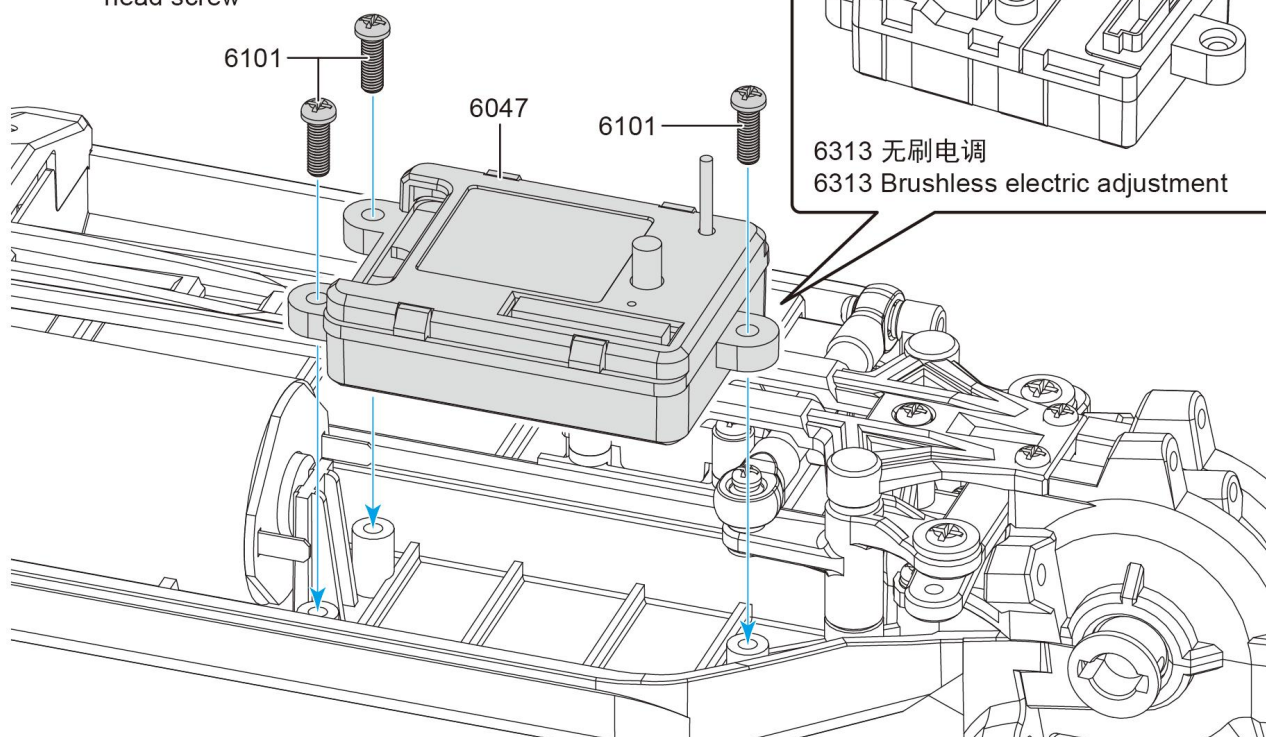

6313 无刷电调
6313 Brushless electric adjustment

18 前减震支架的装配 Front shock tower installation

 
- -----3
 6103 PBH 2.6x10 mm
 自攻圆头螺丝
 Self tapping round head screw

6103

6003

No.16101/16102/
16103/16104/16106

19 前车悬挂的装配1 Front suspension assembly 1

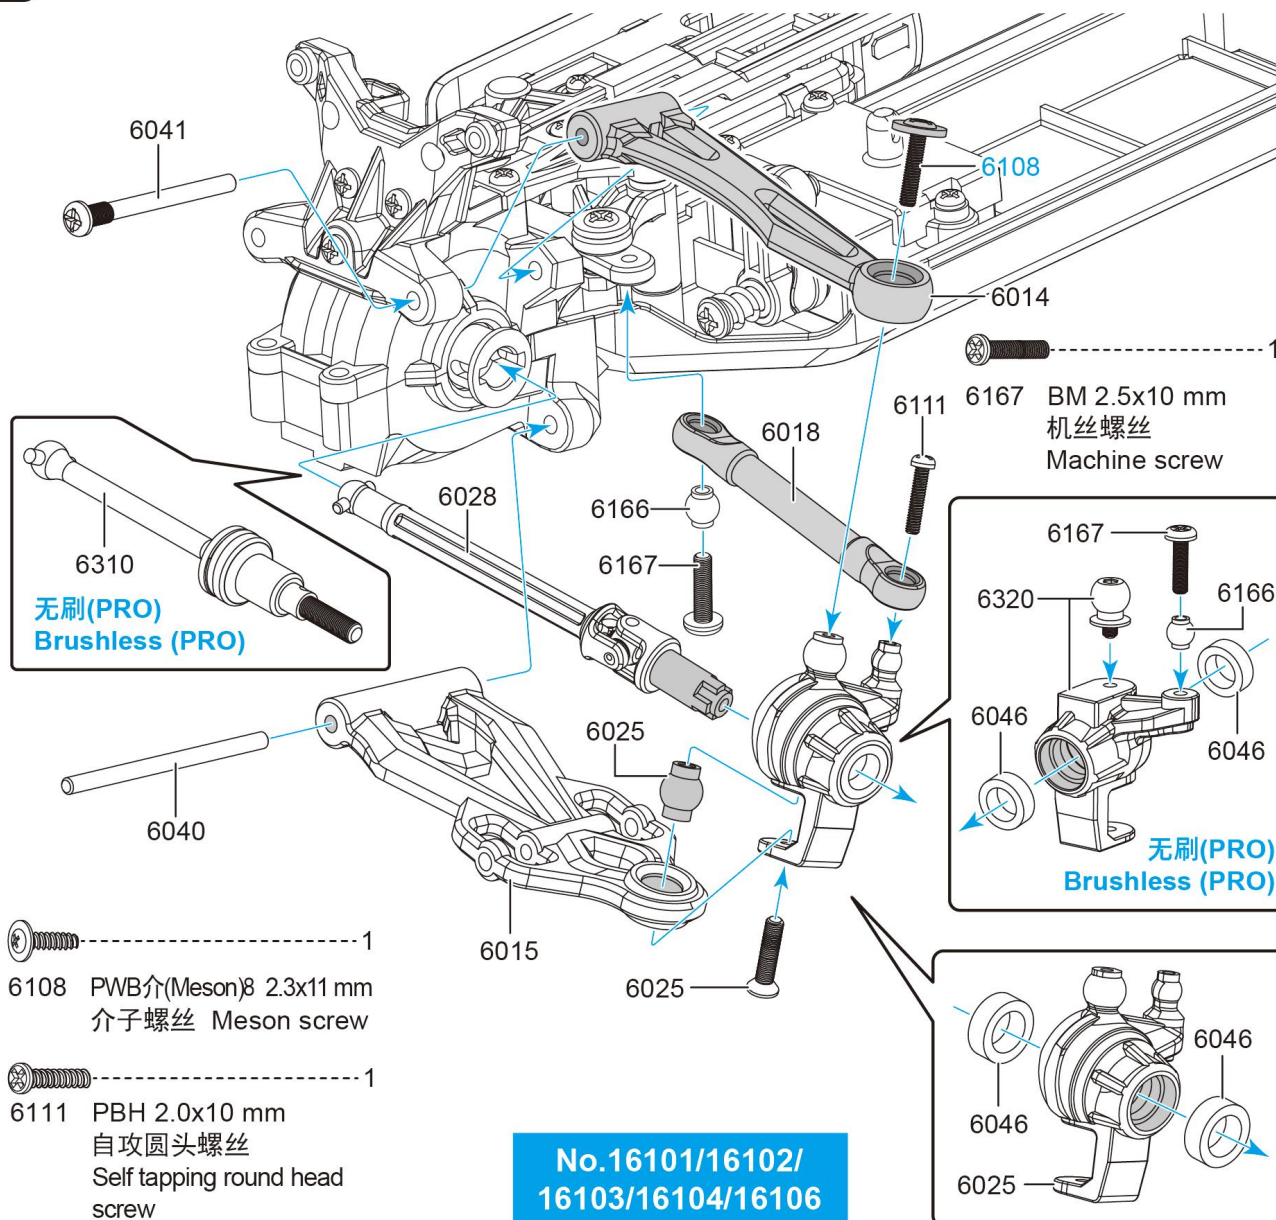


19

前车悬挂的装配2

Front suspension assembly 2

 
**No.16101/16102/
16103/16104/16106**

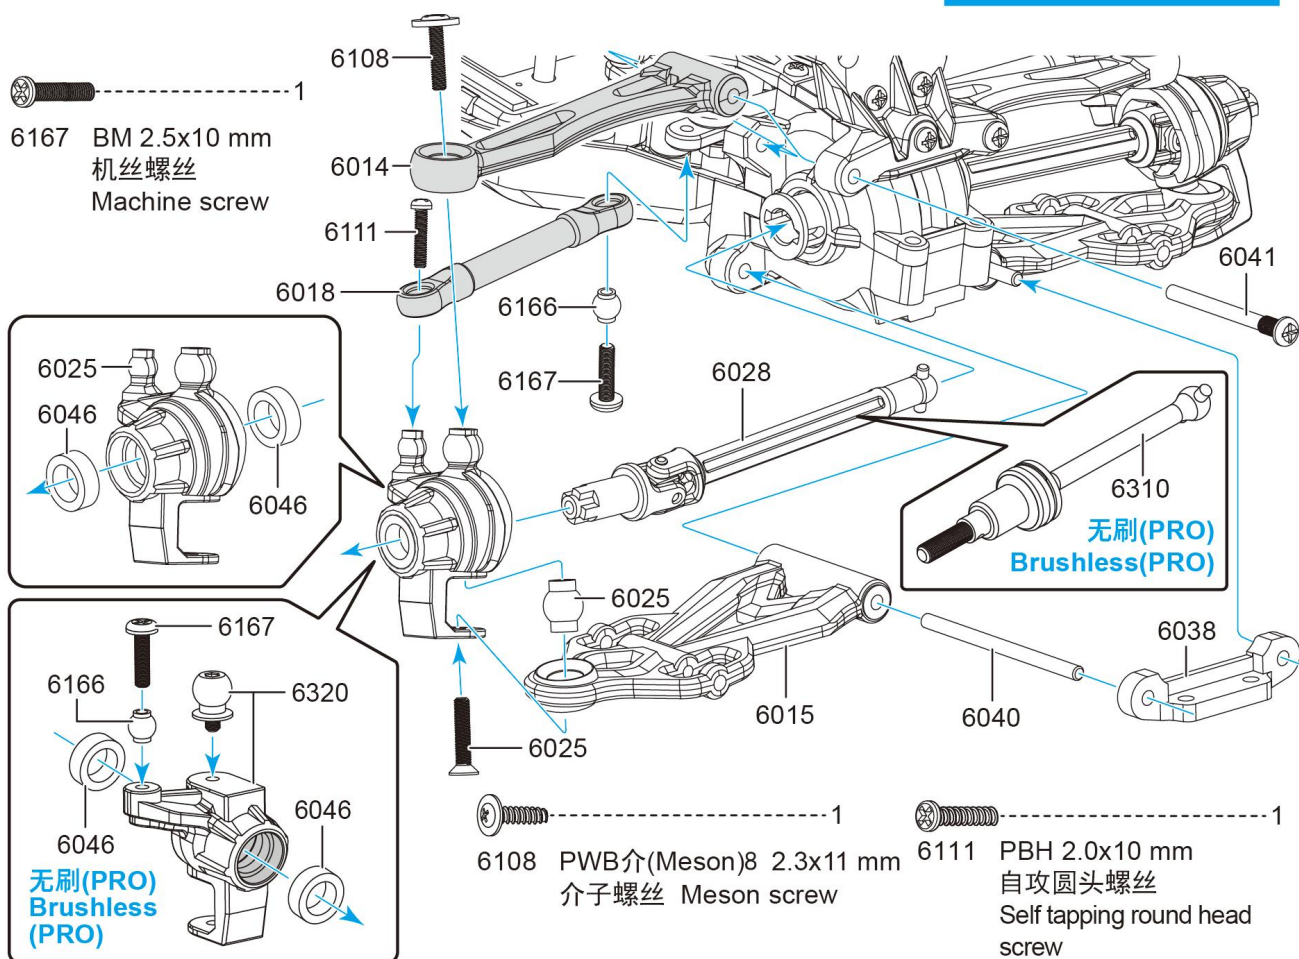


20

安装前减震器 Front suspension assembly

 **No.16101/16102/
16103/16104/16106**

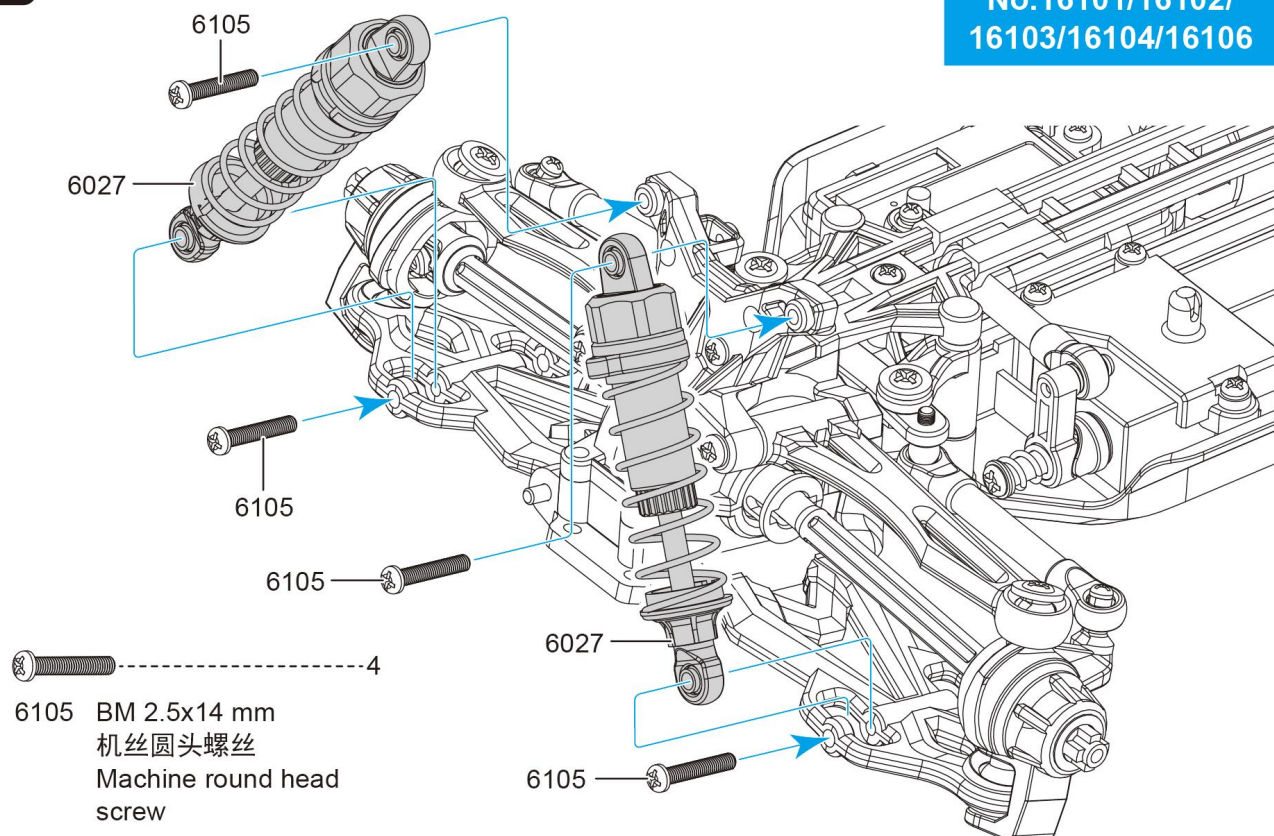

 
21 前防撞组件的装配 Front bumper assembly installation

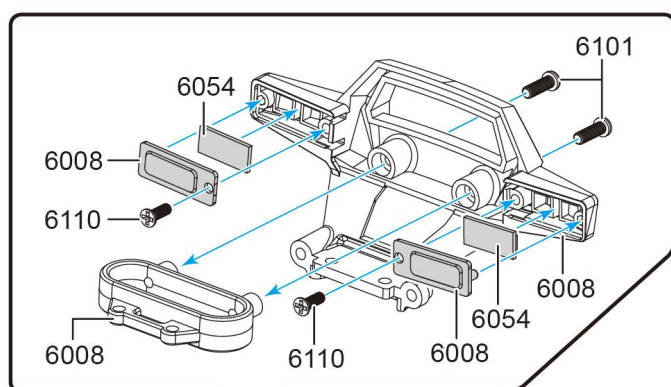


6110 KBH 2.3x7 mm
自攻沉头螺丝
Self tapping countersunk
head screw

6103 PBH 2.6x10 mm
自攻圆头螺丝
Self tapping round head
screw

 
6101 PBH 2.6x8 mm
自攻圆头螺丝
Self tapping round head
screw

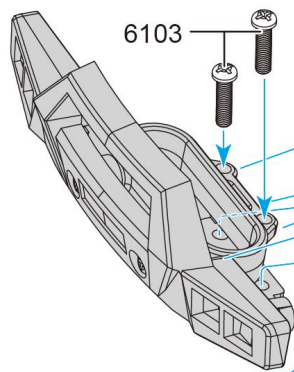

No.16101/16102

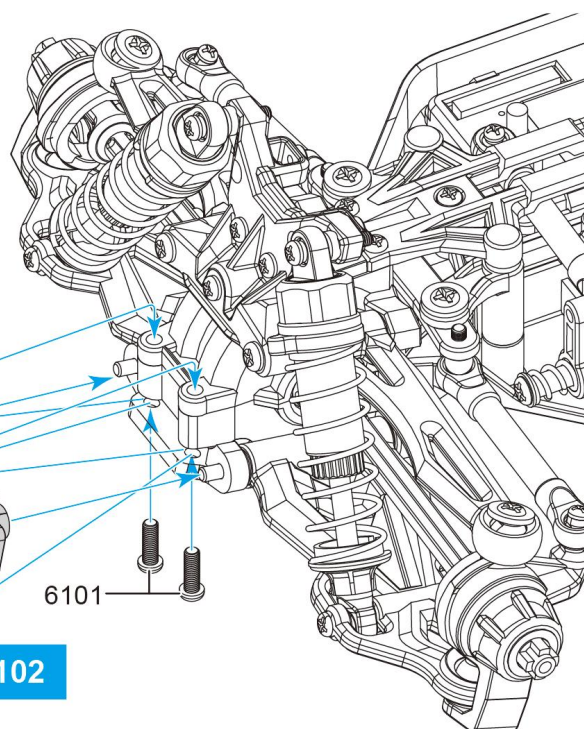 


 22 前防撞组件的装配 Front bumper assembly installation

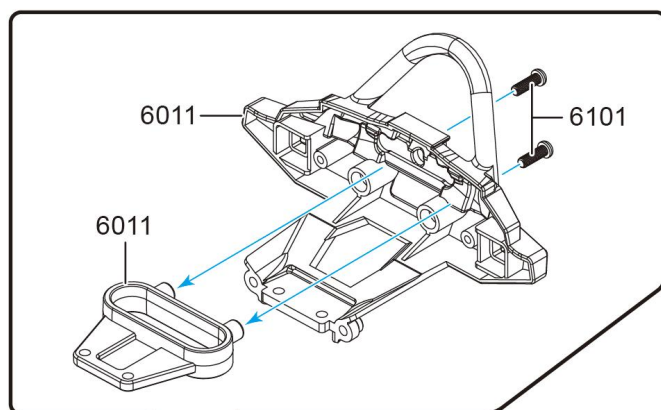


6103 PBH 2.6x10 mm
自攻圆头螺丝
Self tapping round head
screw

 
6101 PBH 2.6x8 mm
自攻圆头螺丝
Self tapping round head
screw

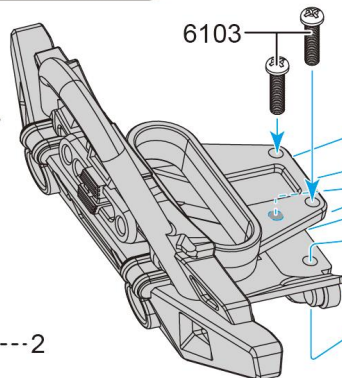

No.16103

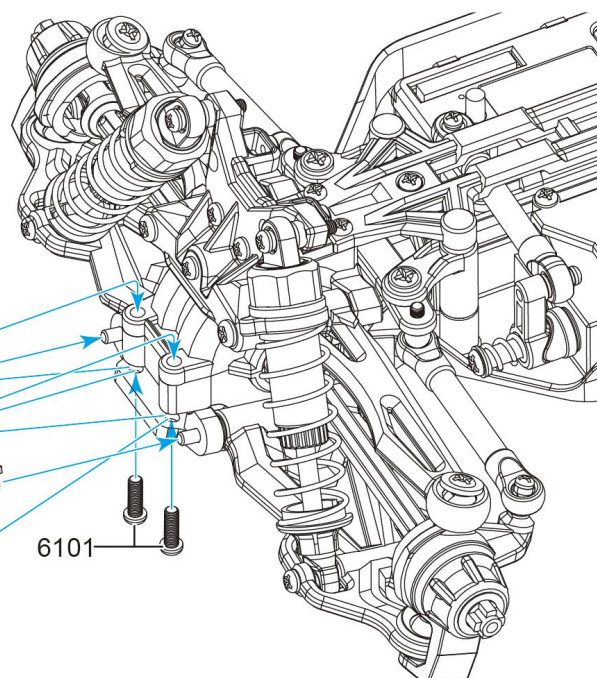 

 
23 前防撞组件的装配 Front bumper assembly installation

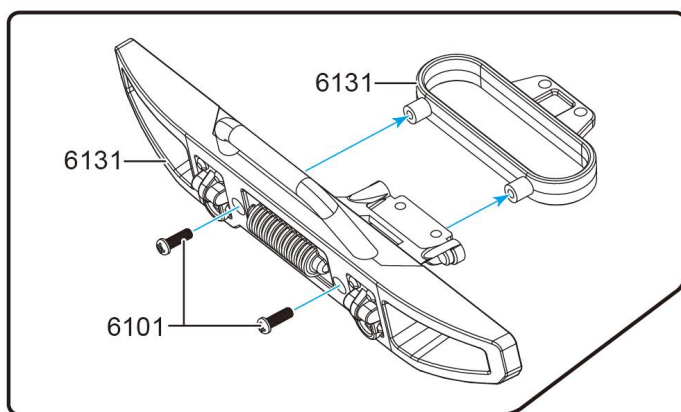


- 4
6101 PBH 2.6x8 mm
自攻圆头螺丝
Self tapping round head screw

No.16104

 - 2
6103 PBH 2.6x10 mm
自攻圆头螺丝
Self tapping round head screw

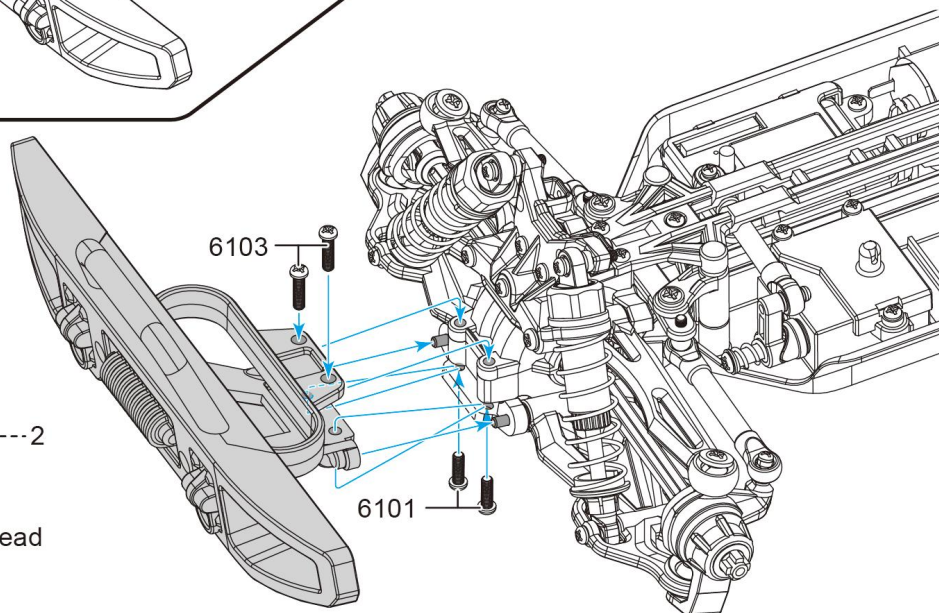

 
24 前防撞组件的装配 Front bumper assembly installation

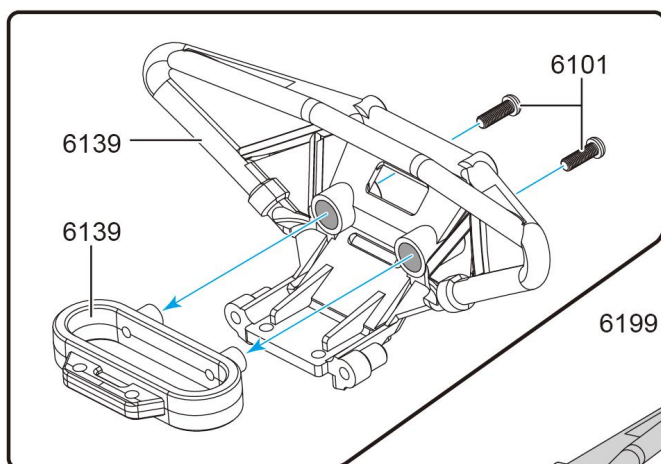

- 4
6101 PBH 2.6x8 mm
自攻圆头螺丝
Self tapping round head screw

No.16106

 
- 2
6199 PBH 2.6x12 mm
自攻圆头螺丝
Self tapping round head screw

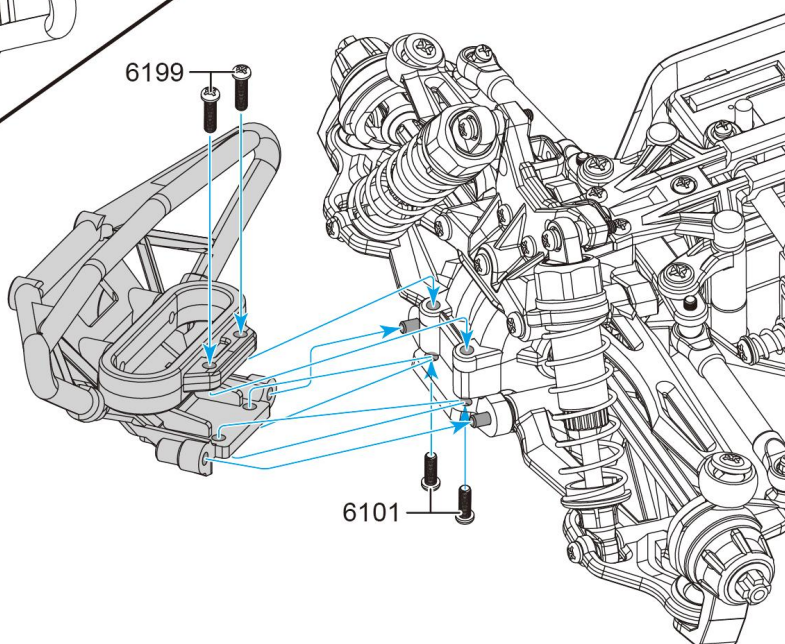

25 前减震支架的装配 Front shock tower installation


6103 PBH 2.6x10 mm

 自攻圆头螺丝
Self tapping round head
screw

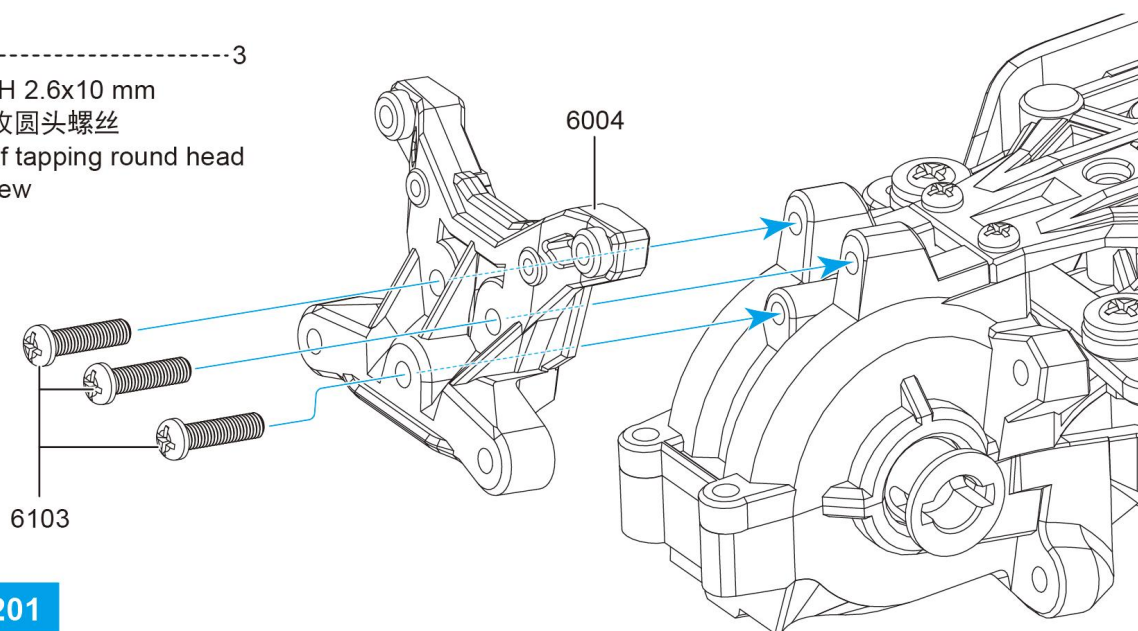

No.16201

 26 前车悬挂的装配1 Front suspension assembly 1



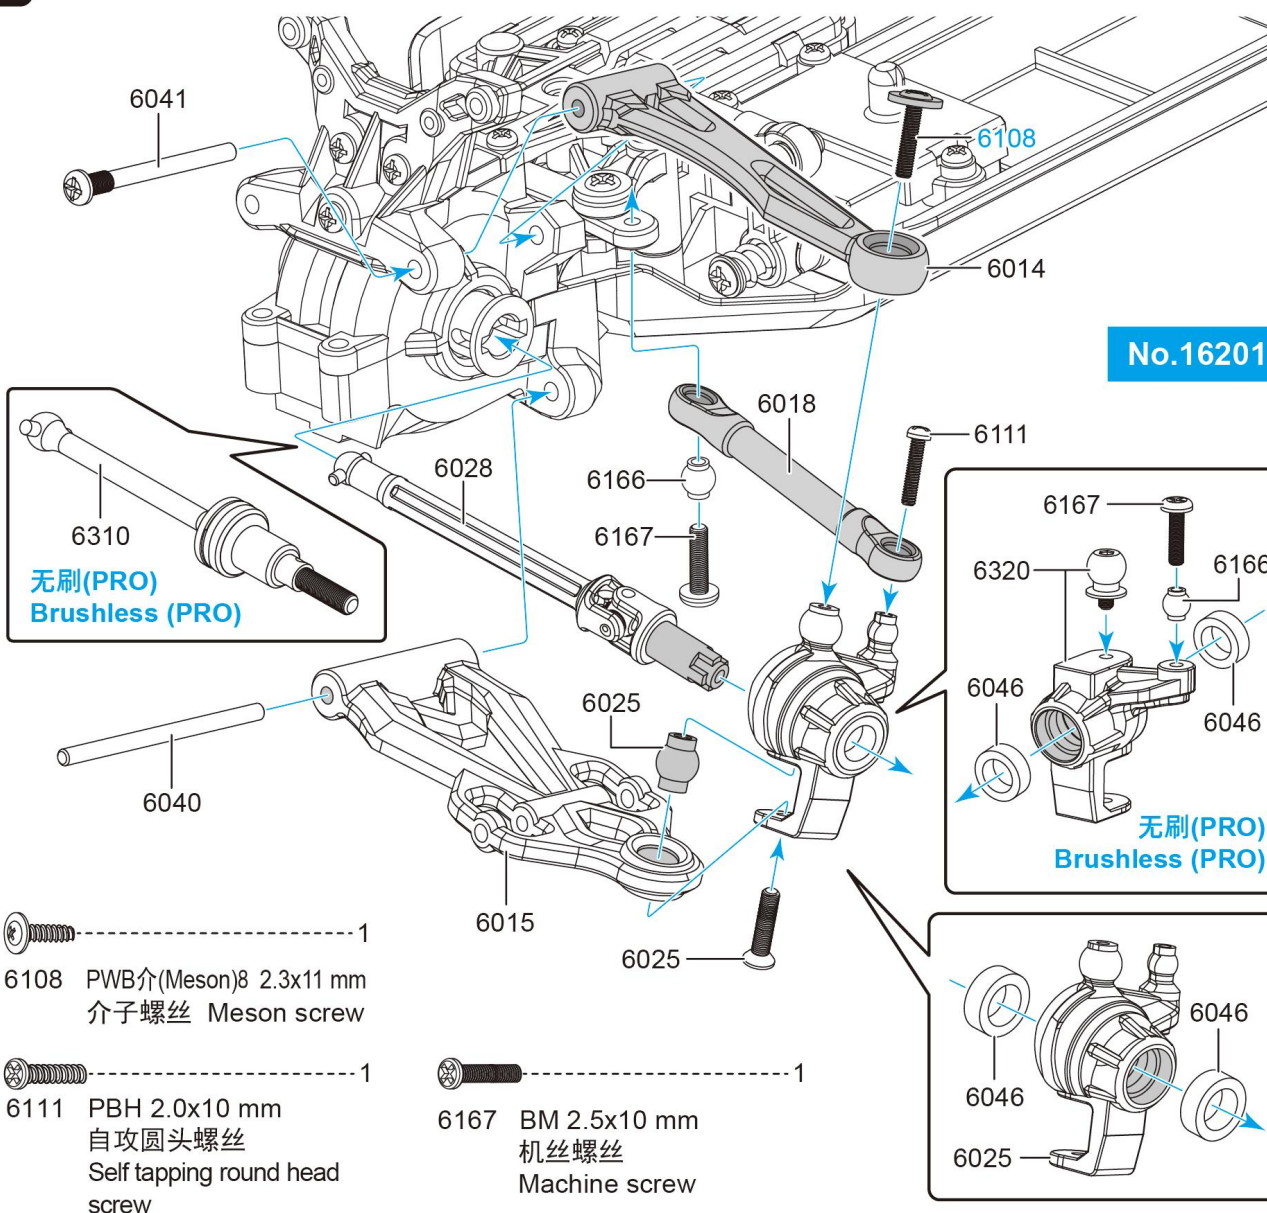


26 前车悬挂的装配2 Front suspension assembly 2

No.16201


6167 BM 2.5x10 mm

   机丝螺丝
Machine screw

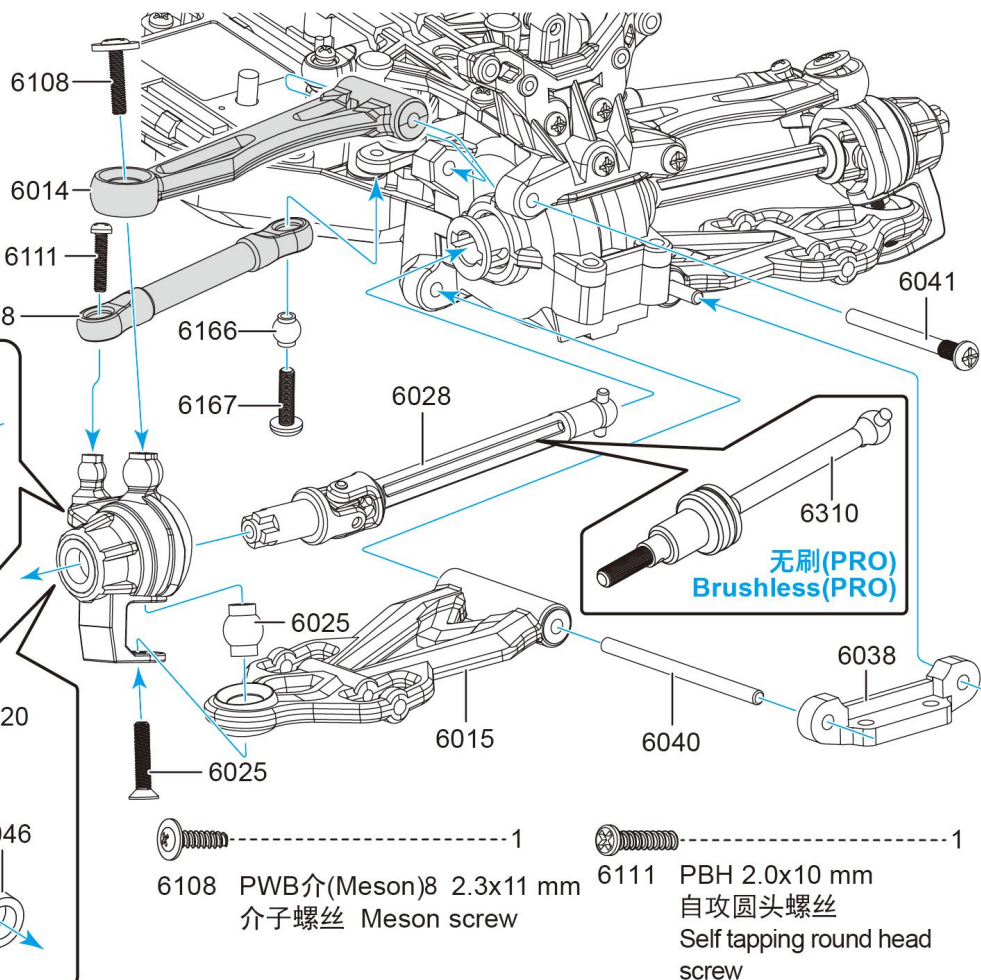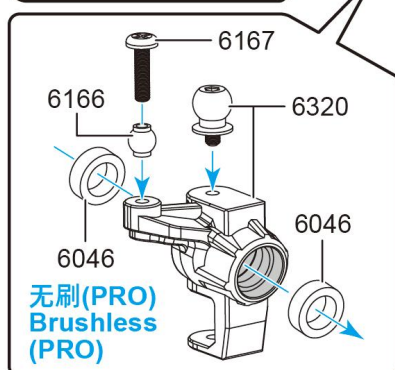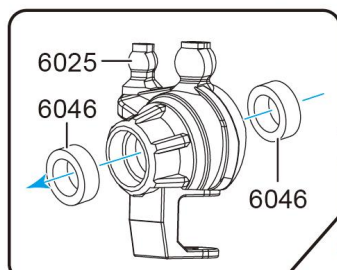


27 安装前减震器 Front suspension assembly

 No.16201

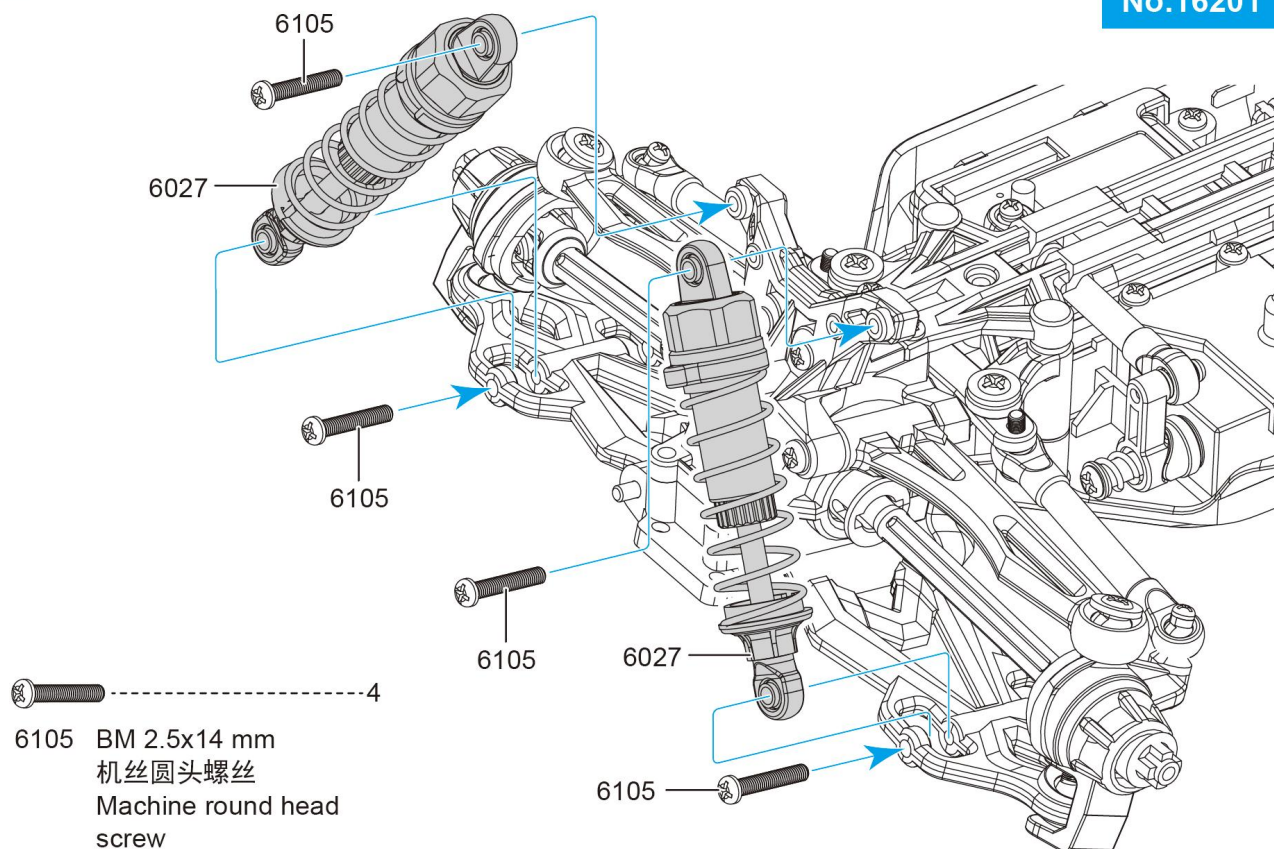


28 前防撞组件的装配 Front bumper assembly installation

 
No.16201

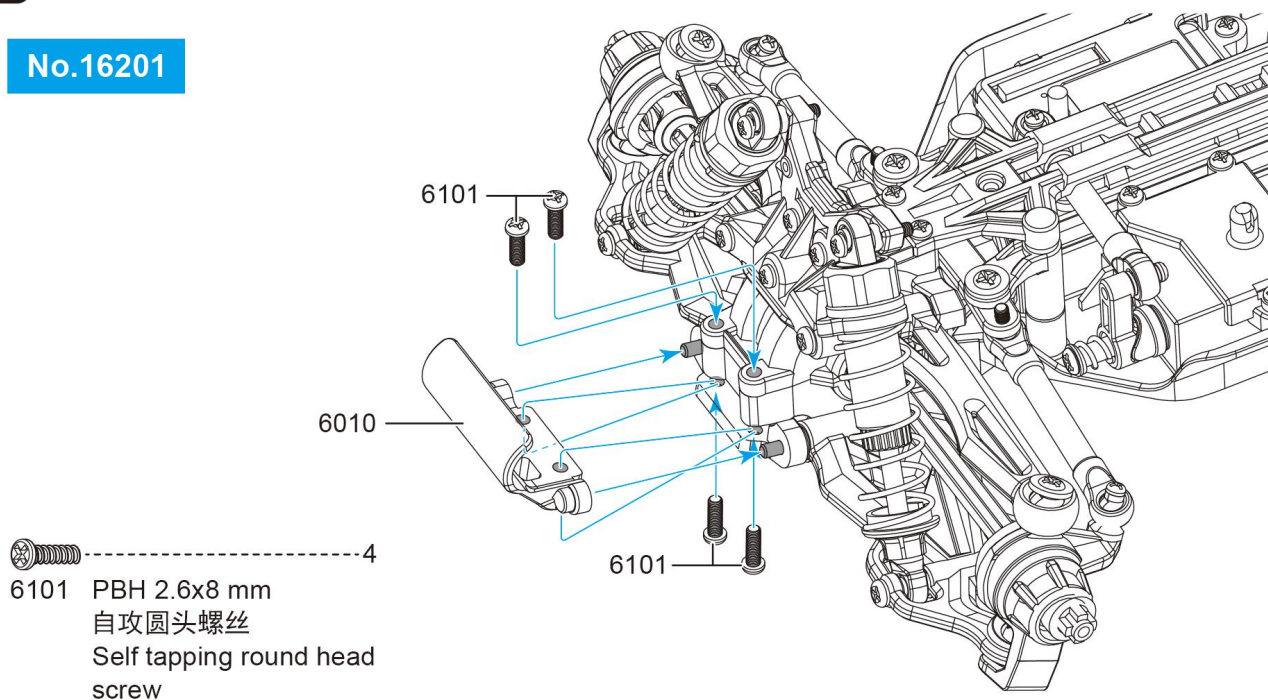


29 后车悬挂的装配1 Rear suspension assembly 1

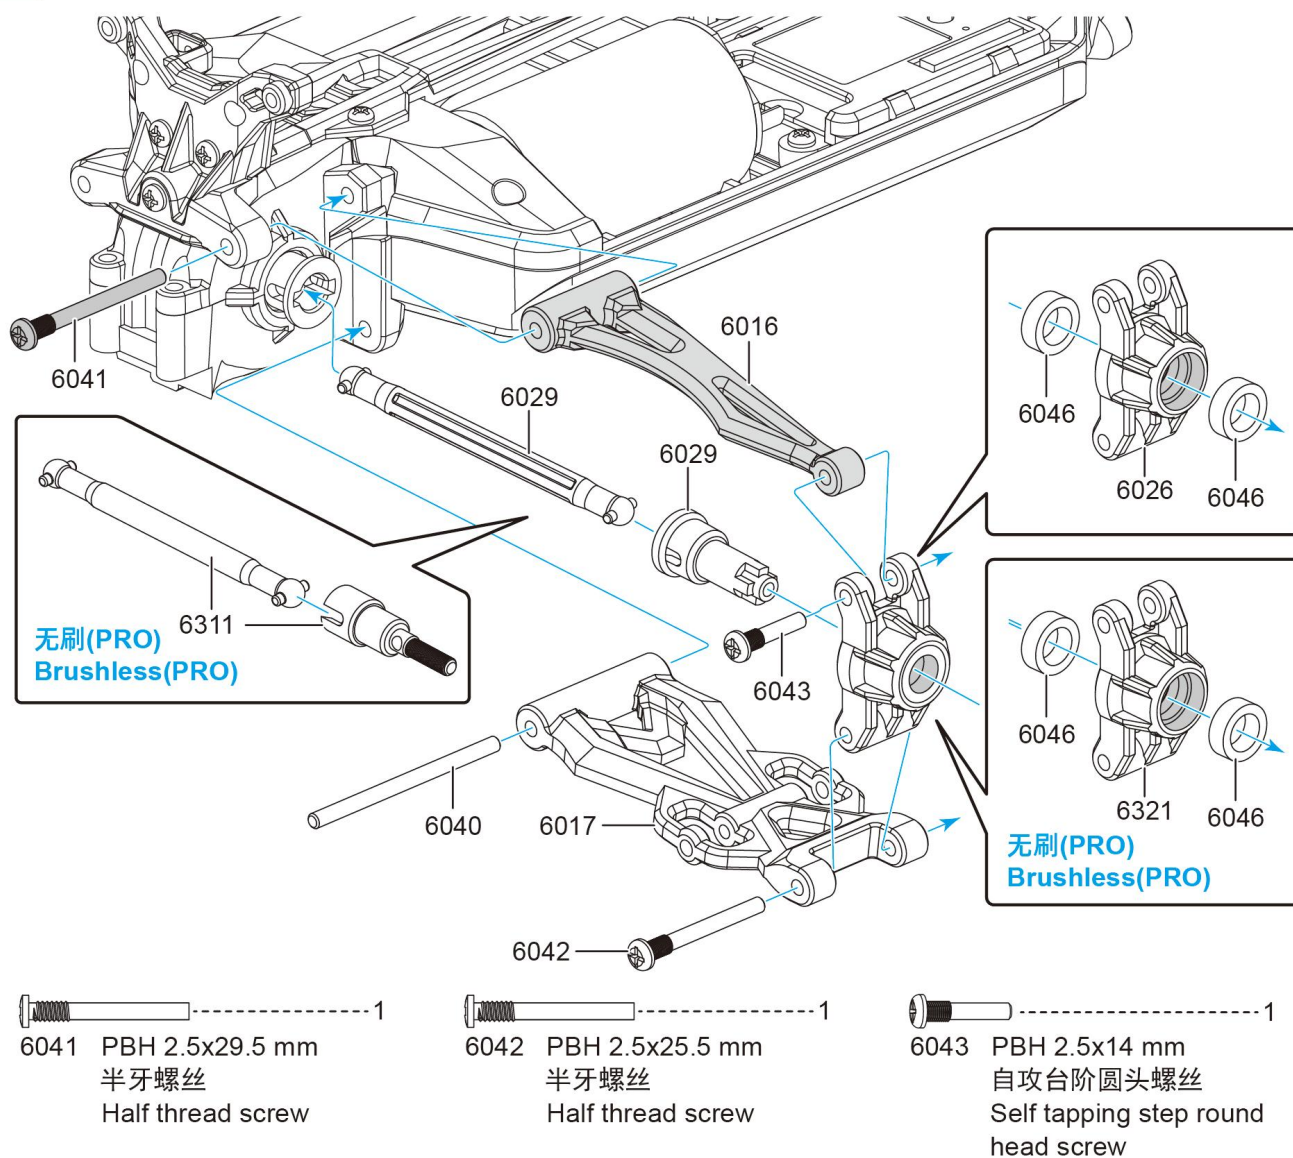 


29 后车悬挂的装配2 Rear suspension assembly 2

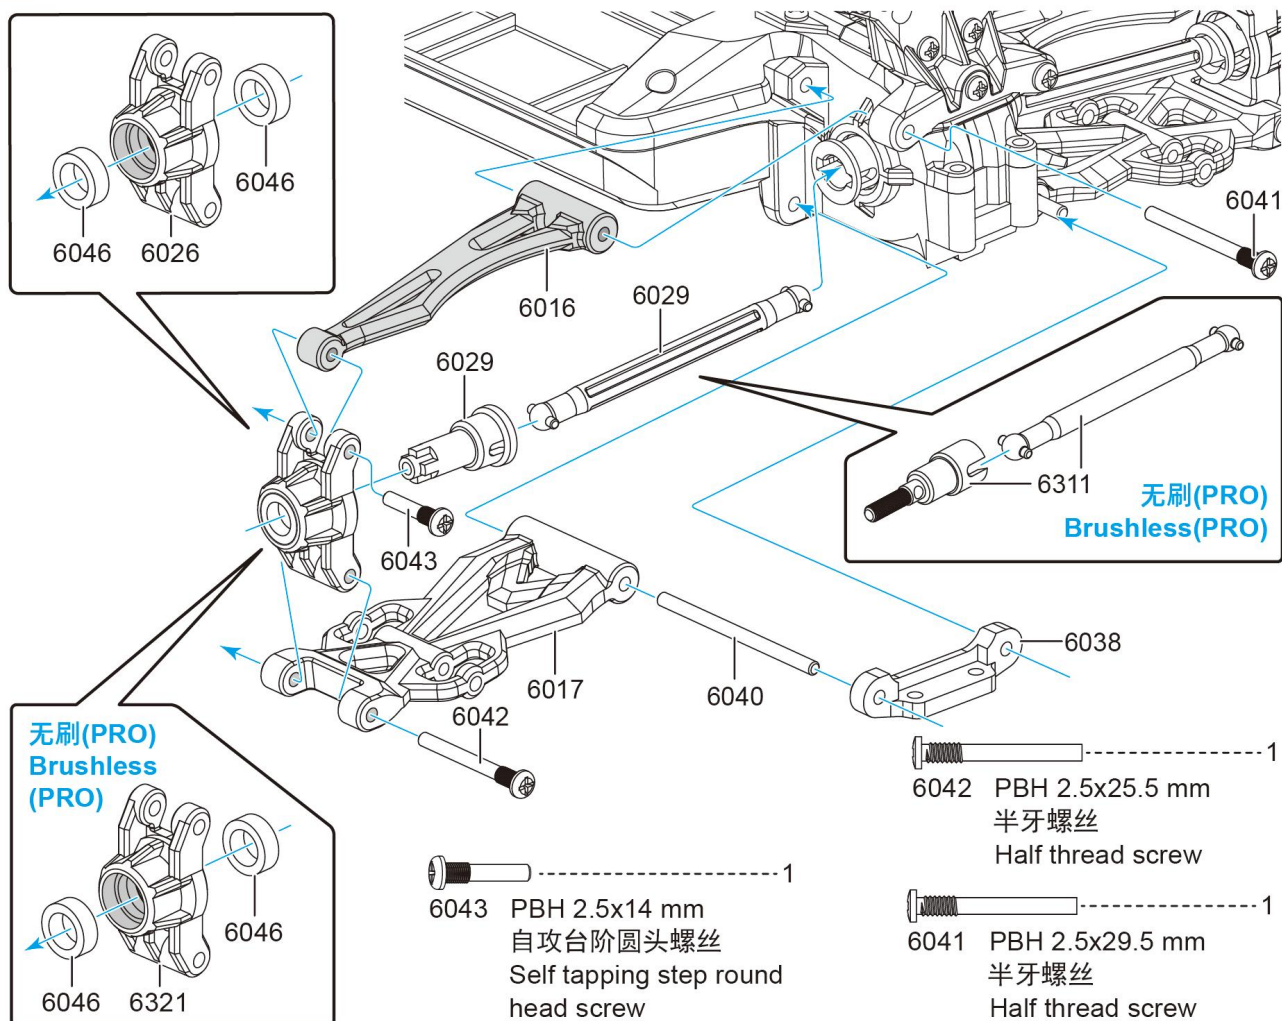 


30 后防撞组件 Rear anti-collision assembly

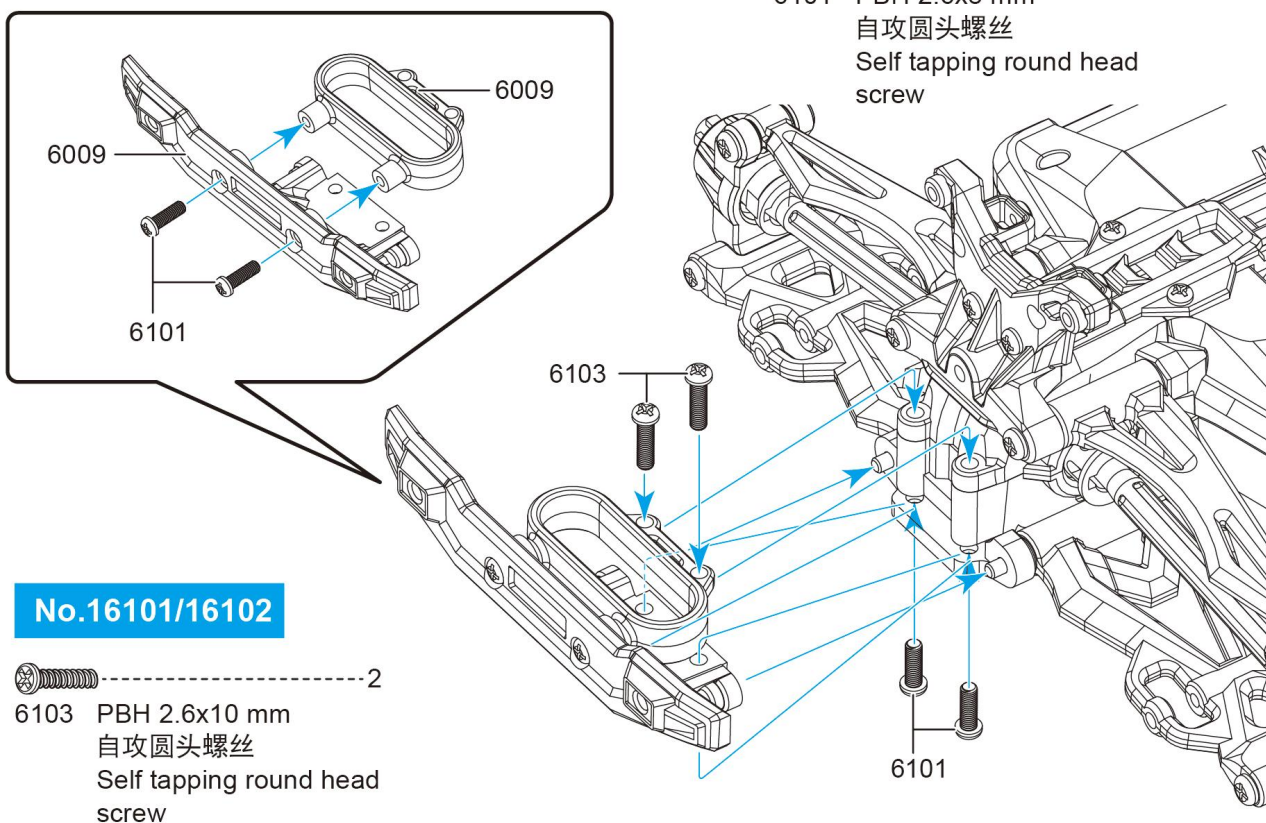 


31 安装后减震器 Rear shock assembly

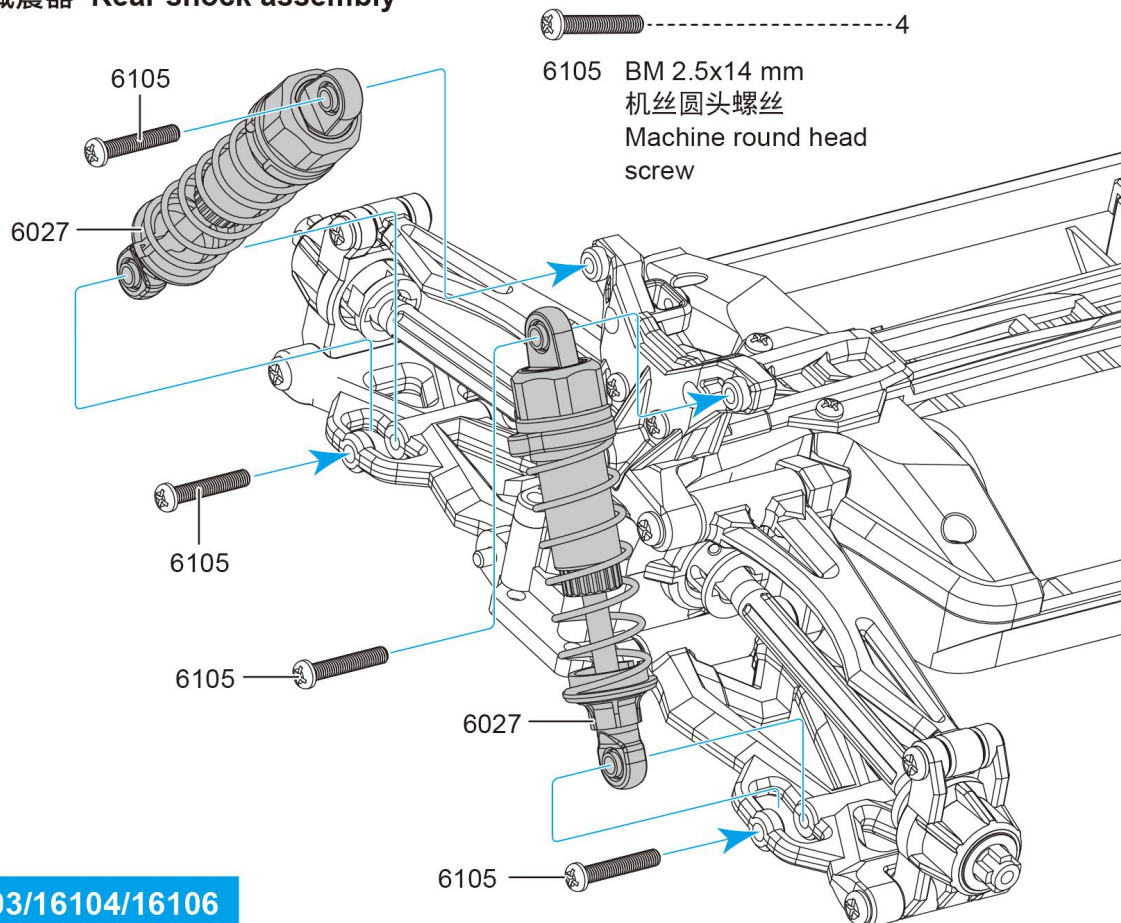 

32 后防撞组件 Rear anti-collision assembly

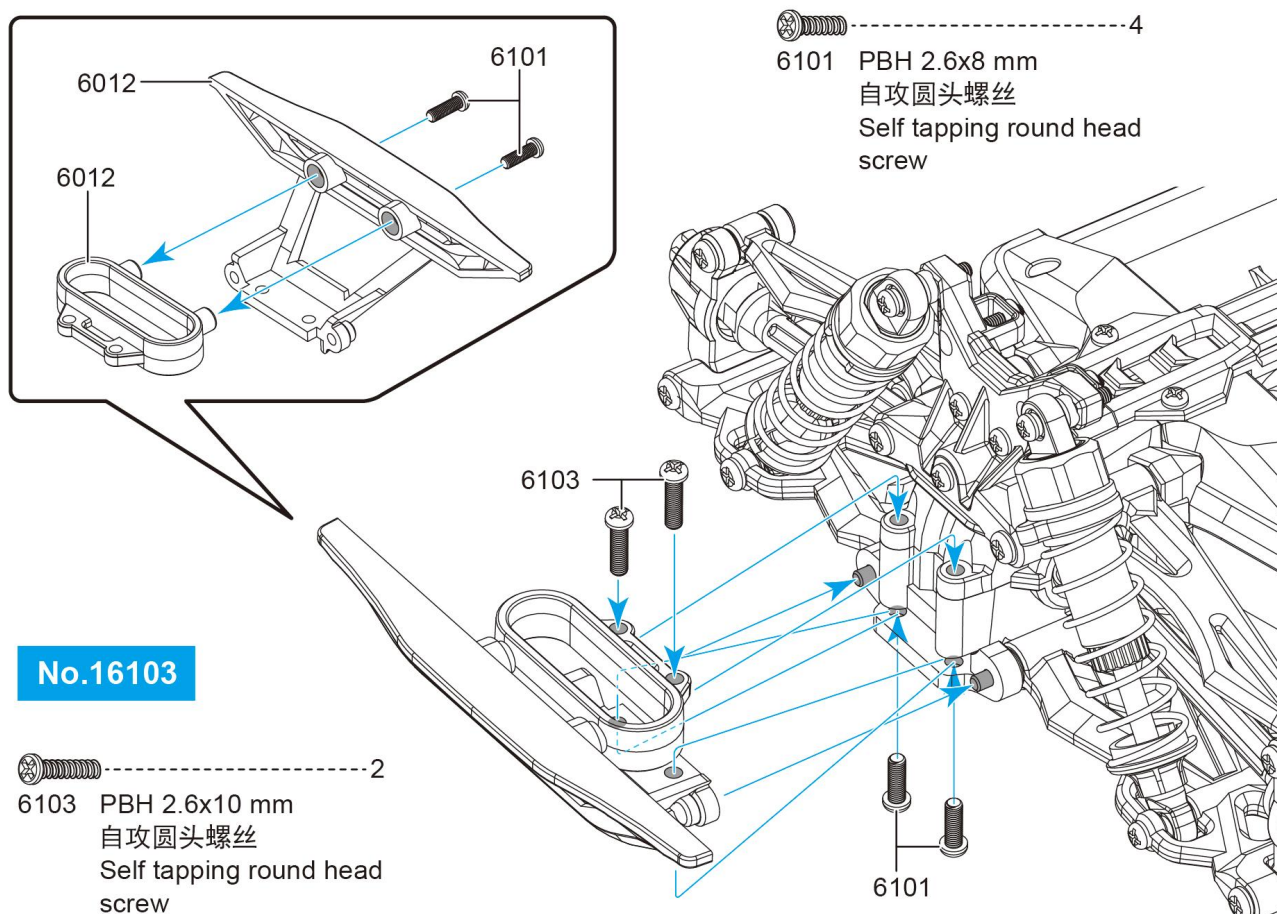 


33 后防撞组件 Rear anti-collision assembly

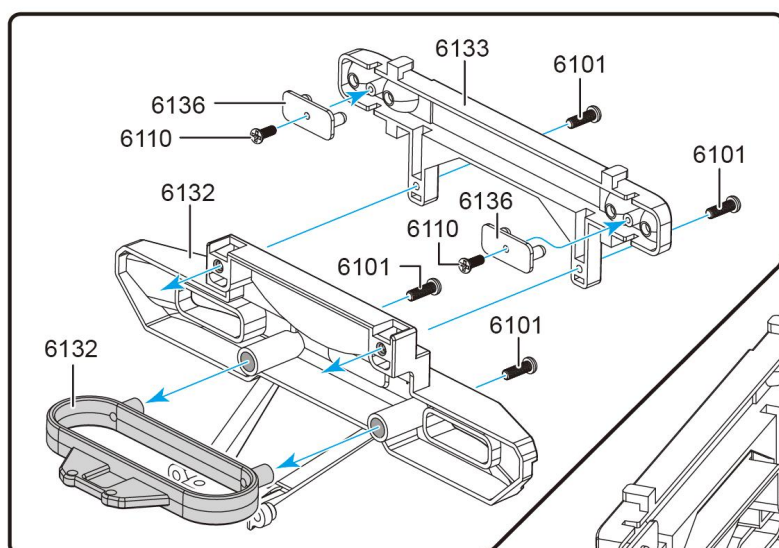 

-  6
6101 PBH 2.6x8 mm
自攻圆头螺丝
Self tapping round head screw
-  2
6110 KBH 2.3x7 mm
自攻沉头螺丝
Self tapping countersunk head screw

No.16104



 
-  2
6103 PBH 2.6x10 mm
自攻圆头螺丝
Self tapping round head screw

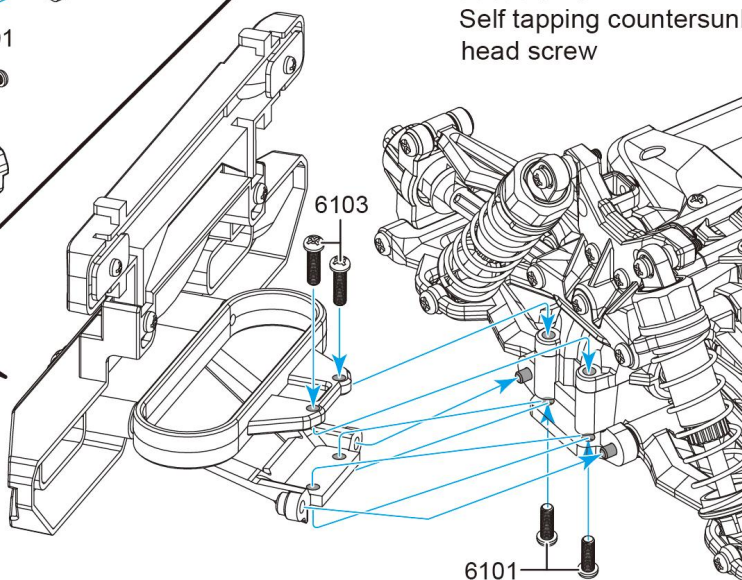

34 后防撞组件 Rear anti-collision assembly

No.16106

   -  4
6101 PBH 2.6x8 mm
自攻圆头螺丝
Self tapping round head screw

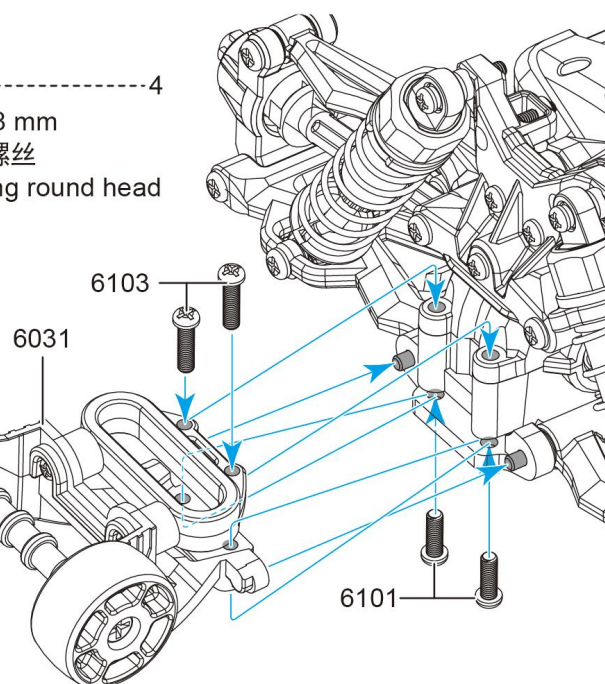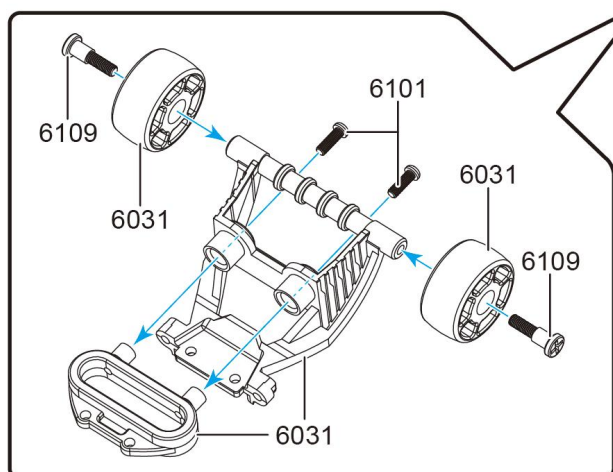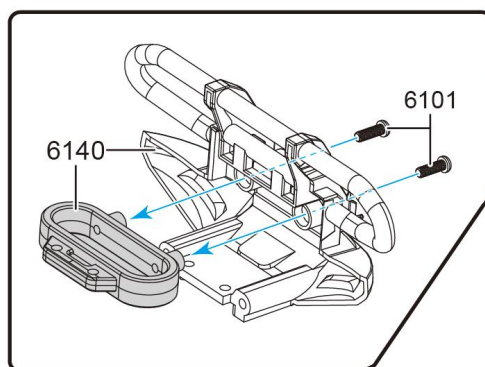


-  2
6109 3x4x13x6.2mm
自攻台阶螺丝
Self tapping step screw
-  2
6103 PBH 2.6x10 mm
自攻圆头螺丝
Self tapping round head screw

35 后防撞组件 Rear anti-collision assembly


No.16201

 4
6101 PBH 2.6x8 mm
自攻圆头螺丝
Self tapping round head
screw

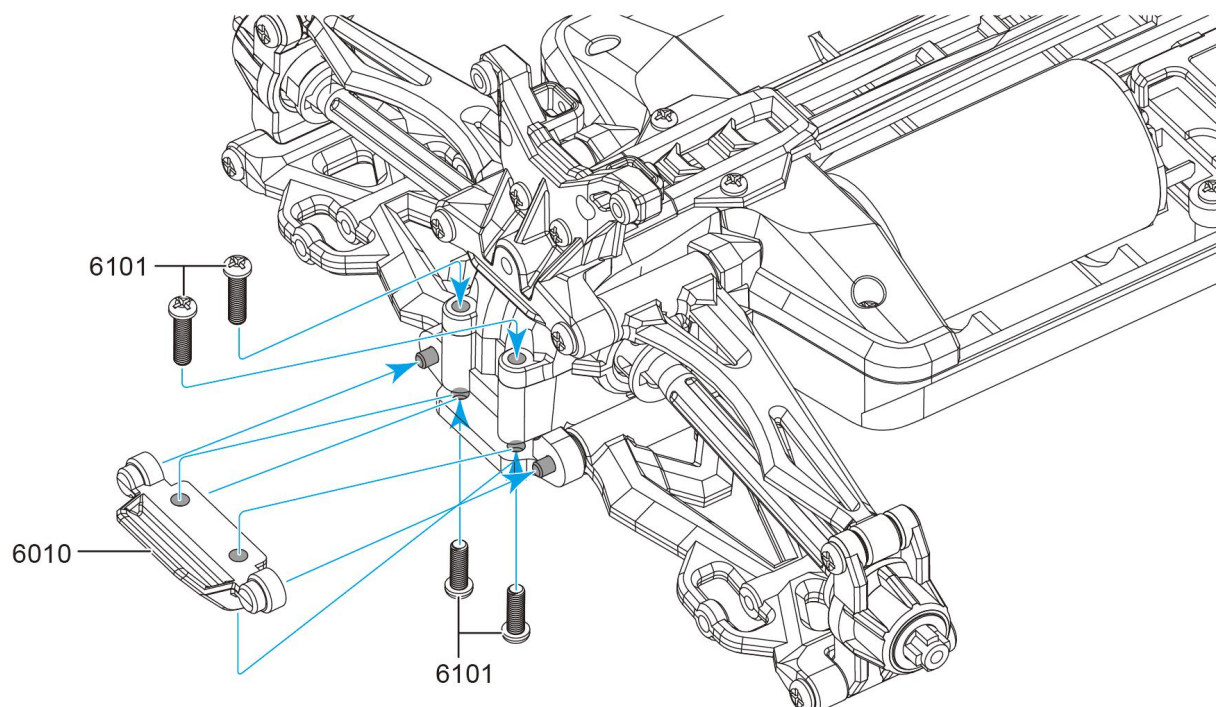

36 安装后车壳支柱 Install the rear car shell strut

 No.16101/16102

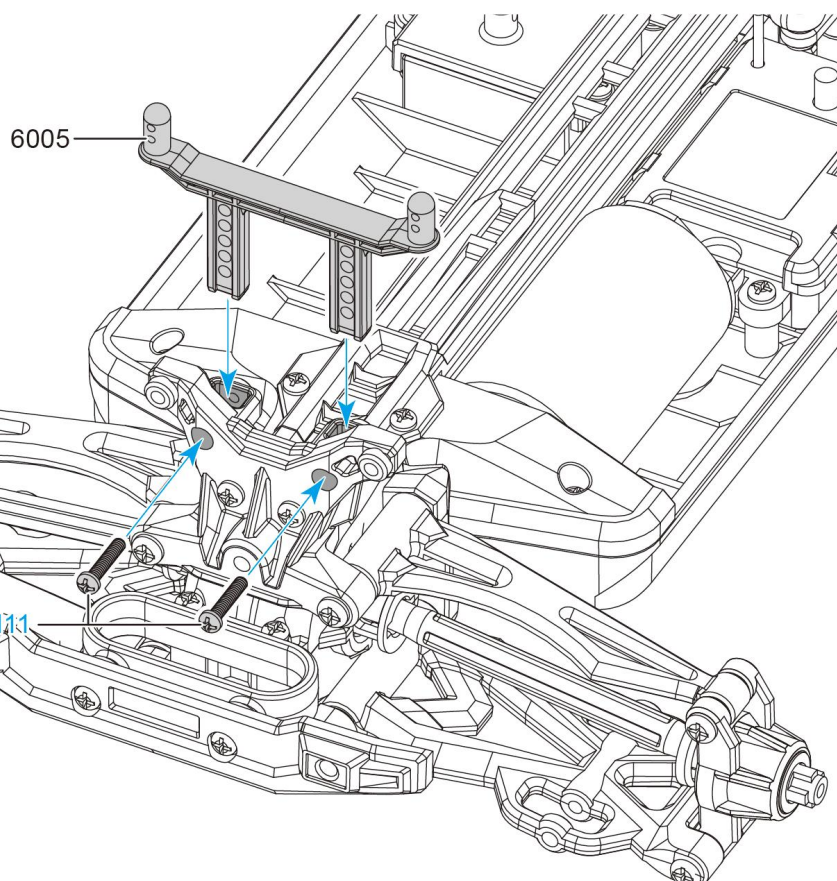


2
6111 PBH 2x10 mm
自攻圆头螺丝
Self tapping round head
screw

37 后防撞组件 Rear anti-collision assembly

No.16201


 
-  2
 6111 PBH 2x10 mm
 自攻圆头螺丝
 Self tapping round head
 screw

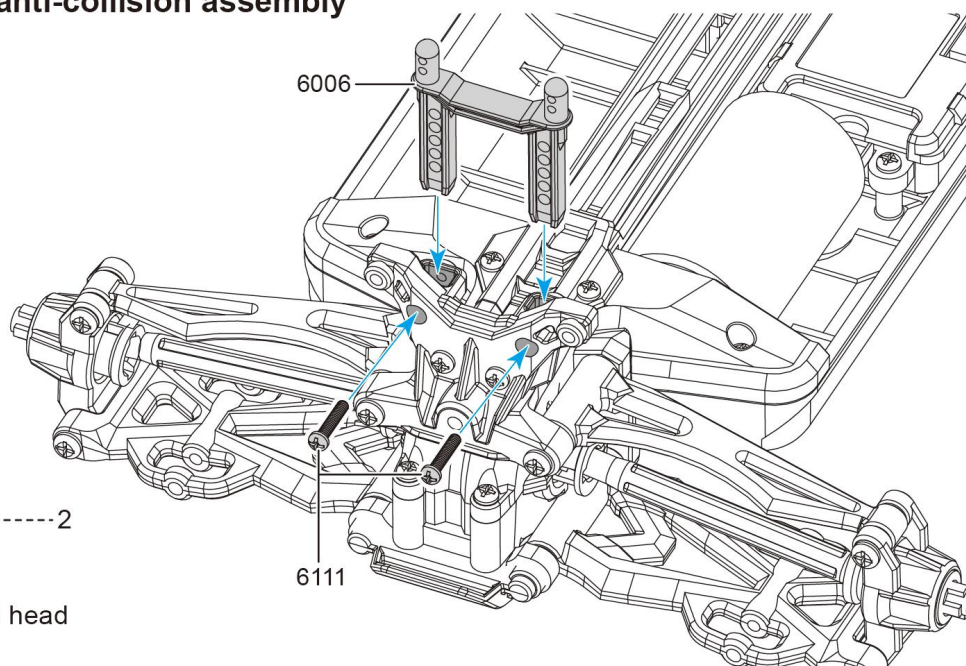

38 安装后减震器 Rear shock assembly


No.16101/16102

  -  1
 6103 PBH 2.6x10 mm
 自攻圆头螺丝
 Self tapping round head
 screw
-  4
 6105 BM 2.5x14 mm
 机丝圆头螺丝
 Machine round head
 screw

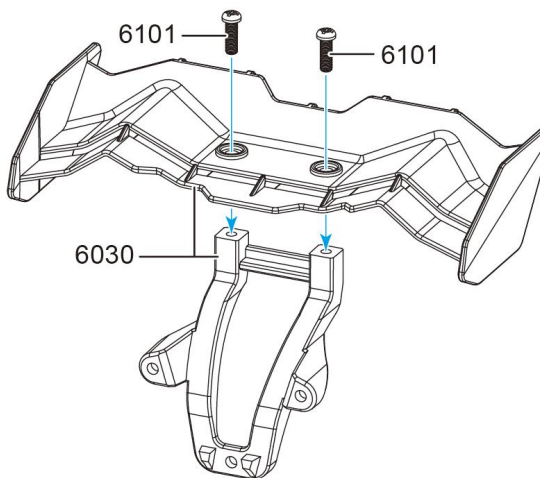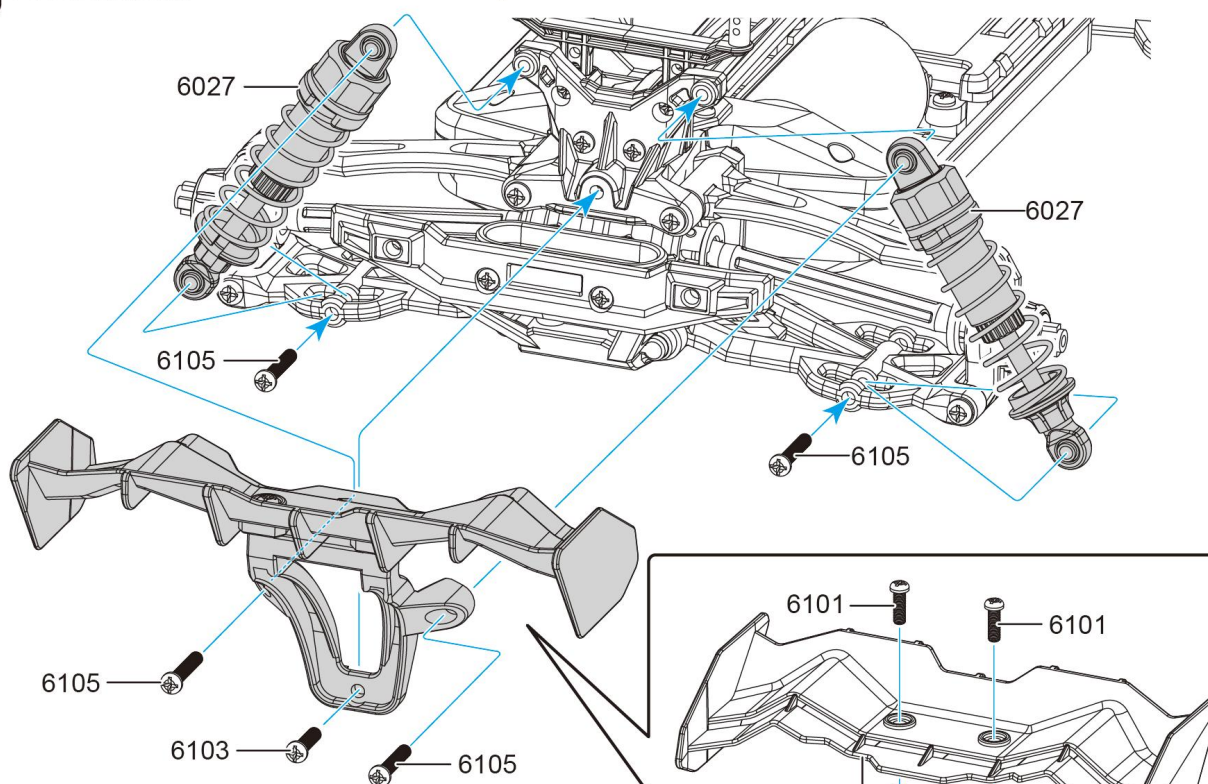


-  2
 6101 PBH 2.6x8 mm
 自攻圆头螺丝
 Self tapping round head
 screw

 No.16201

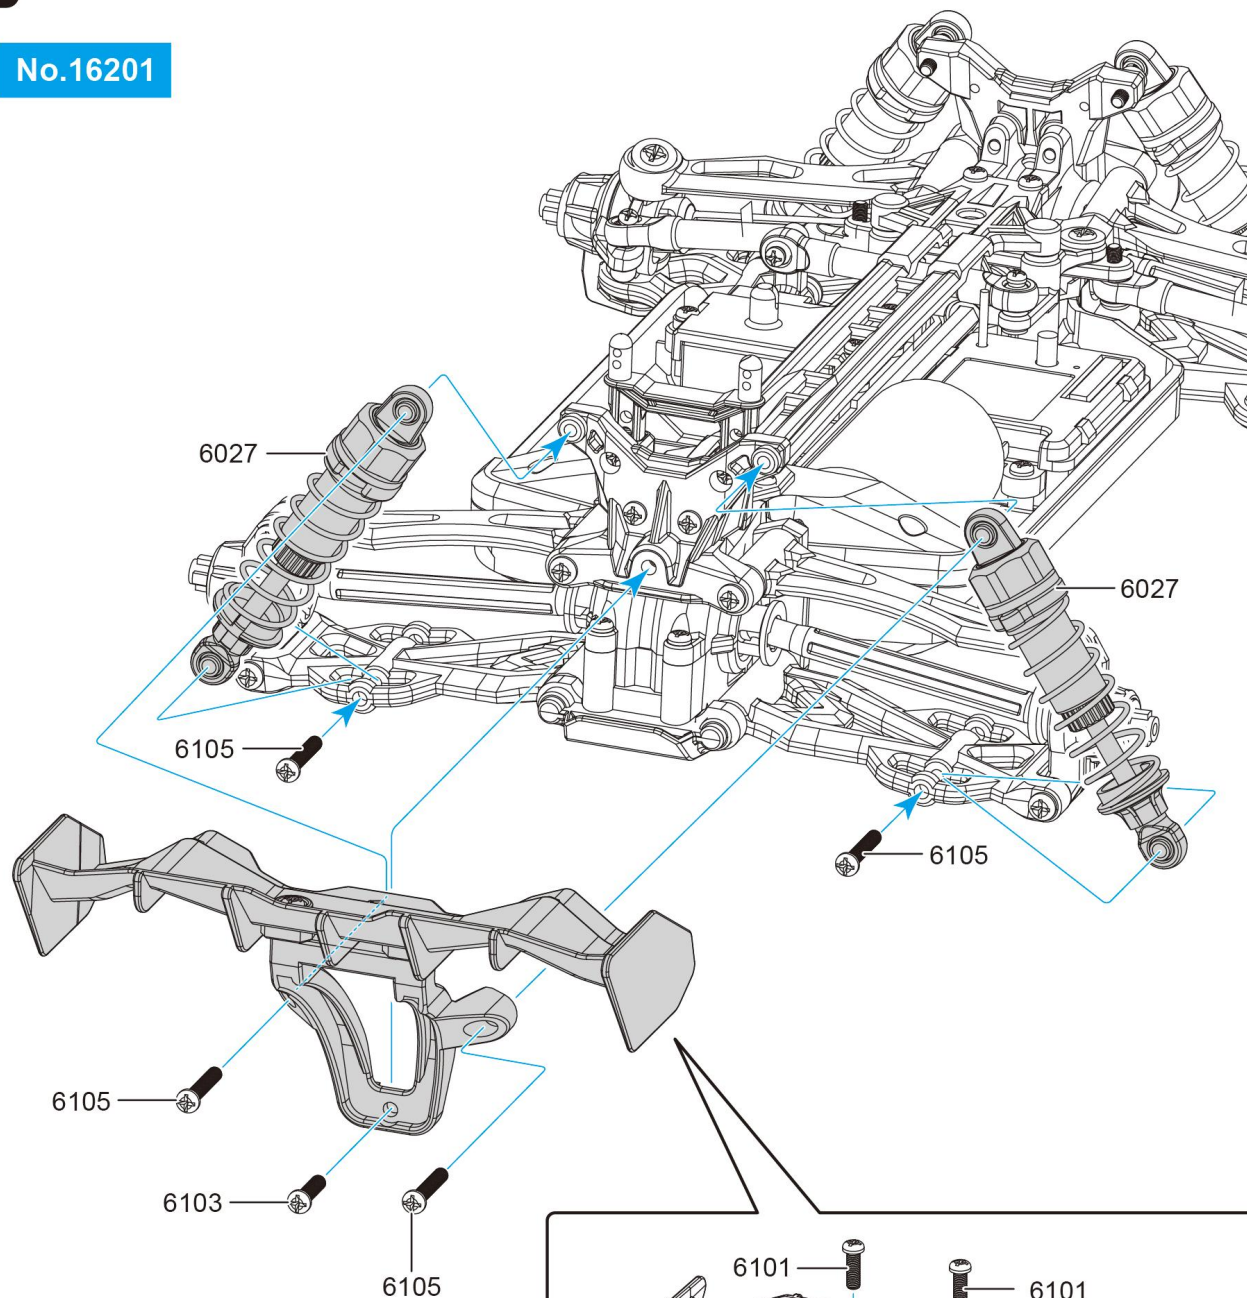


 1
 6103 PBH 2.6x10 mm
 自攻圆头螺丝
 Self tapping round head
 screw

  4
 6105 BM 2.5x14 mm
 机丝圆头螺丝
 Machine round head
 screw

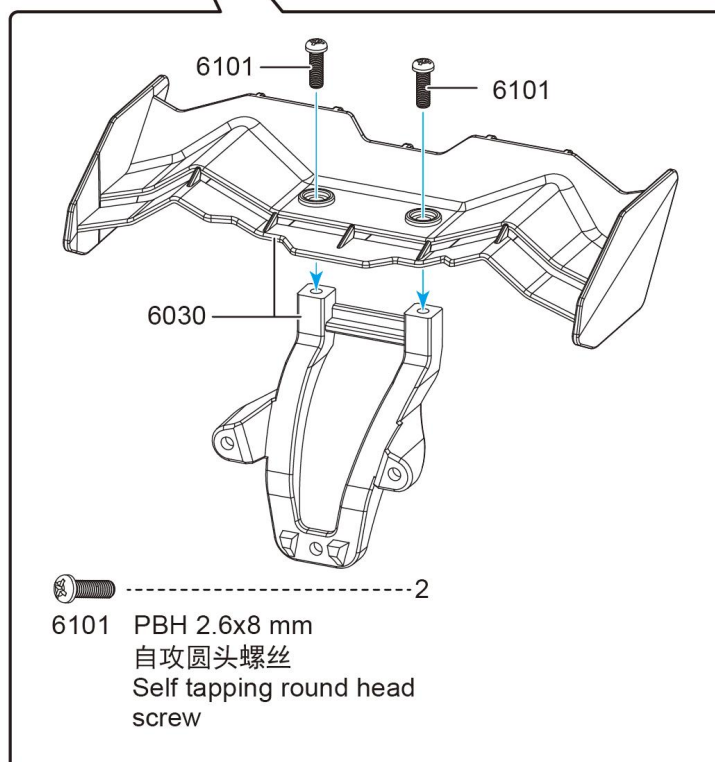


 2
 6101 PBH 2.6x8 mm
 自攻圆头螺丝
 Self tapping round head
 screw

 
40 安装有刷车轮 Brush wheel installation

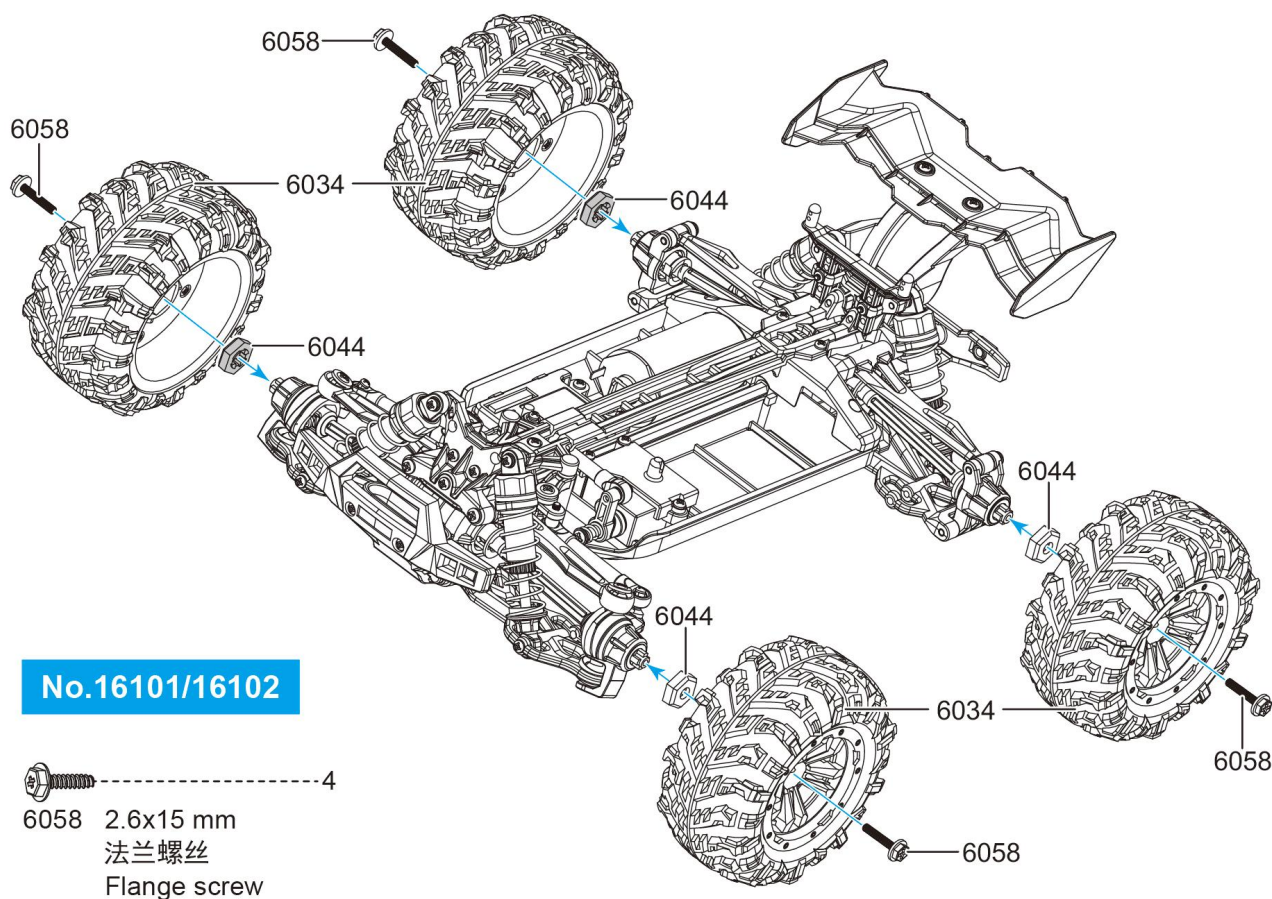


41 安装无刷车轮 Brushless wheel installation

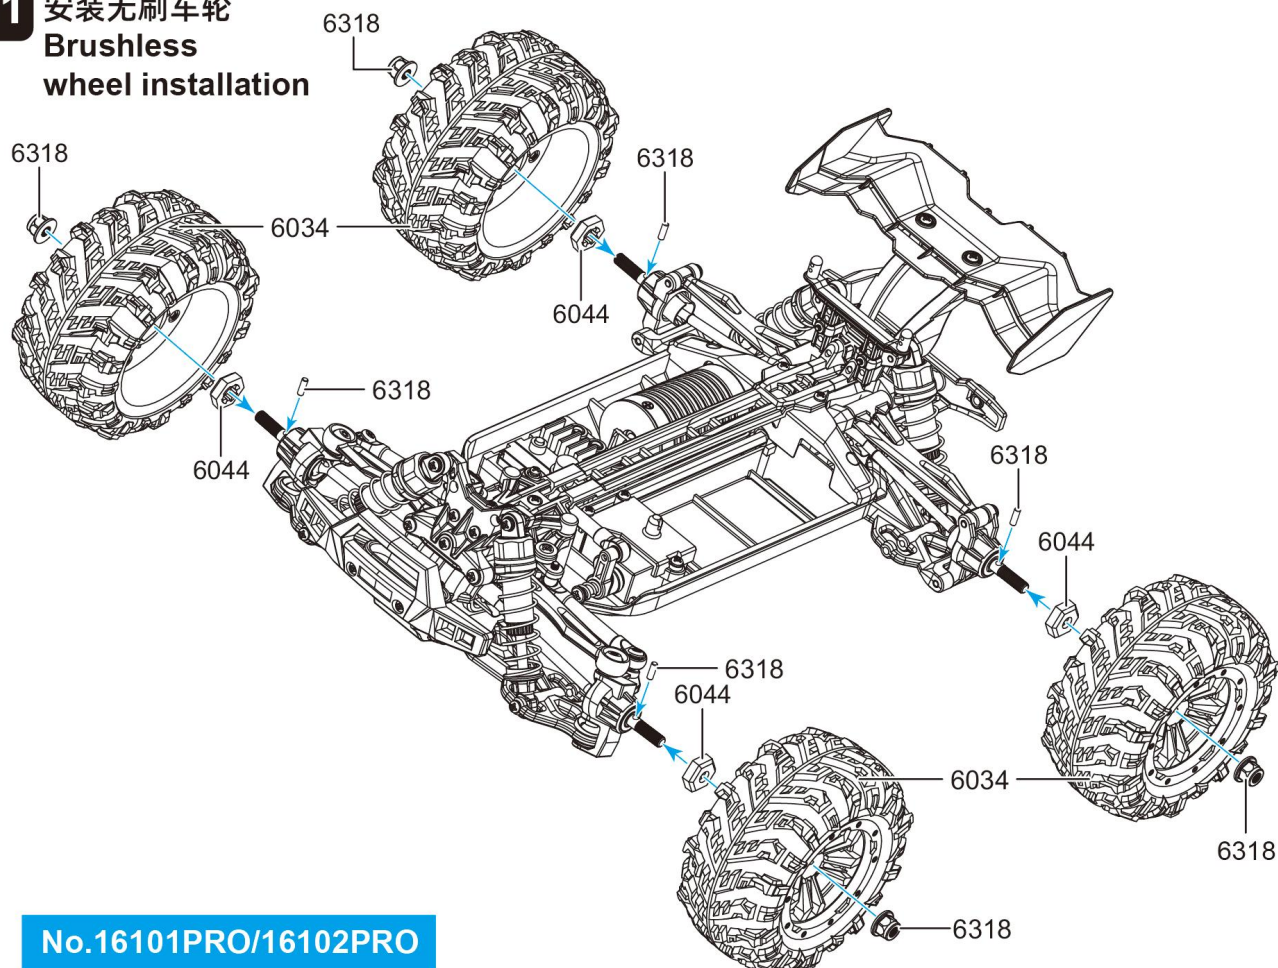 


42 安装有刷车轮 Brush wheel installation

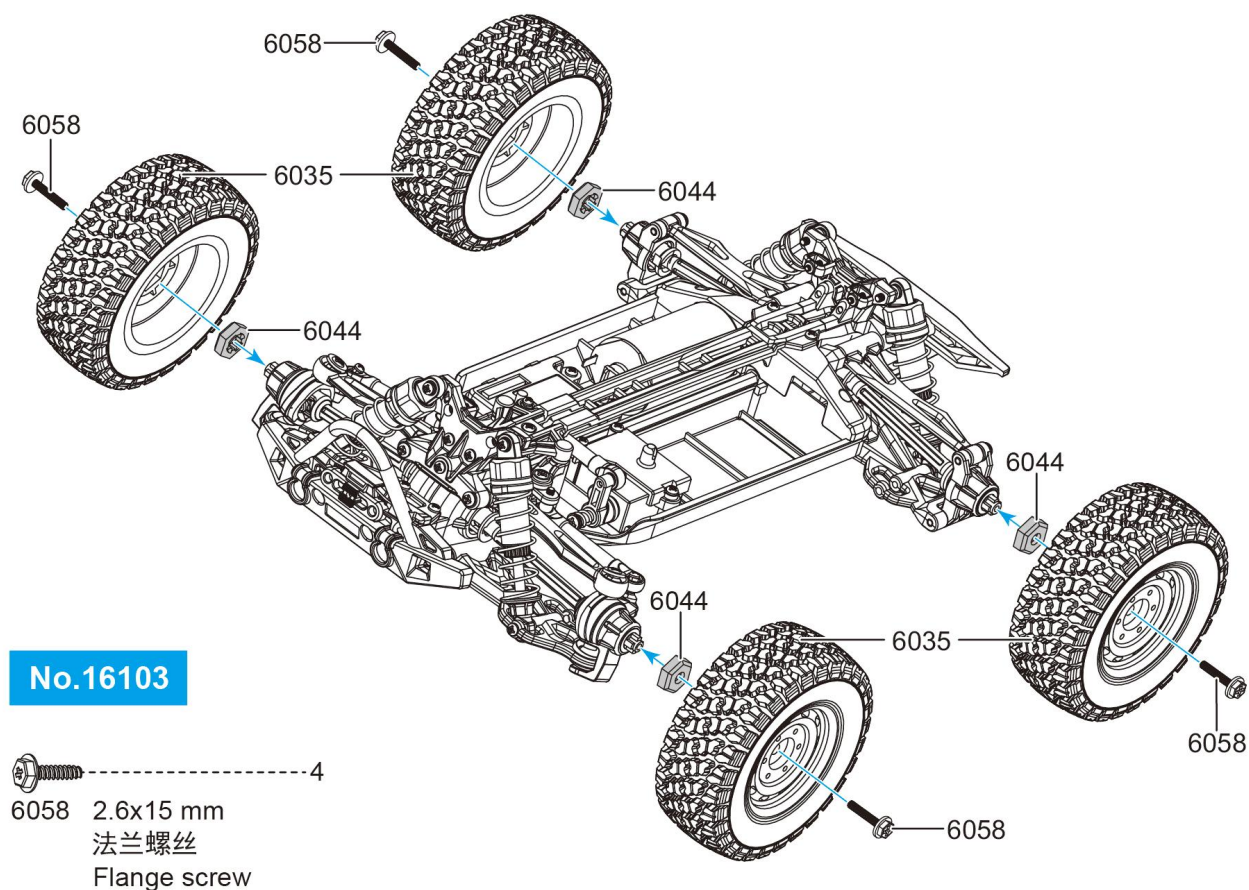 


43 安装无刷车轮 Brushless wheel installation

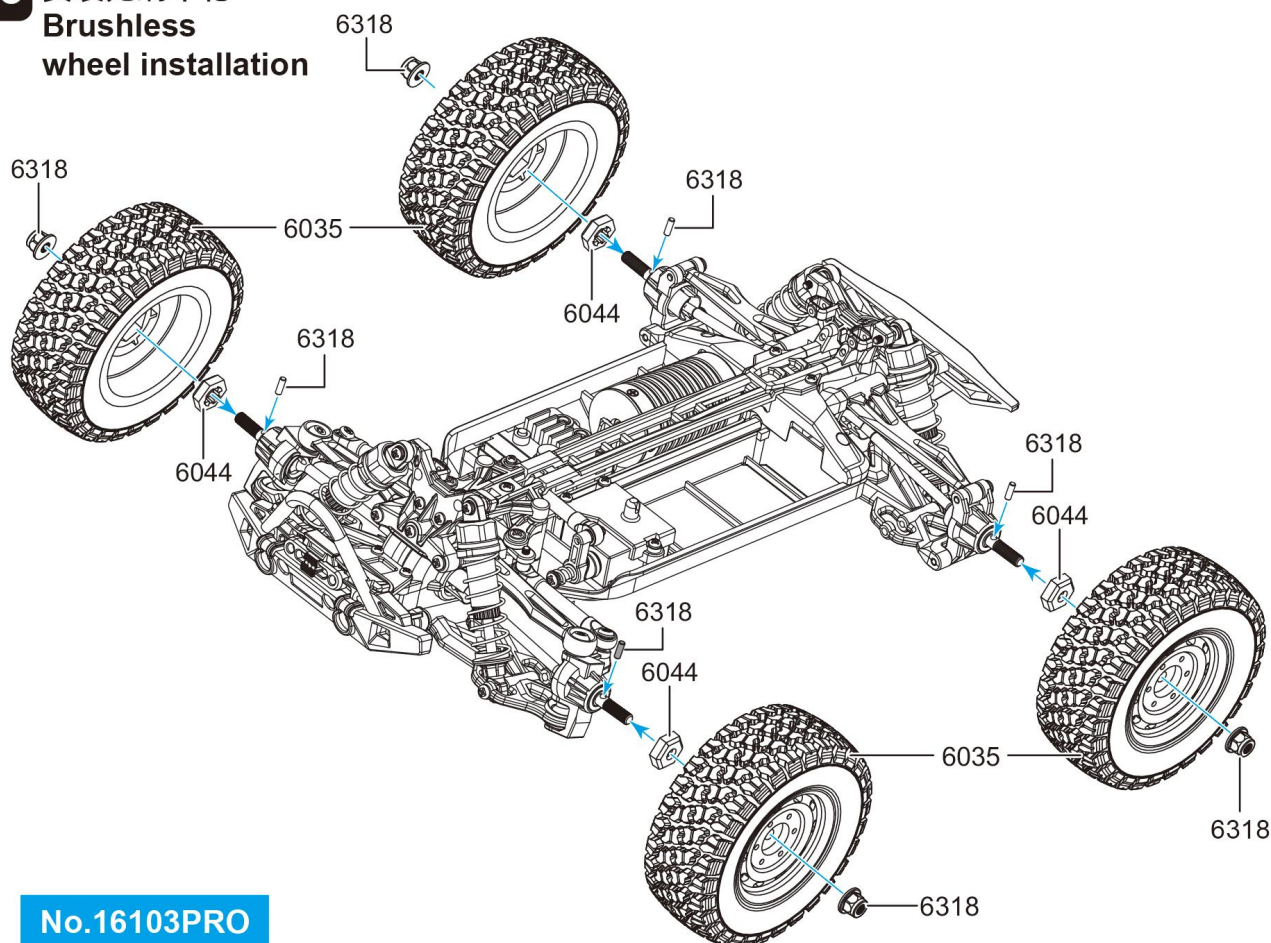 


44 安装有刷车轮 Brush wheel installation

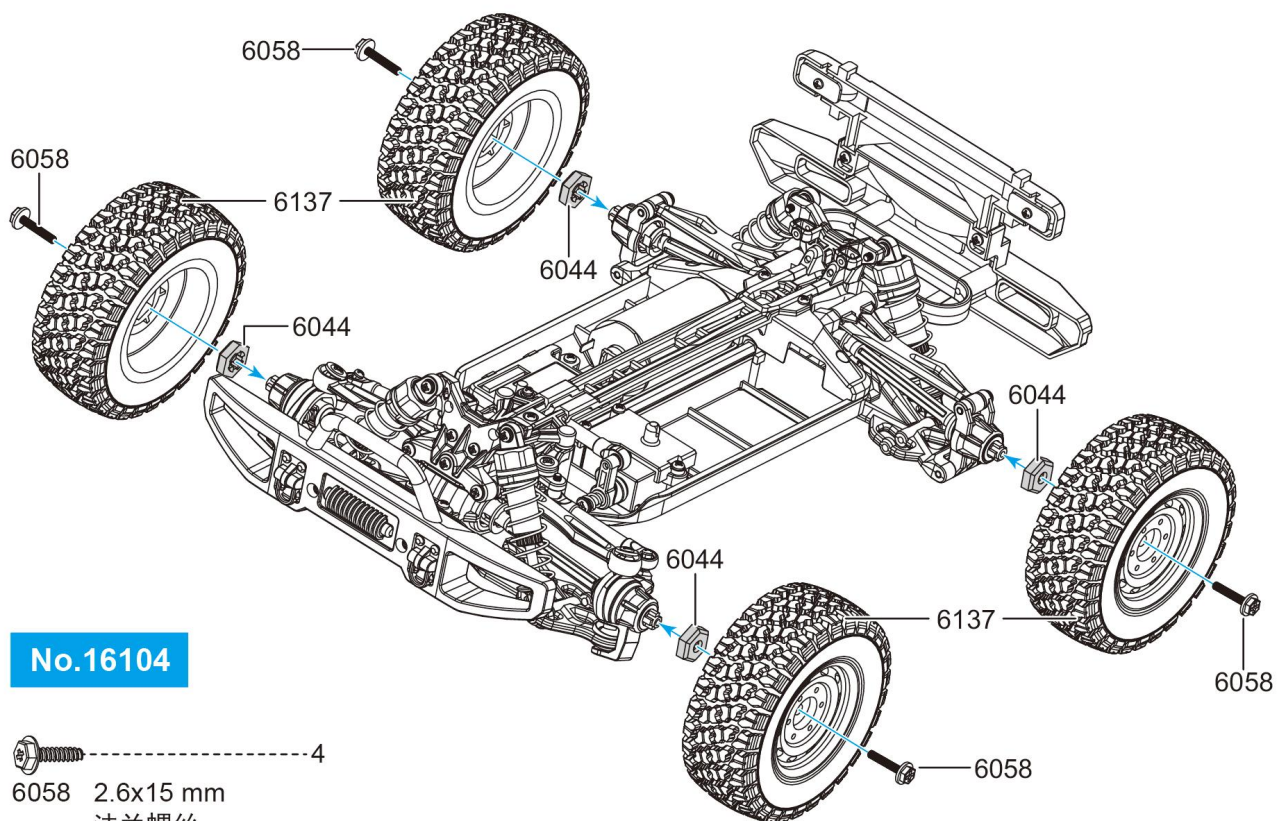 


45 安装无刷车轮 Brushless wheel installation

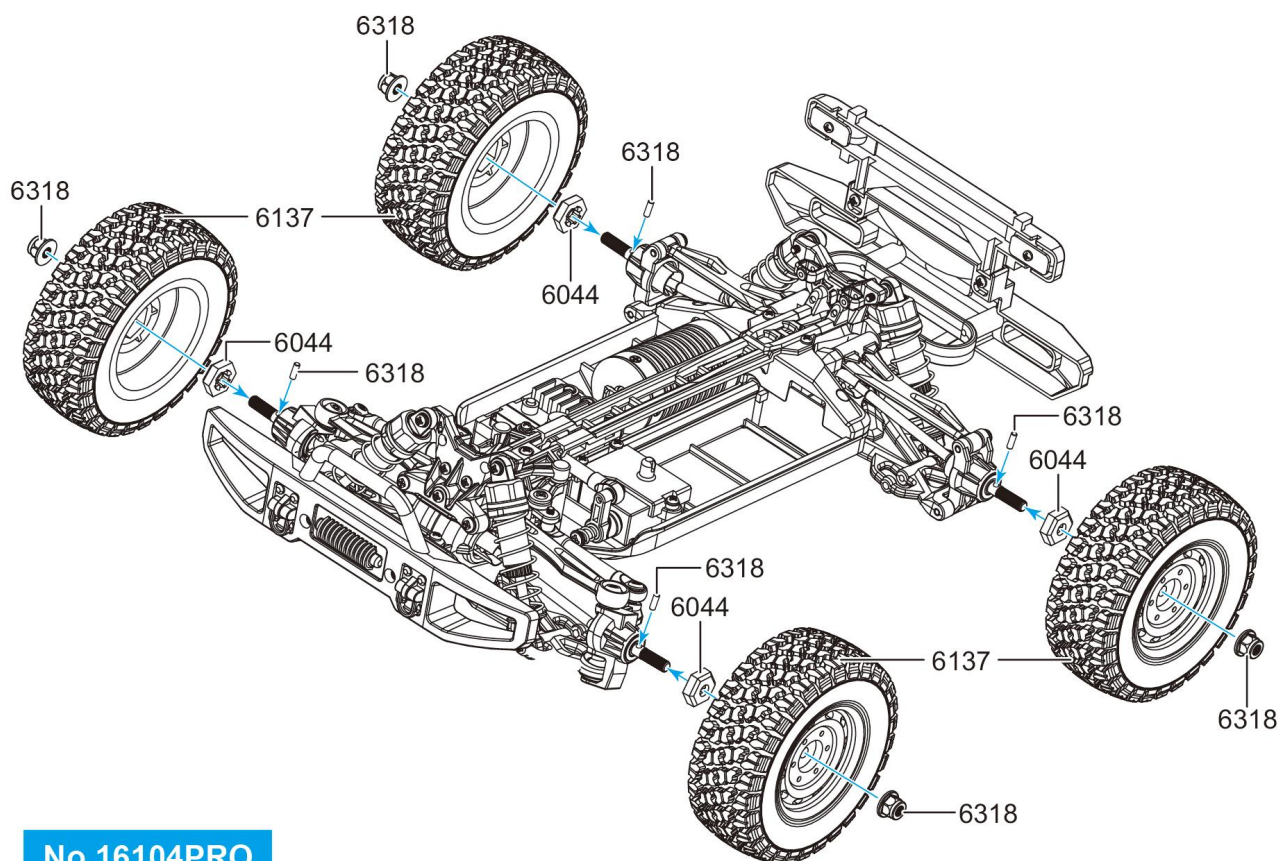 


46 安装有刷车轮 Brush wheel installation

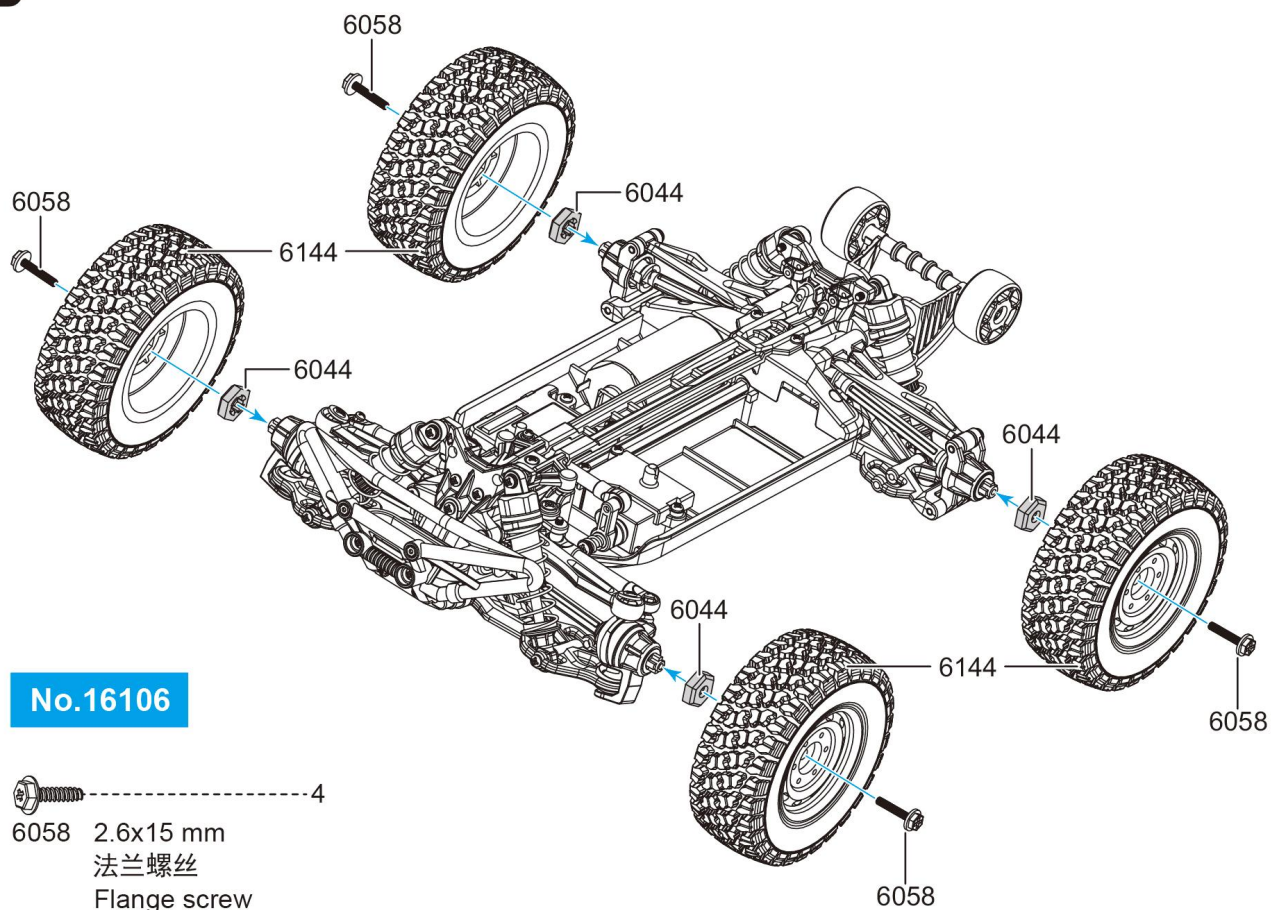 


47 安装无刷车轮 Brushless wheel installation

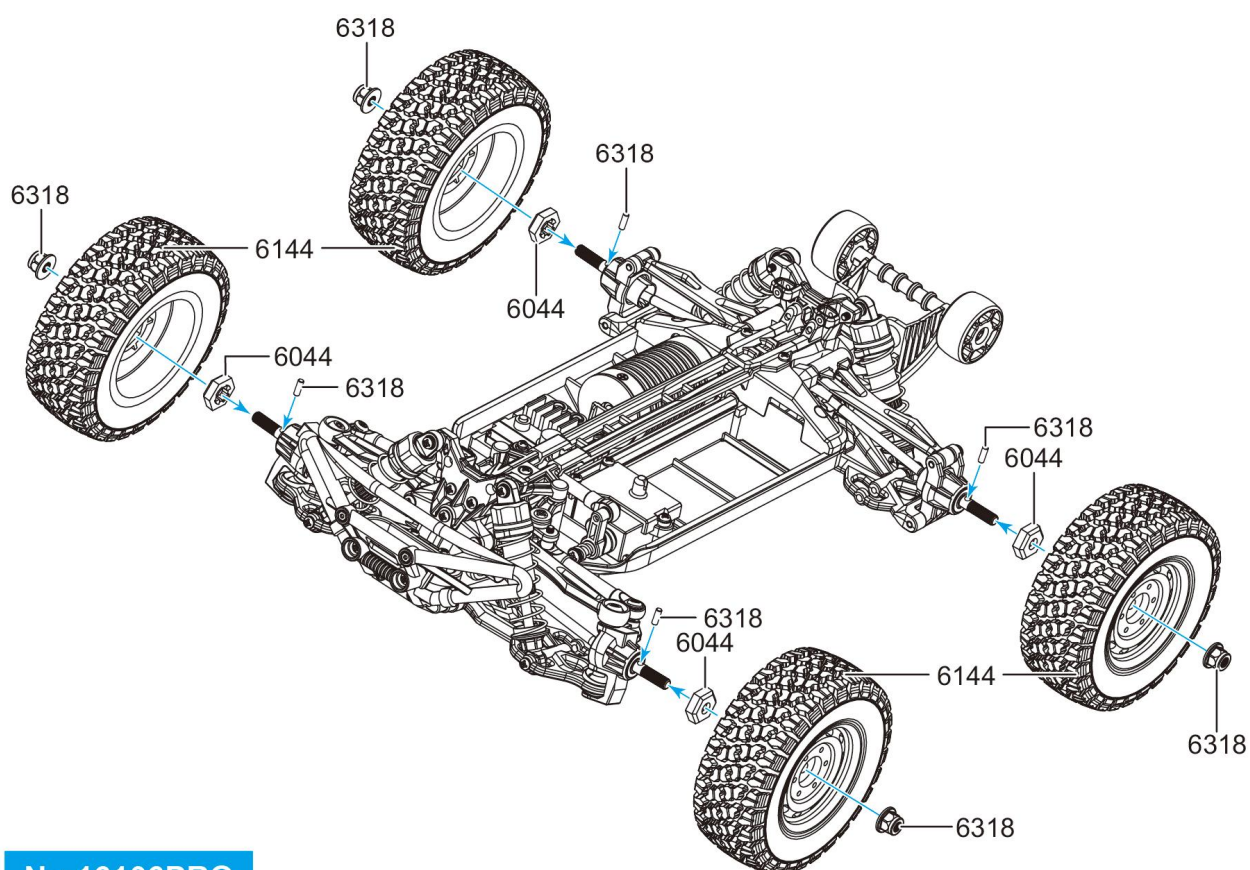 


48 安装有刷车轮 Brush wheel installation

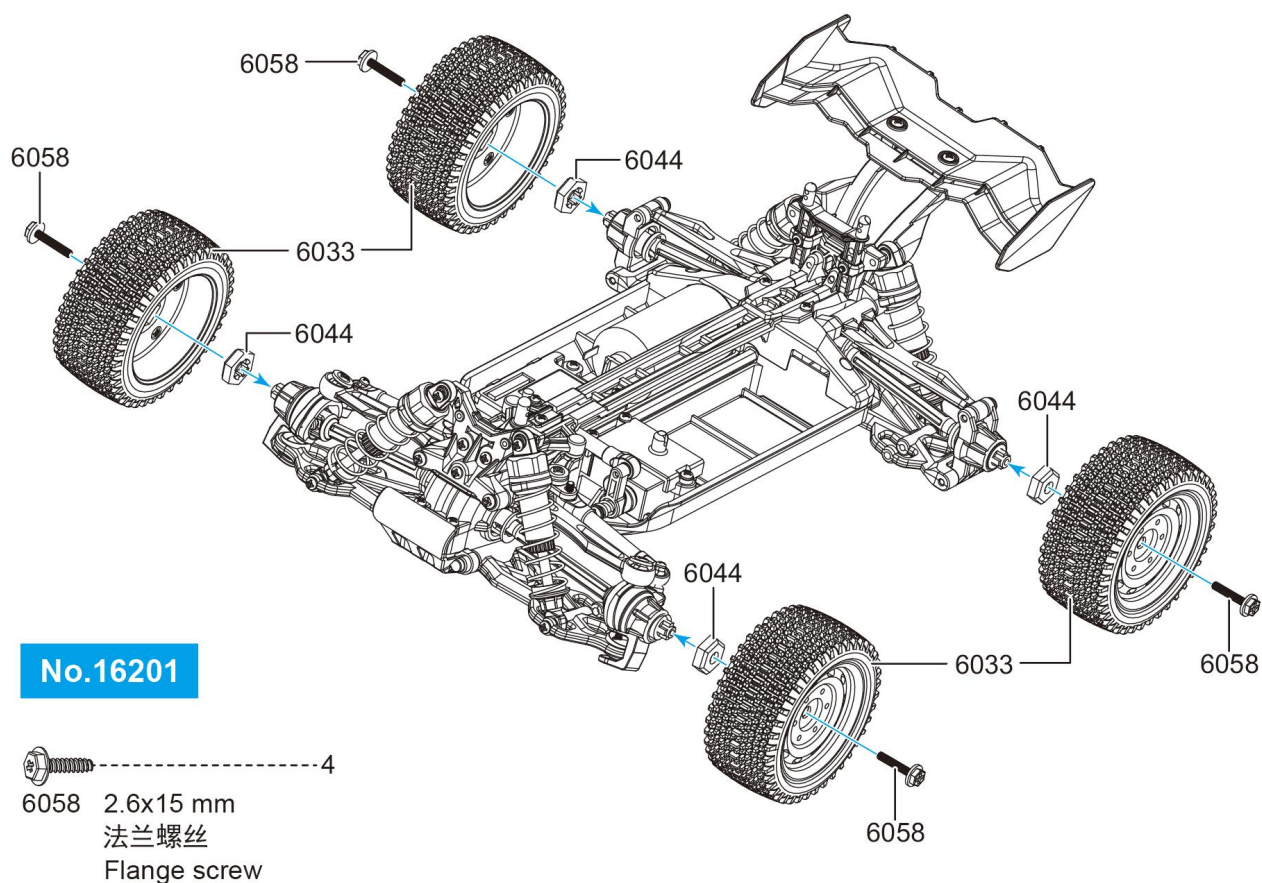 


49 安装无刷车轮 Brushless wheel installation

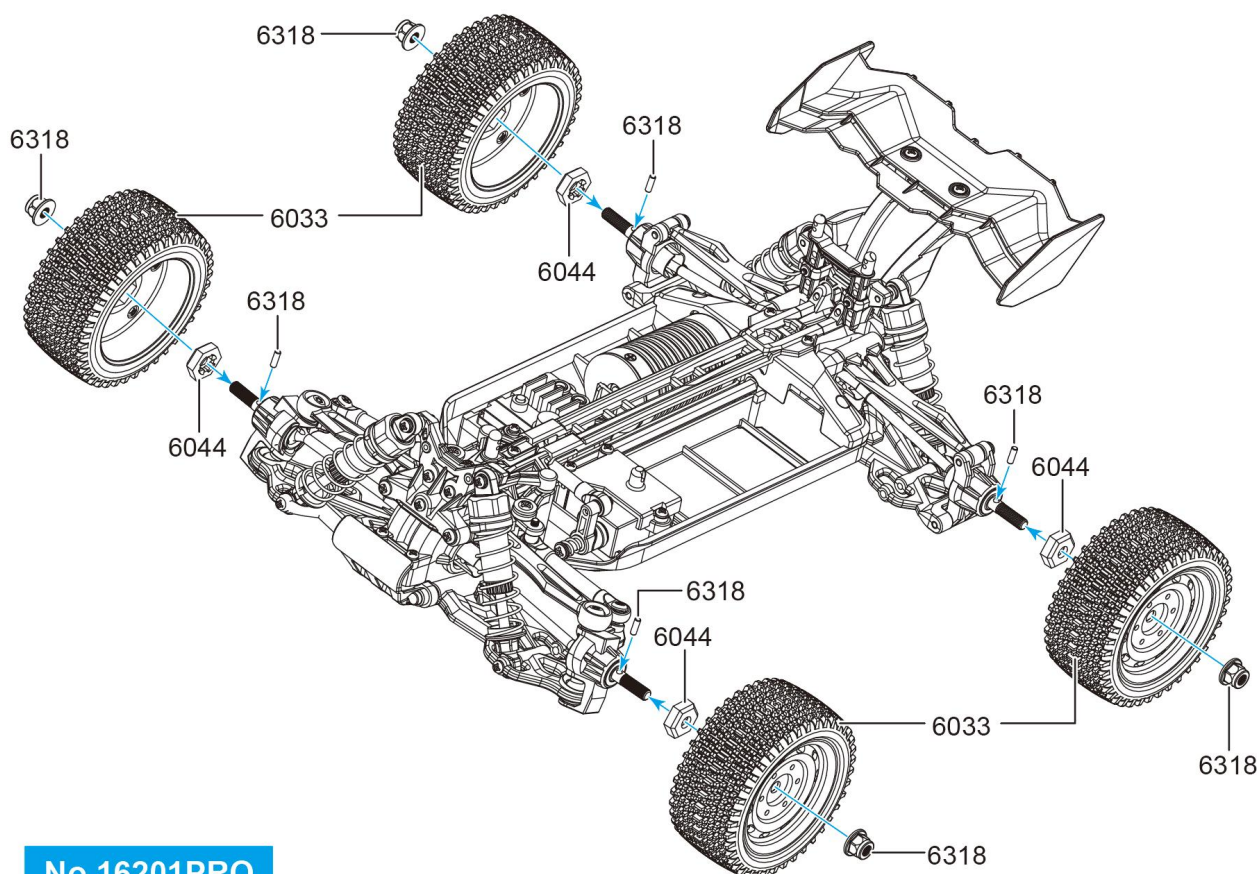 

50 安装电池 Battery pack installation

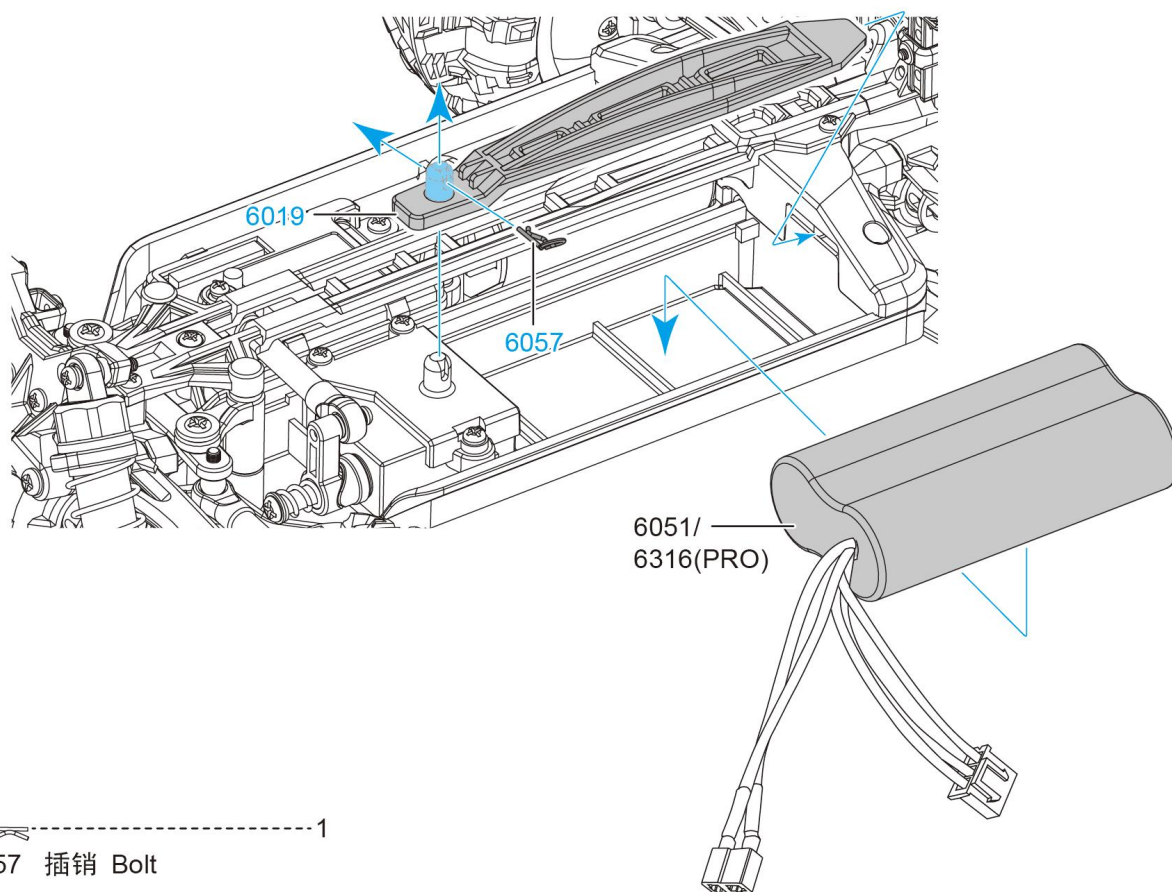 


 51 安装前车壳支柱 Install the front car shell strut

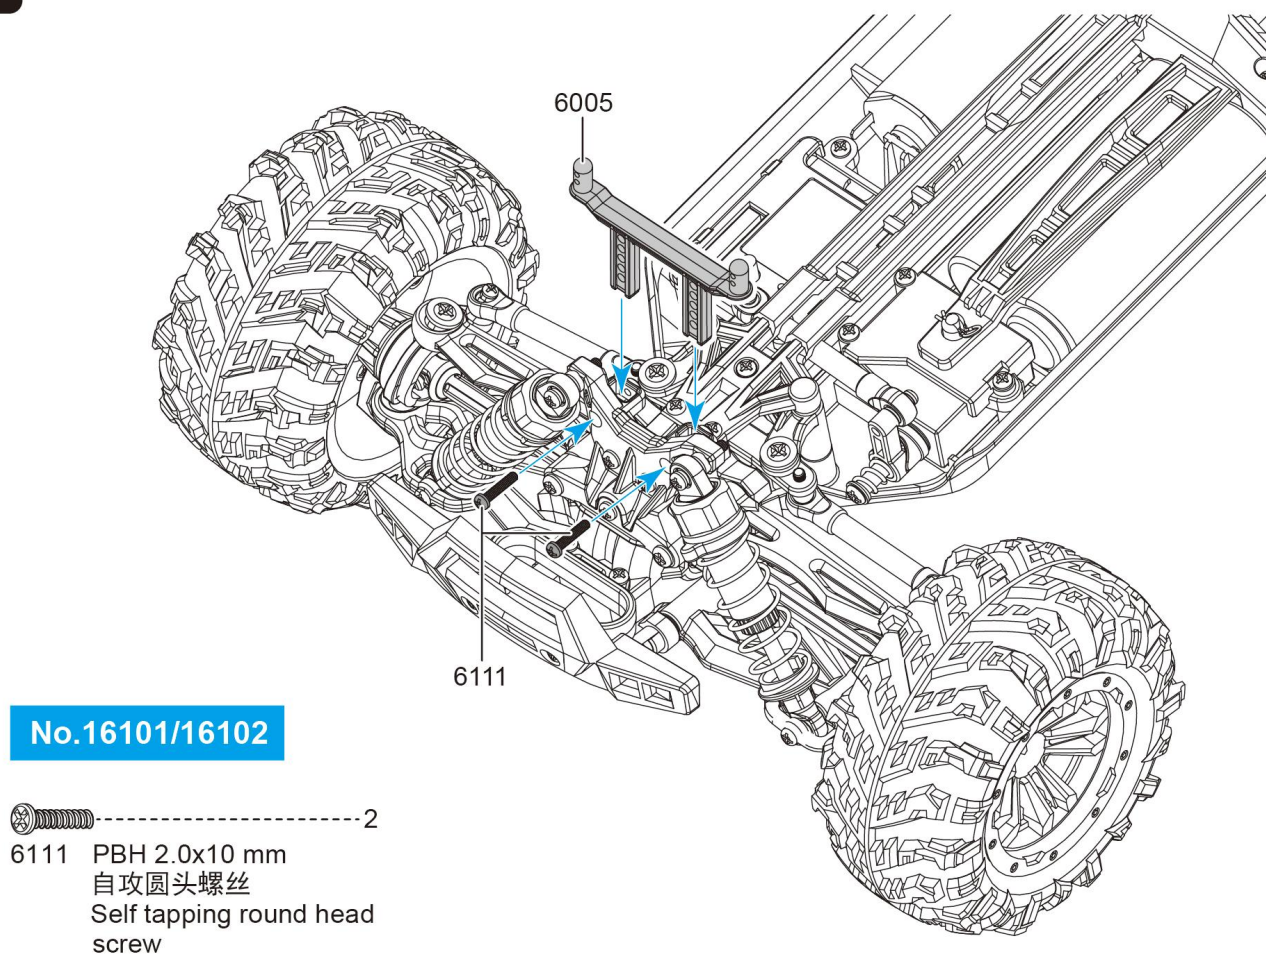


52 安装前车壳支柱 Install the front car shell strut

 No.16103

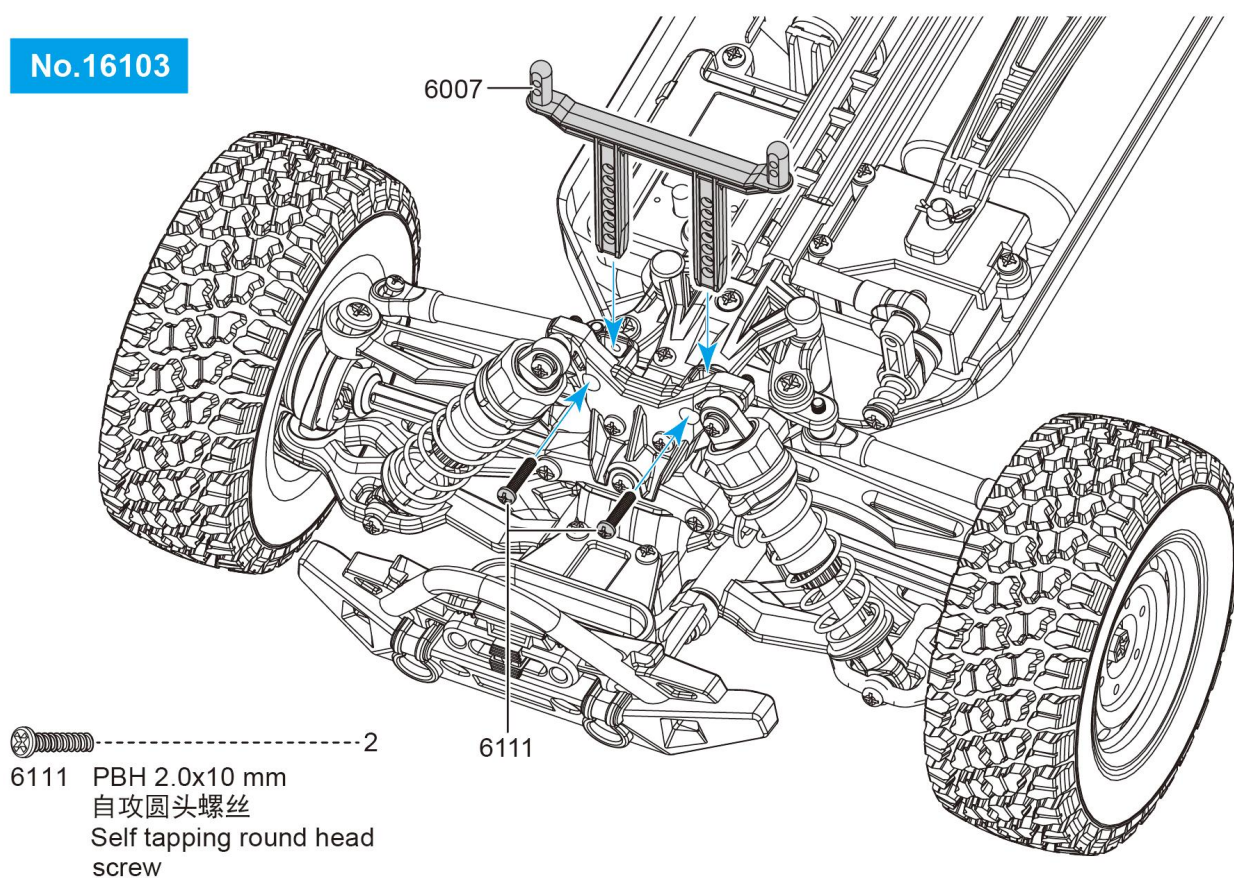


53 安装前车壳支柱 Install the front car shell strut

 No.16104

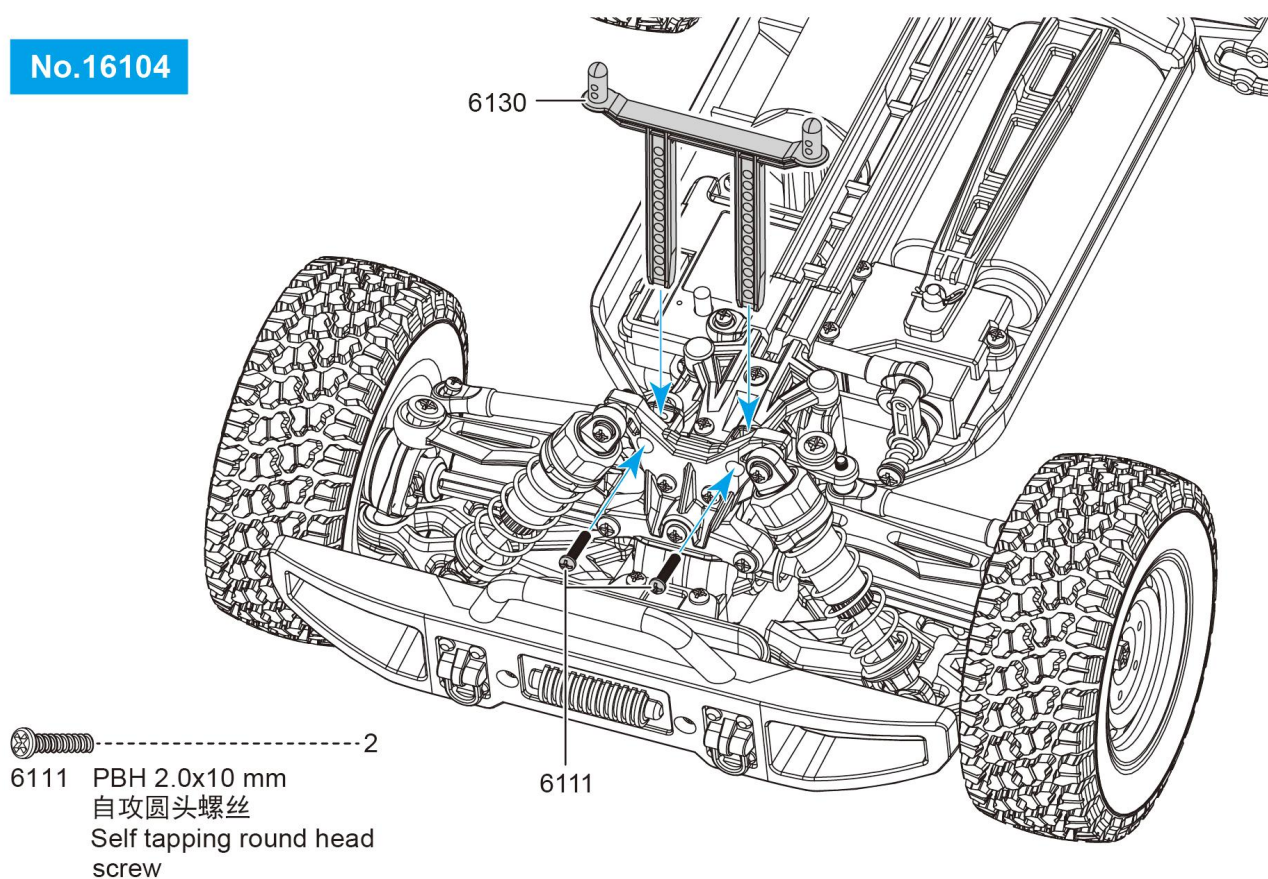


54 安装前车壳支柱 Install the front car shell strut

 No.16106

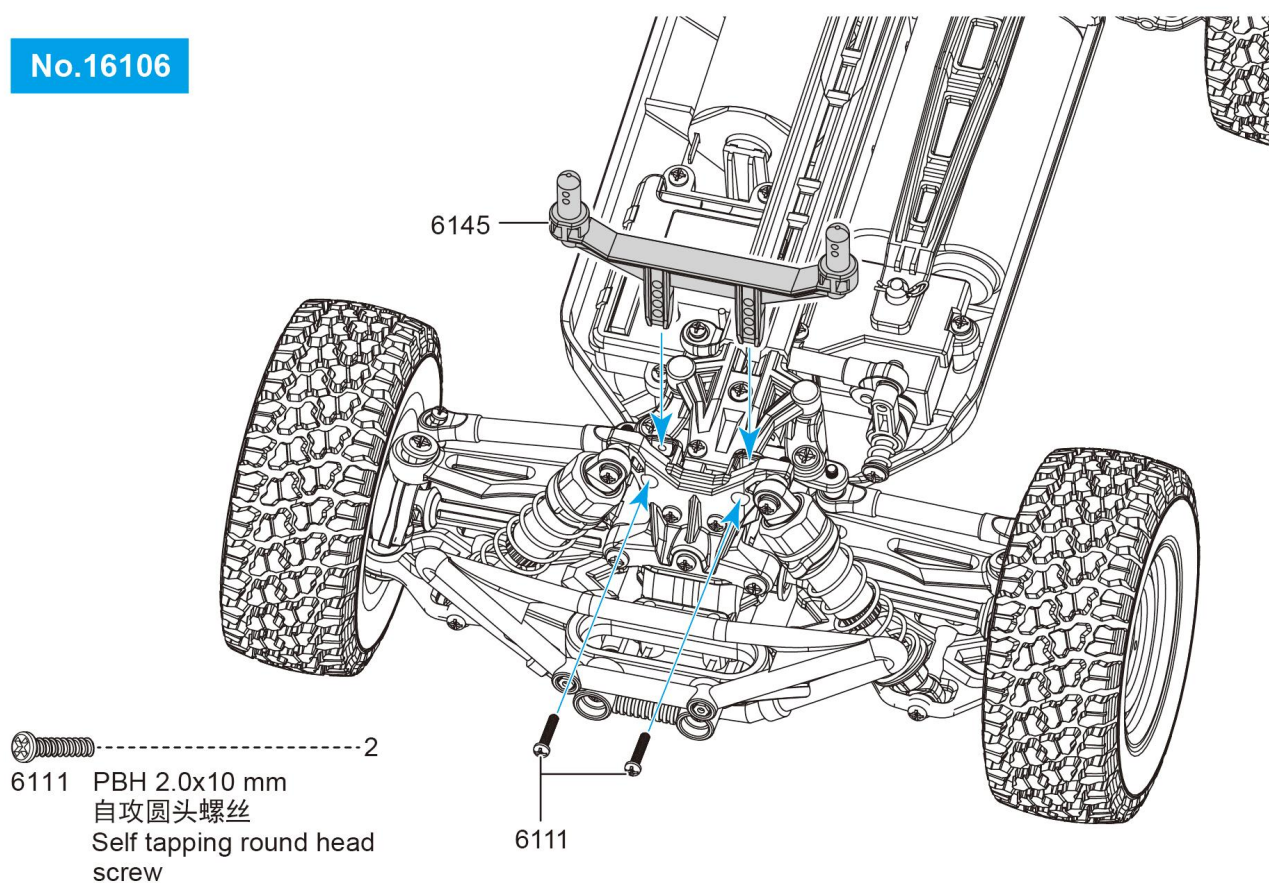


55 安装前车壳支柱 Install the front car shell strut

 No.16201

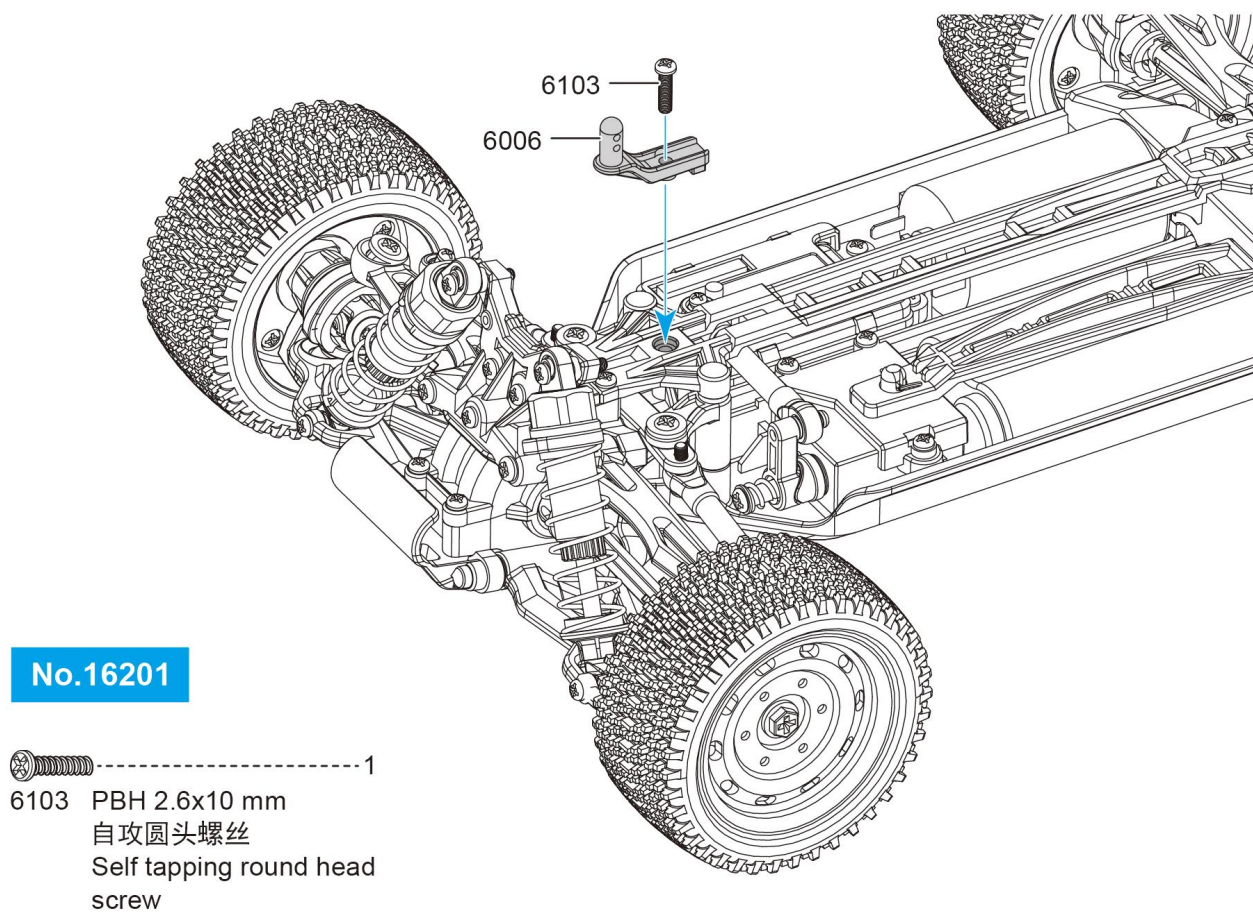

56 安装后车壳支柱 Install the rear car shell strut

 
No.16103

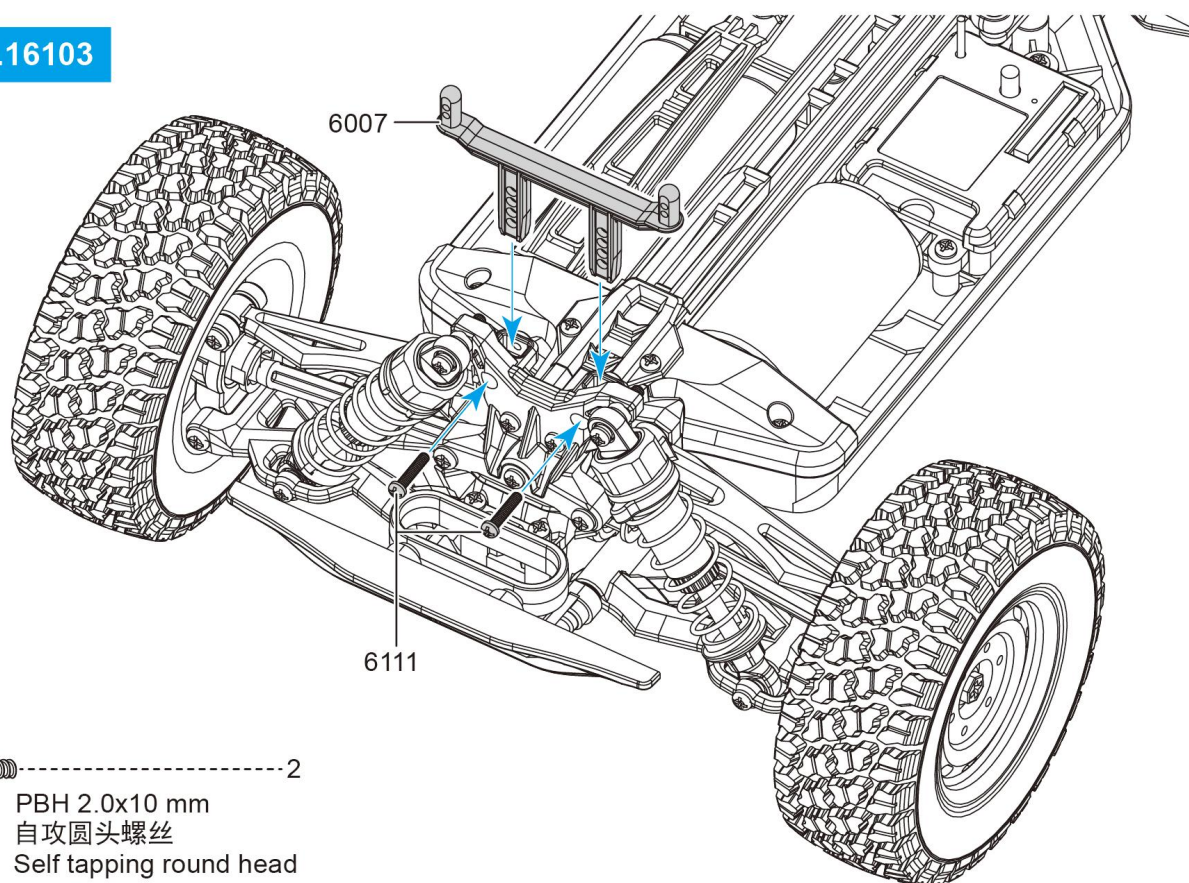

-  2
 6111 PBH 2.0x10 mm
 自攻圆头螺丝
 Self tapping round head
 screw

57 安装后车壳支柱 Install the rear car shell strut

 No.16104

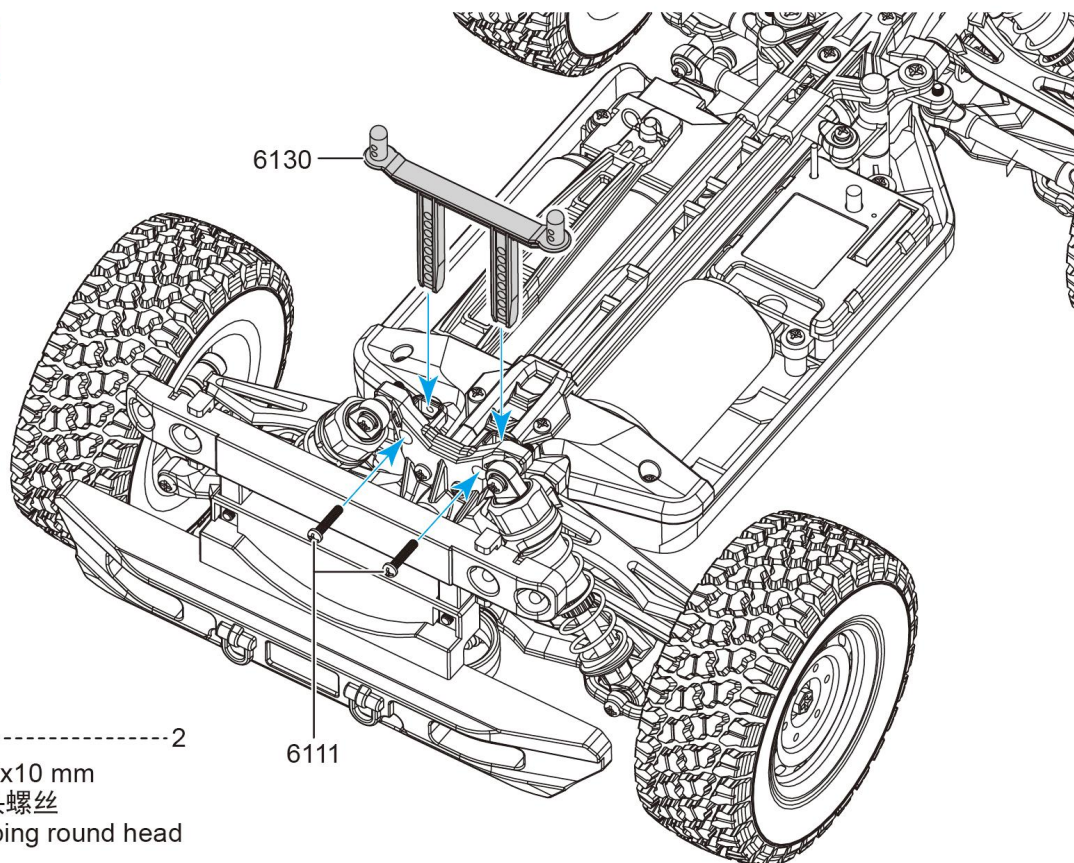


-  2
 6111 PBH 2.0x10 mm
 自攻圆头螺丝
 Self tapping round head
 screw

58 安装后车壳支柱 Install the rear car shell strut

- 6111 PBH 2.0x10 mm
自攻圆头螺丝
Self tapping round head screw

 No.16106

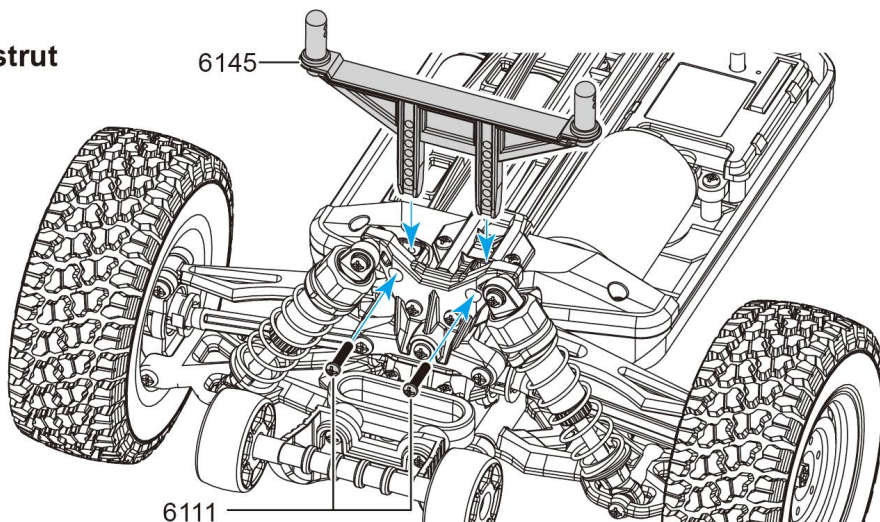

59 连接电线 Connect wire

有刷电调 Brushed electric

 
前防撞灯电源插头 Front anti-collision light power plug

电源开关
Power switch

天线 Antennai

舵机电源插头
Power plug of
the rudder

No.16101/16102

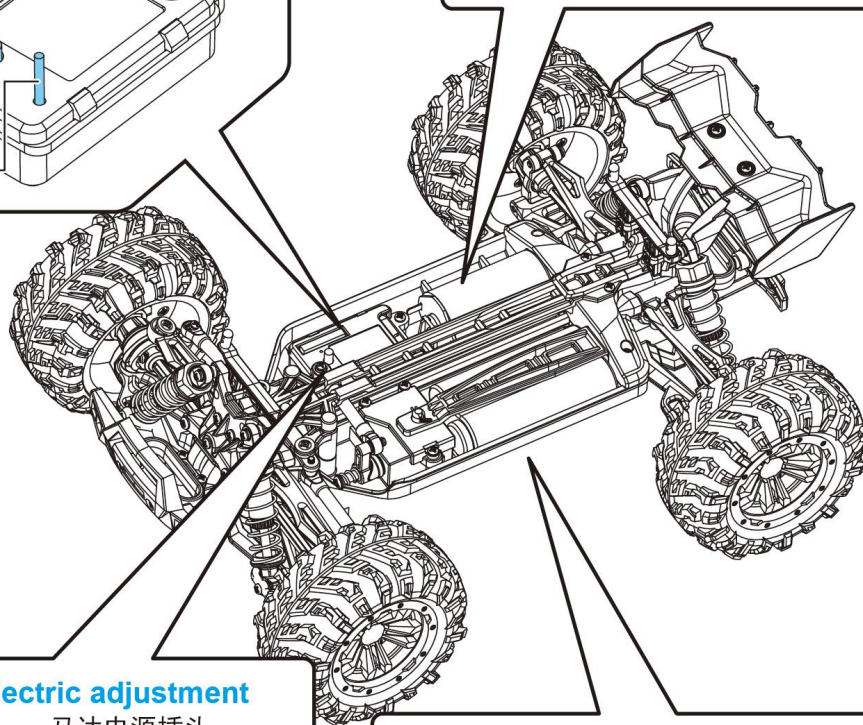

无刷电调 Brushless electric adjustment

 
电源开关
Power switch

舵机电源插头
Power plug of
the rudder




前防撞灯
电源插头
Front
anti-collision
light power
plug

马达电源插头
Motor electric source plug
红色 Red 黄色 Yellow
蓝色 Blue

PRO

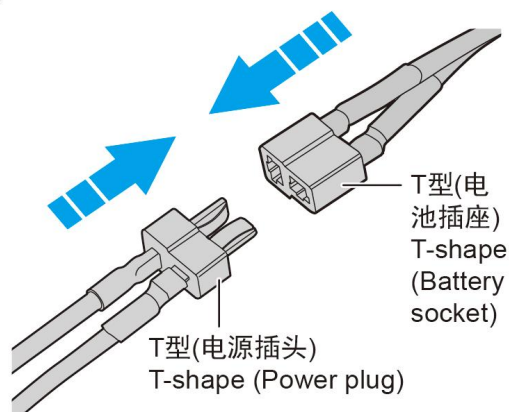


有刷电调 Brushed electric

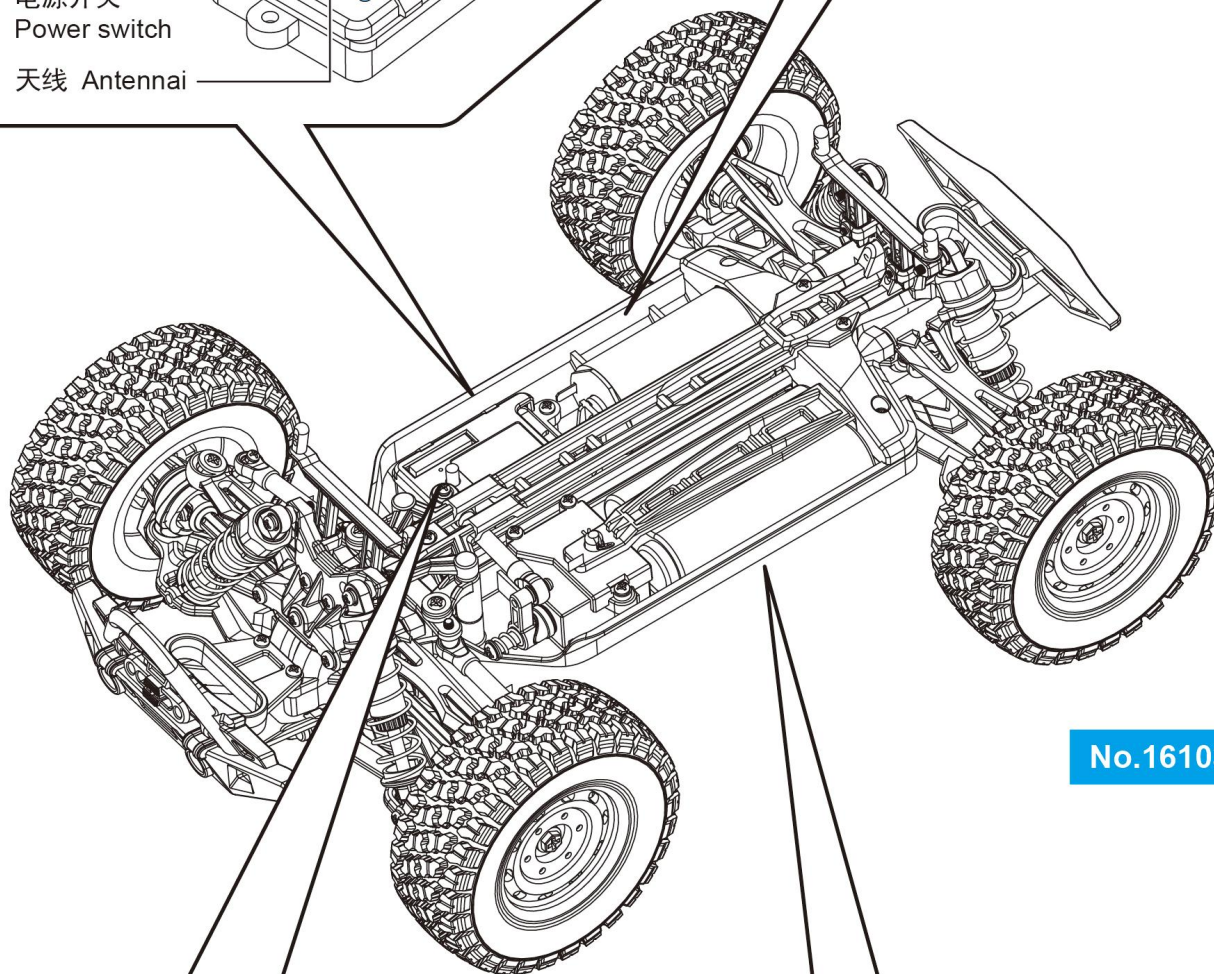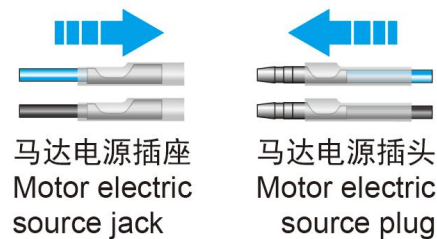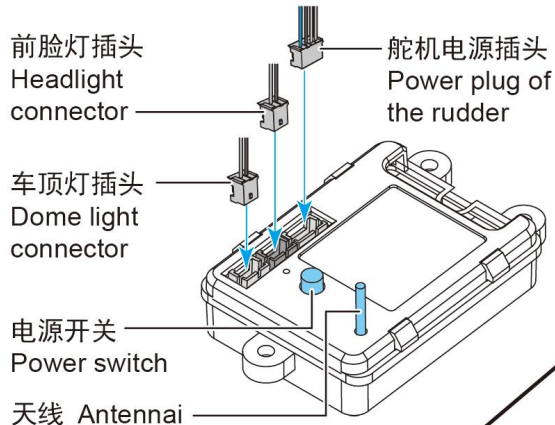   


No.16103

 无刷电调 Brushless electric adjustment

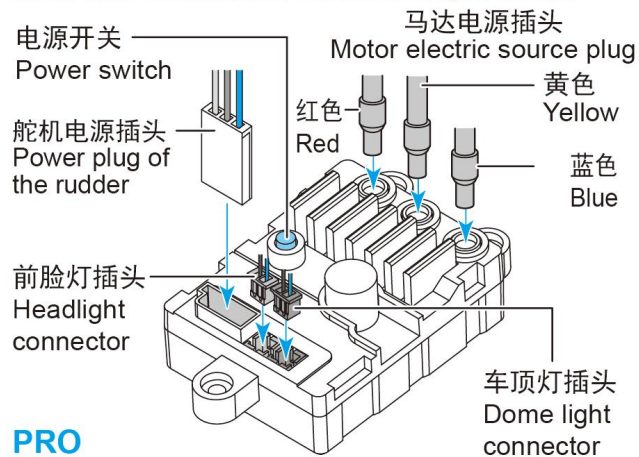

PRO

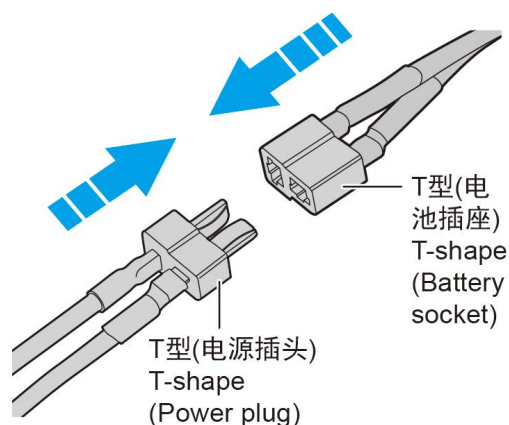 

61 连接电线 Connect wire

有刷电调 Brushed electric

车壳灯插头
Car hull light plug

尾灯插头
Tail light plug

 
电源开关
Power switch

天线 Antennai

舵机电源插头
Power plug of the rudder

马达电源插座
Motor electric source jack

马达电源插头
Motor electric source plug

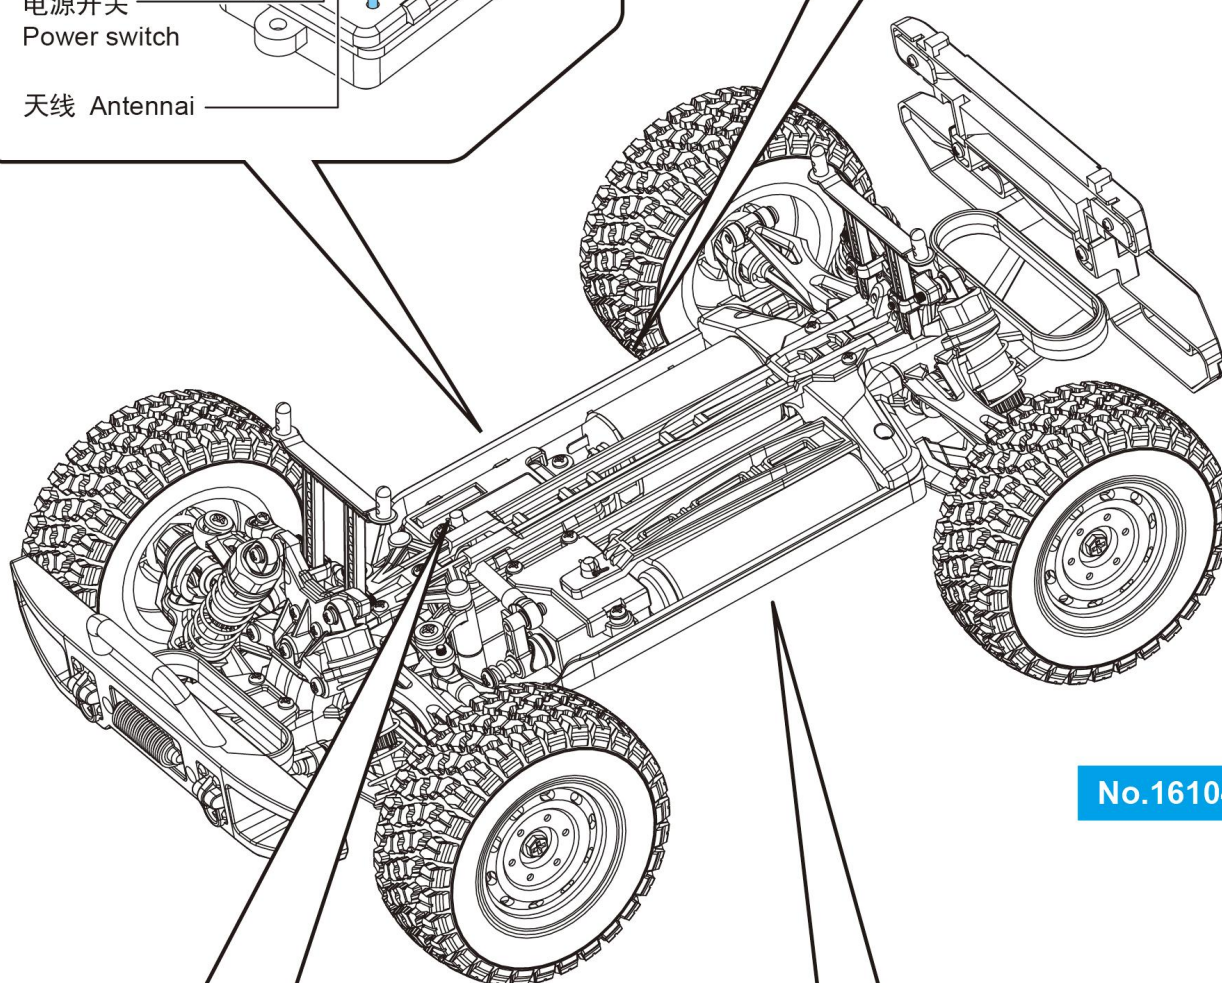

No.16104

无刷电调 Brushless electric adjustment

电源开关
Power switch

舵机电源插头
Power plug of the rudder

车壳灯插头
Car hull light plug

PRO

 
马达电源插头
Motor electric source plug

红色
Red

黄色
Yellow

蓝色
Blue

尾灯插头
Tail light plug

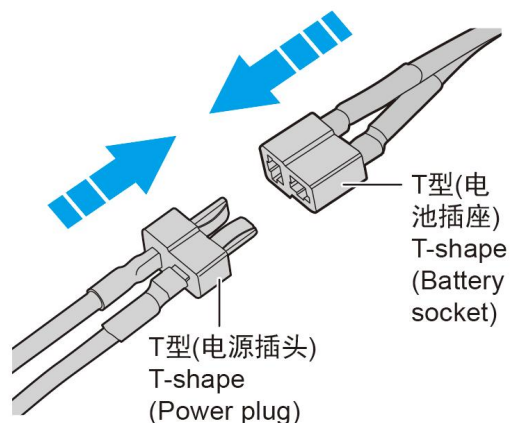

T型(电池插座)
T-shape (Battery socket)

T型(电源插头)
T-shape (Power plug)

有刷电调

Brushed electric

车顶前灯插头
Roof headlight
plug

车顶后灯插头
Roof rear light
plug

 
电源开关
Power switch

天线 Antennai

舵机电源插头
Power plug of
the rudder

马达电源插座
Motor electric
source jack

马达电源插头
Motor electric
source plug

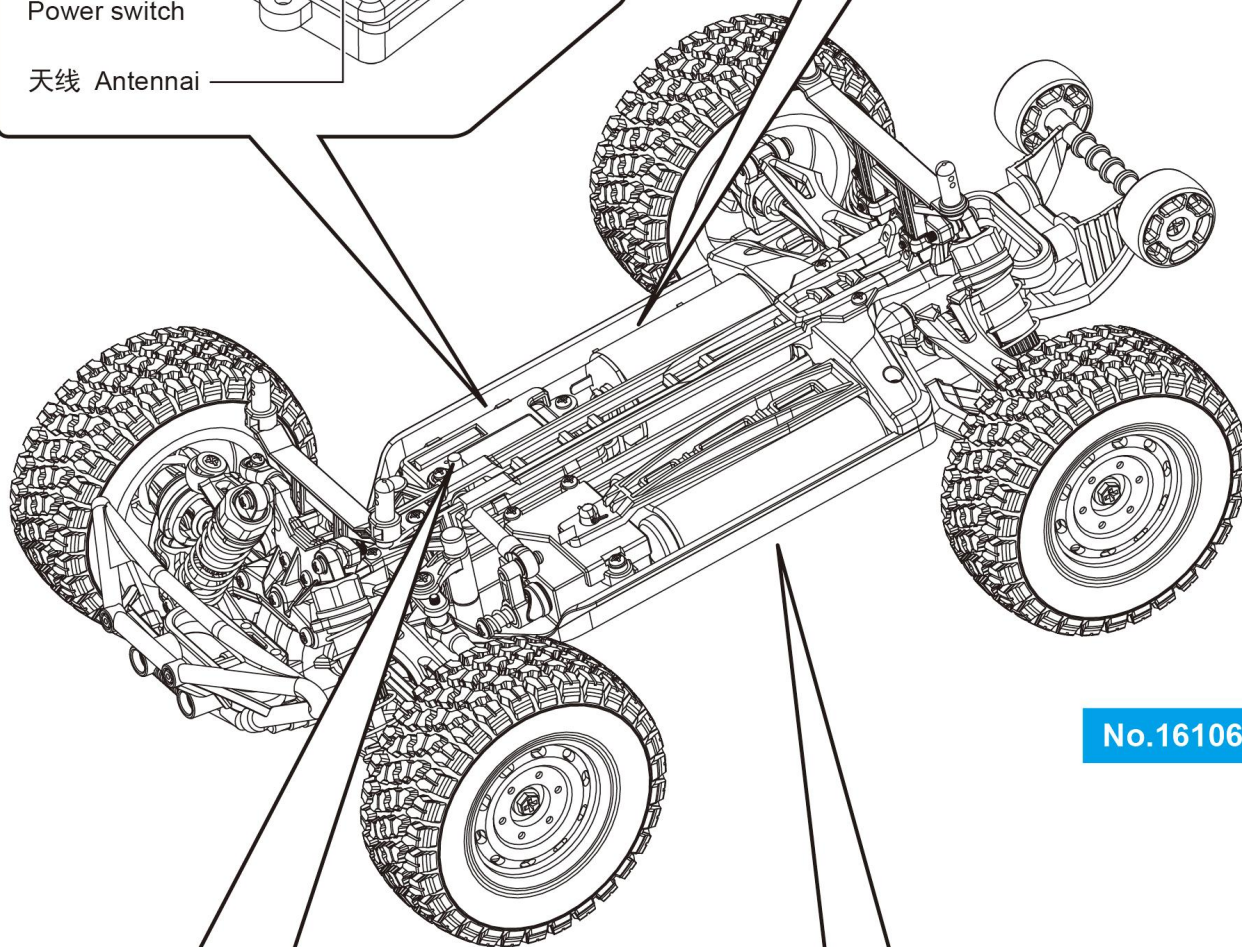

No.16106

无刷电调 Brushless electric adjustment

电源开关
Power switch

舵机电源插头
Power plug of
the rudder

车顶前
灯插头
Roof
headlight
plug

PRO

 
马达电源插头
Motor electric source plug

红色
Red

黄色
Yellow

蓝色
Blue

车顶后灯插头
Roof rear light
plug


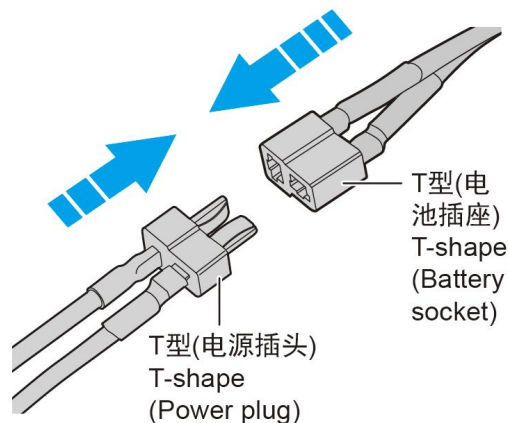


有刷电调
Brushed electric

舵机电源插头
Power plug of
the rudder

电源开关
Power switch

  天线 Antennai

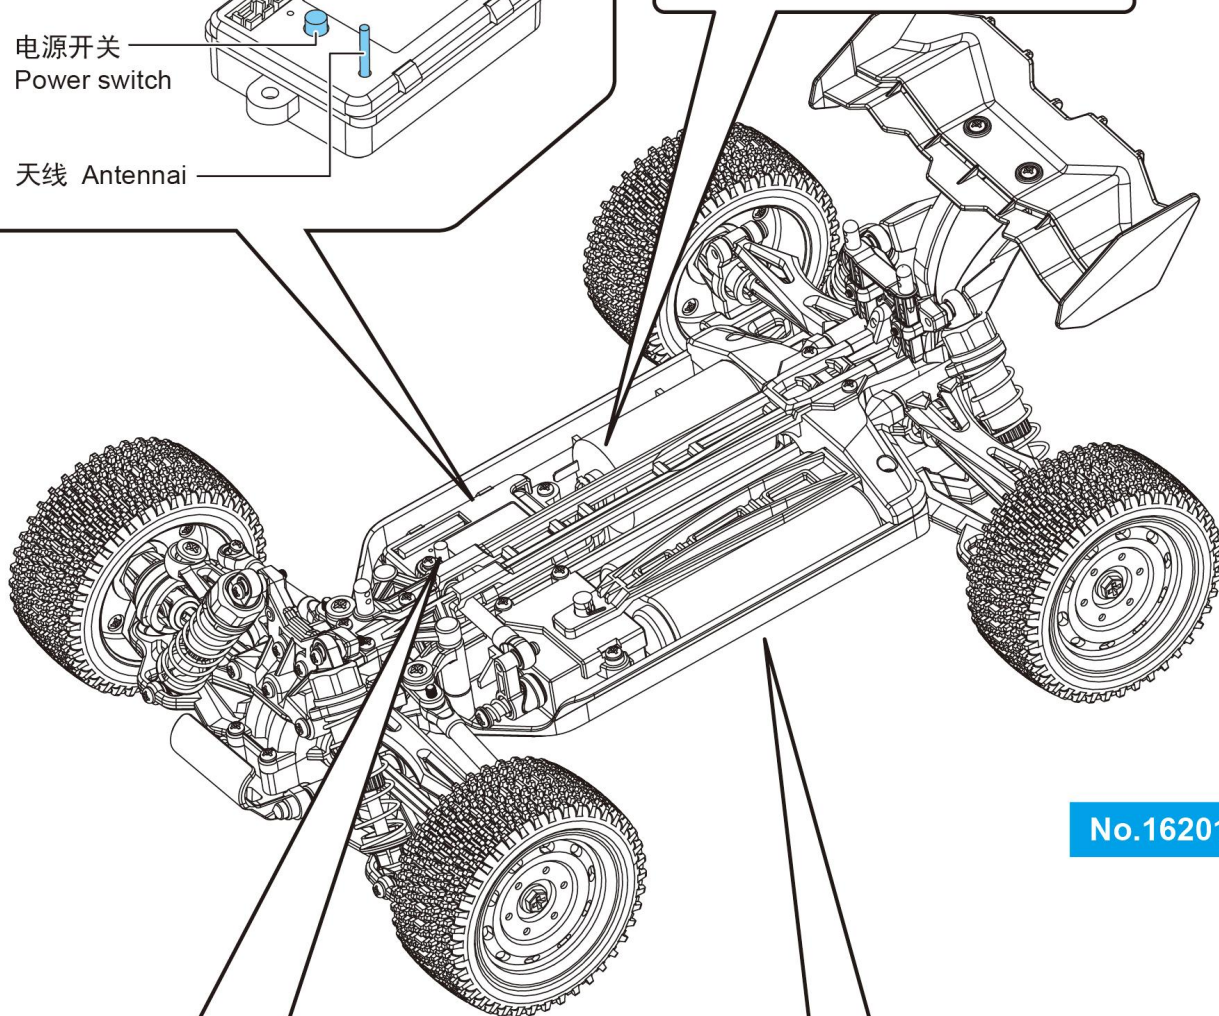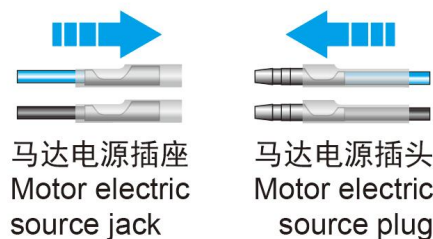

No.16201

无刷电调 Brushless electric adjustment

电源开关
Power switch

 
舵机电源插头
Power plug of
the rudder

马达电源插头
Motor electric source plug


红色
Red

黄色
Yellow


蓝色
Blue

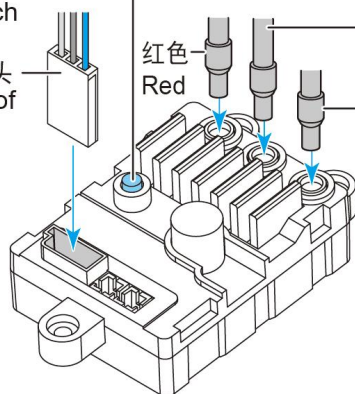

PRO

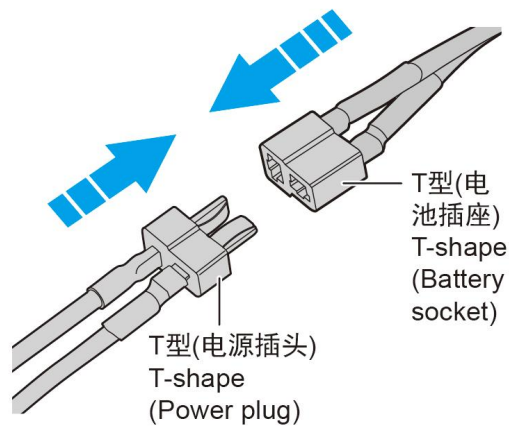 


No.16101

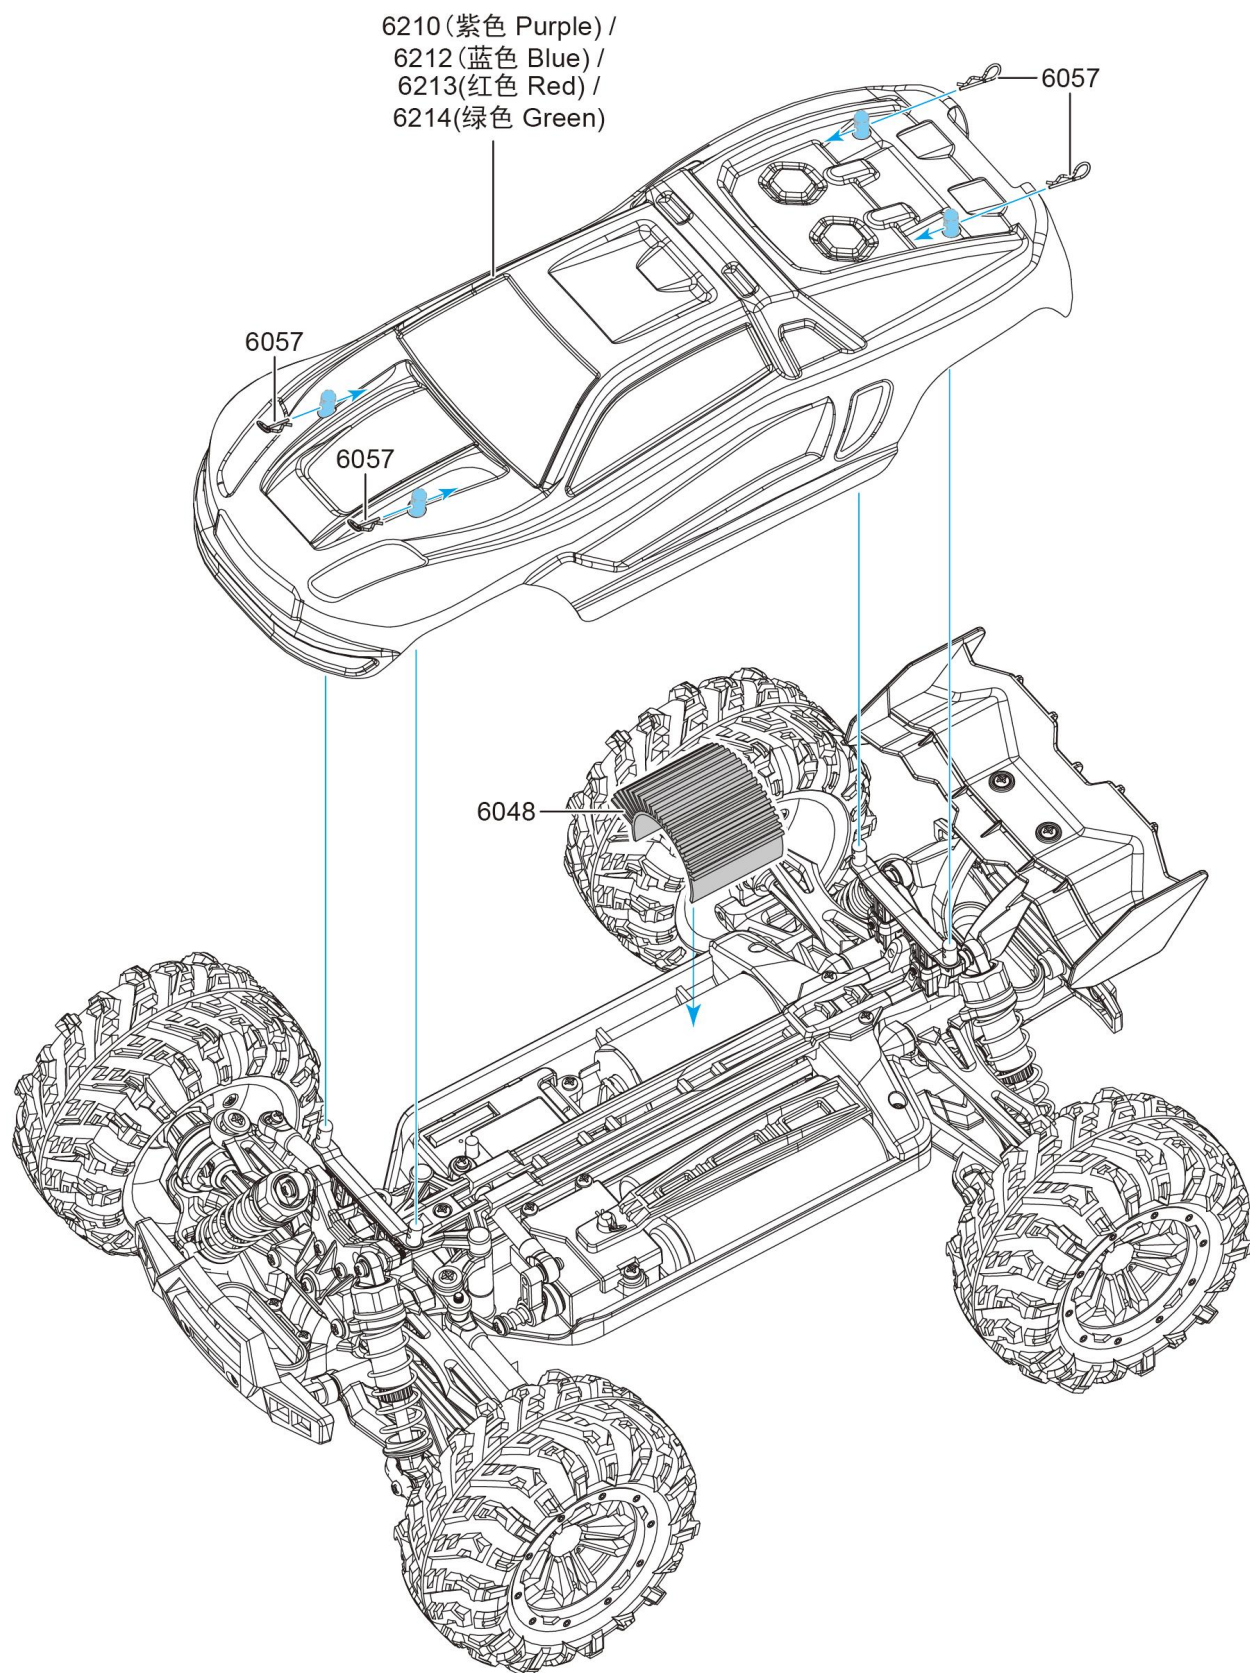 


6057 插销 Bolt

 No.16102

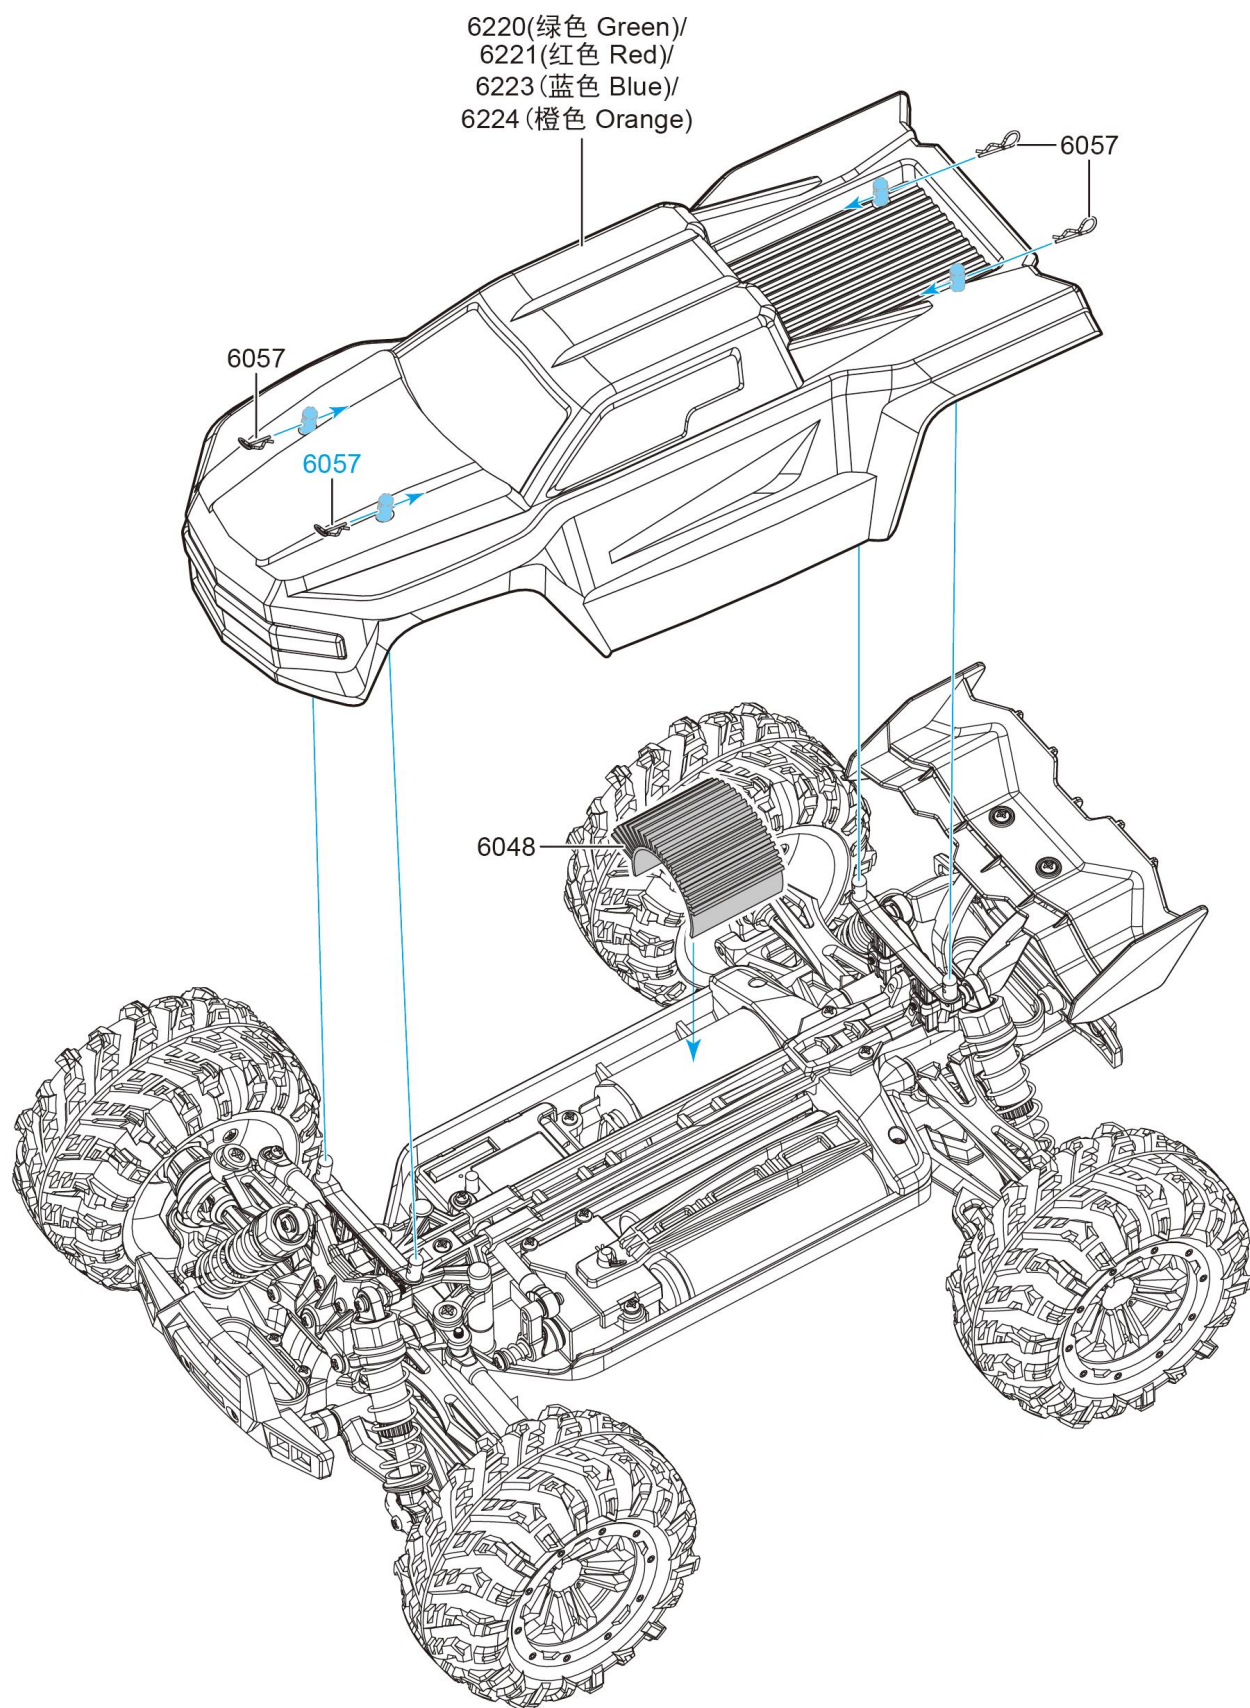


6057 插销 Bolt

 No.16103

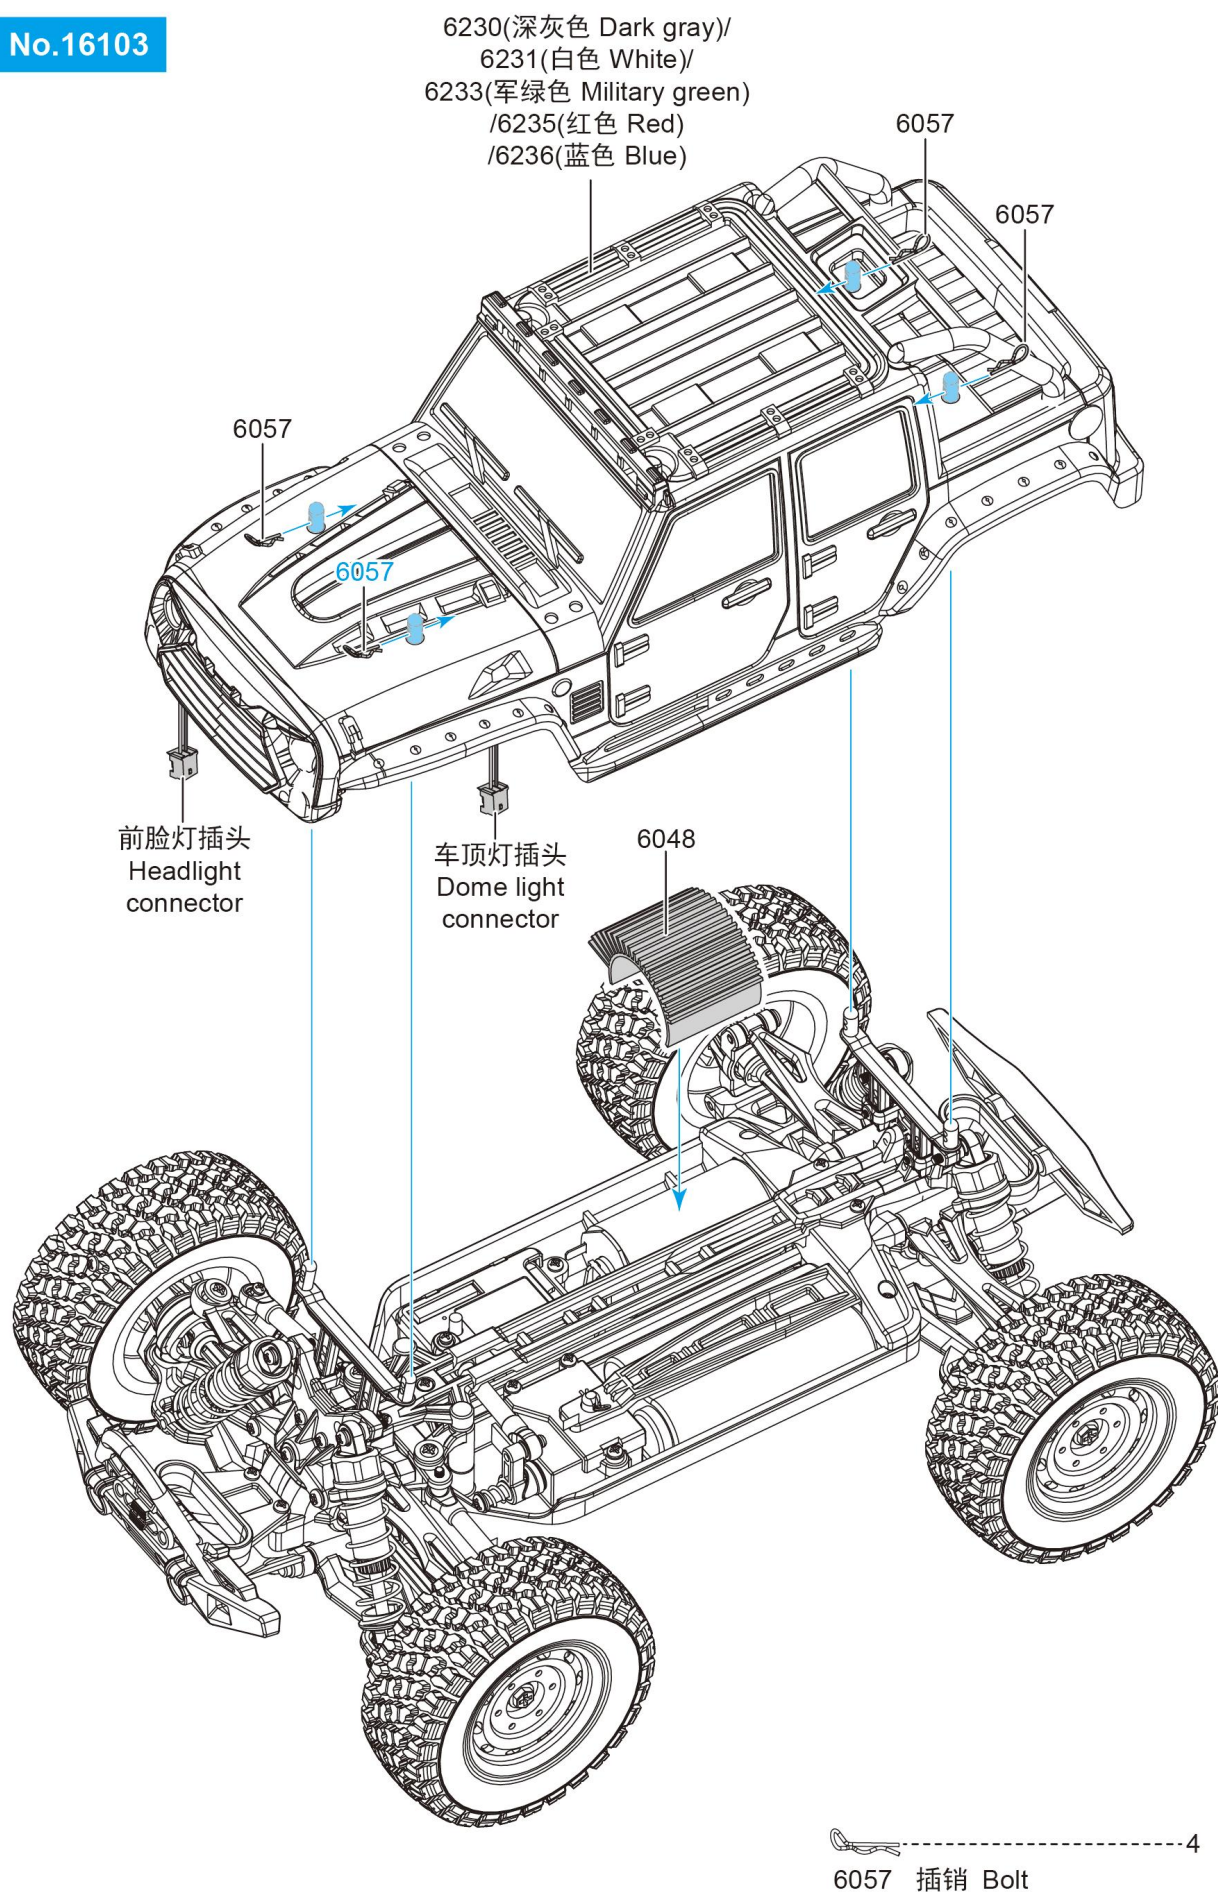


No.16104

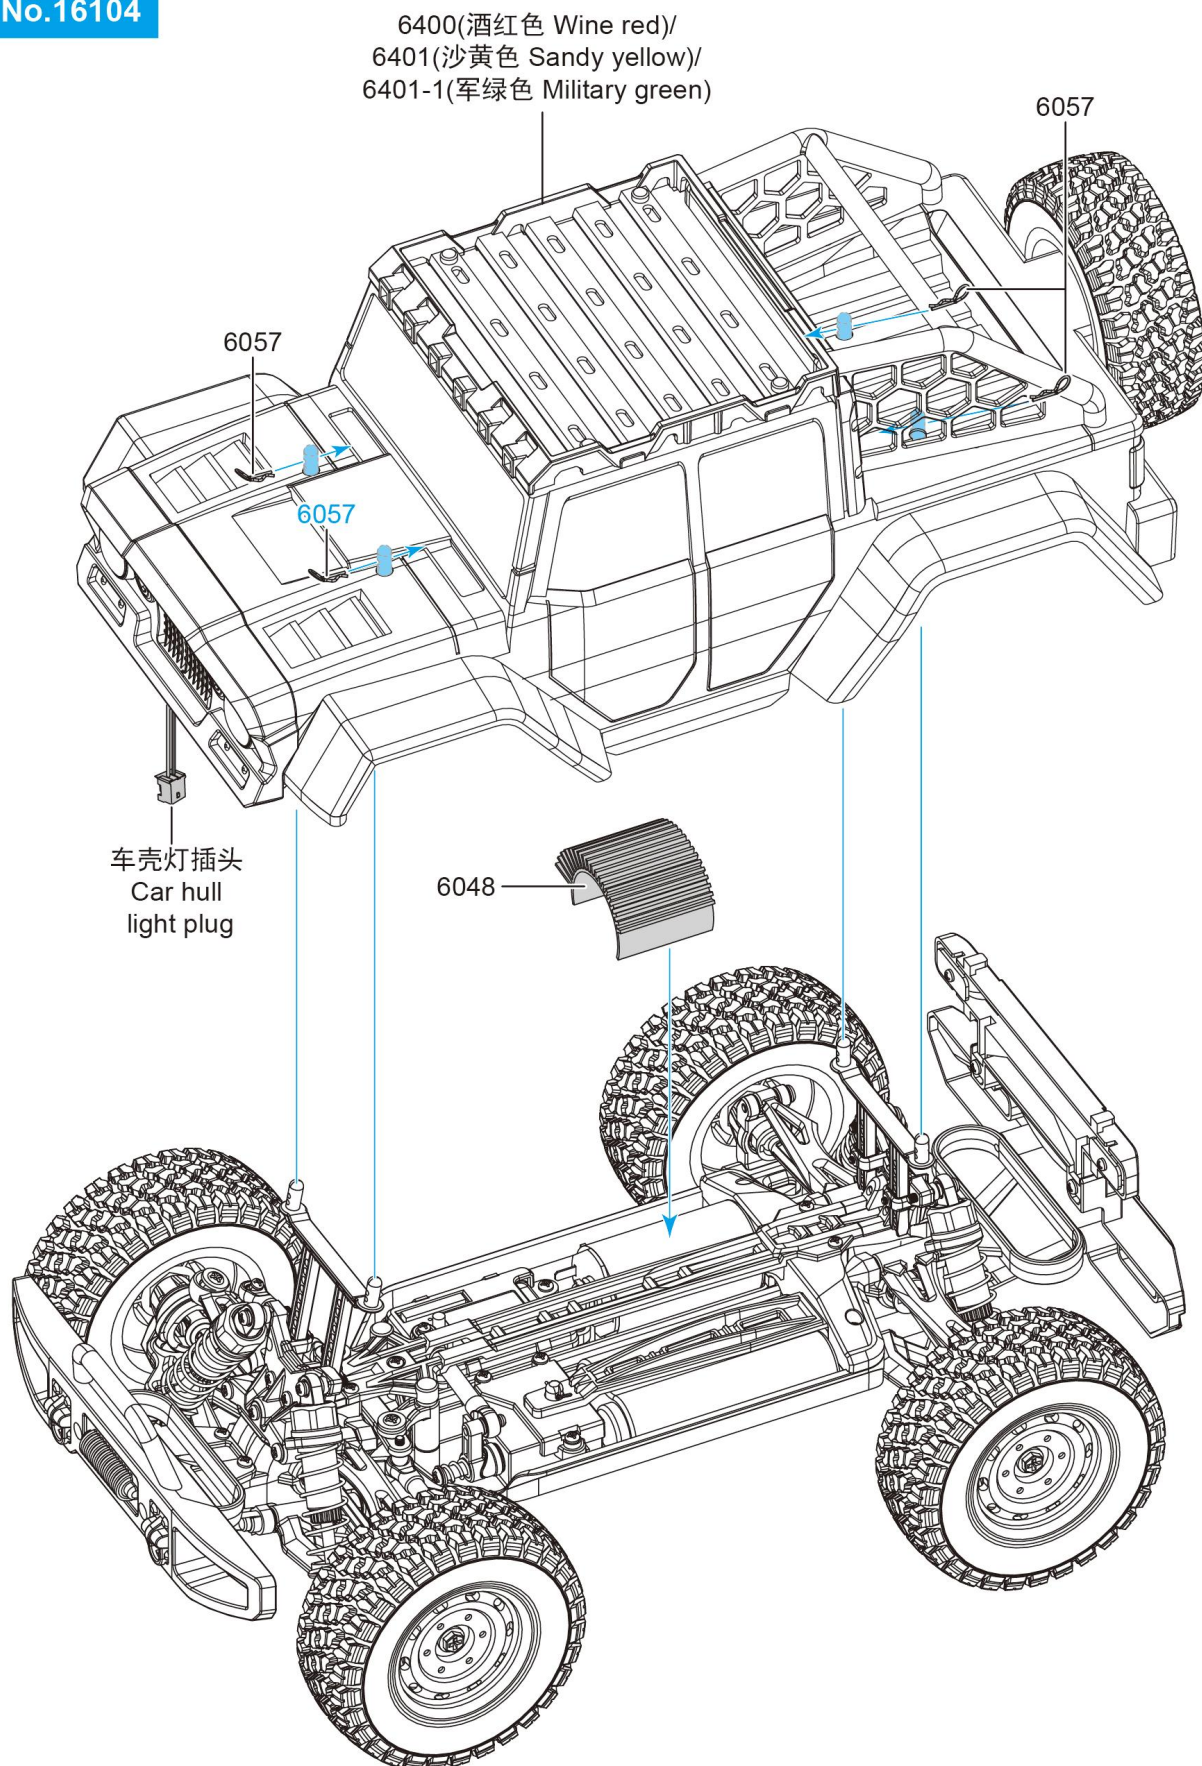 


6057 插销 Bolt

 No.16106

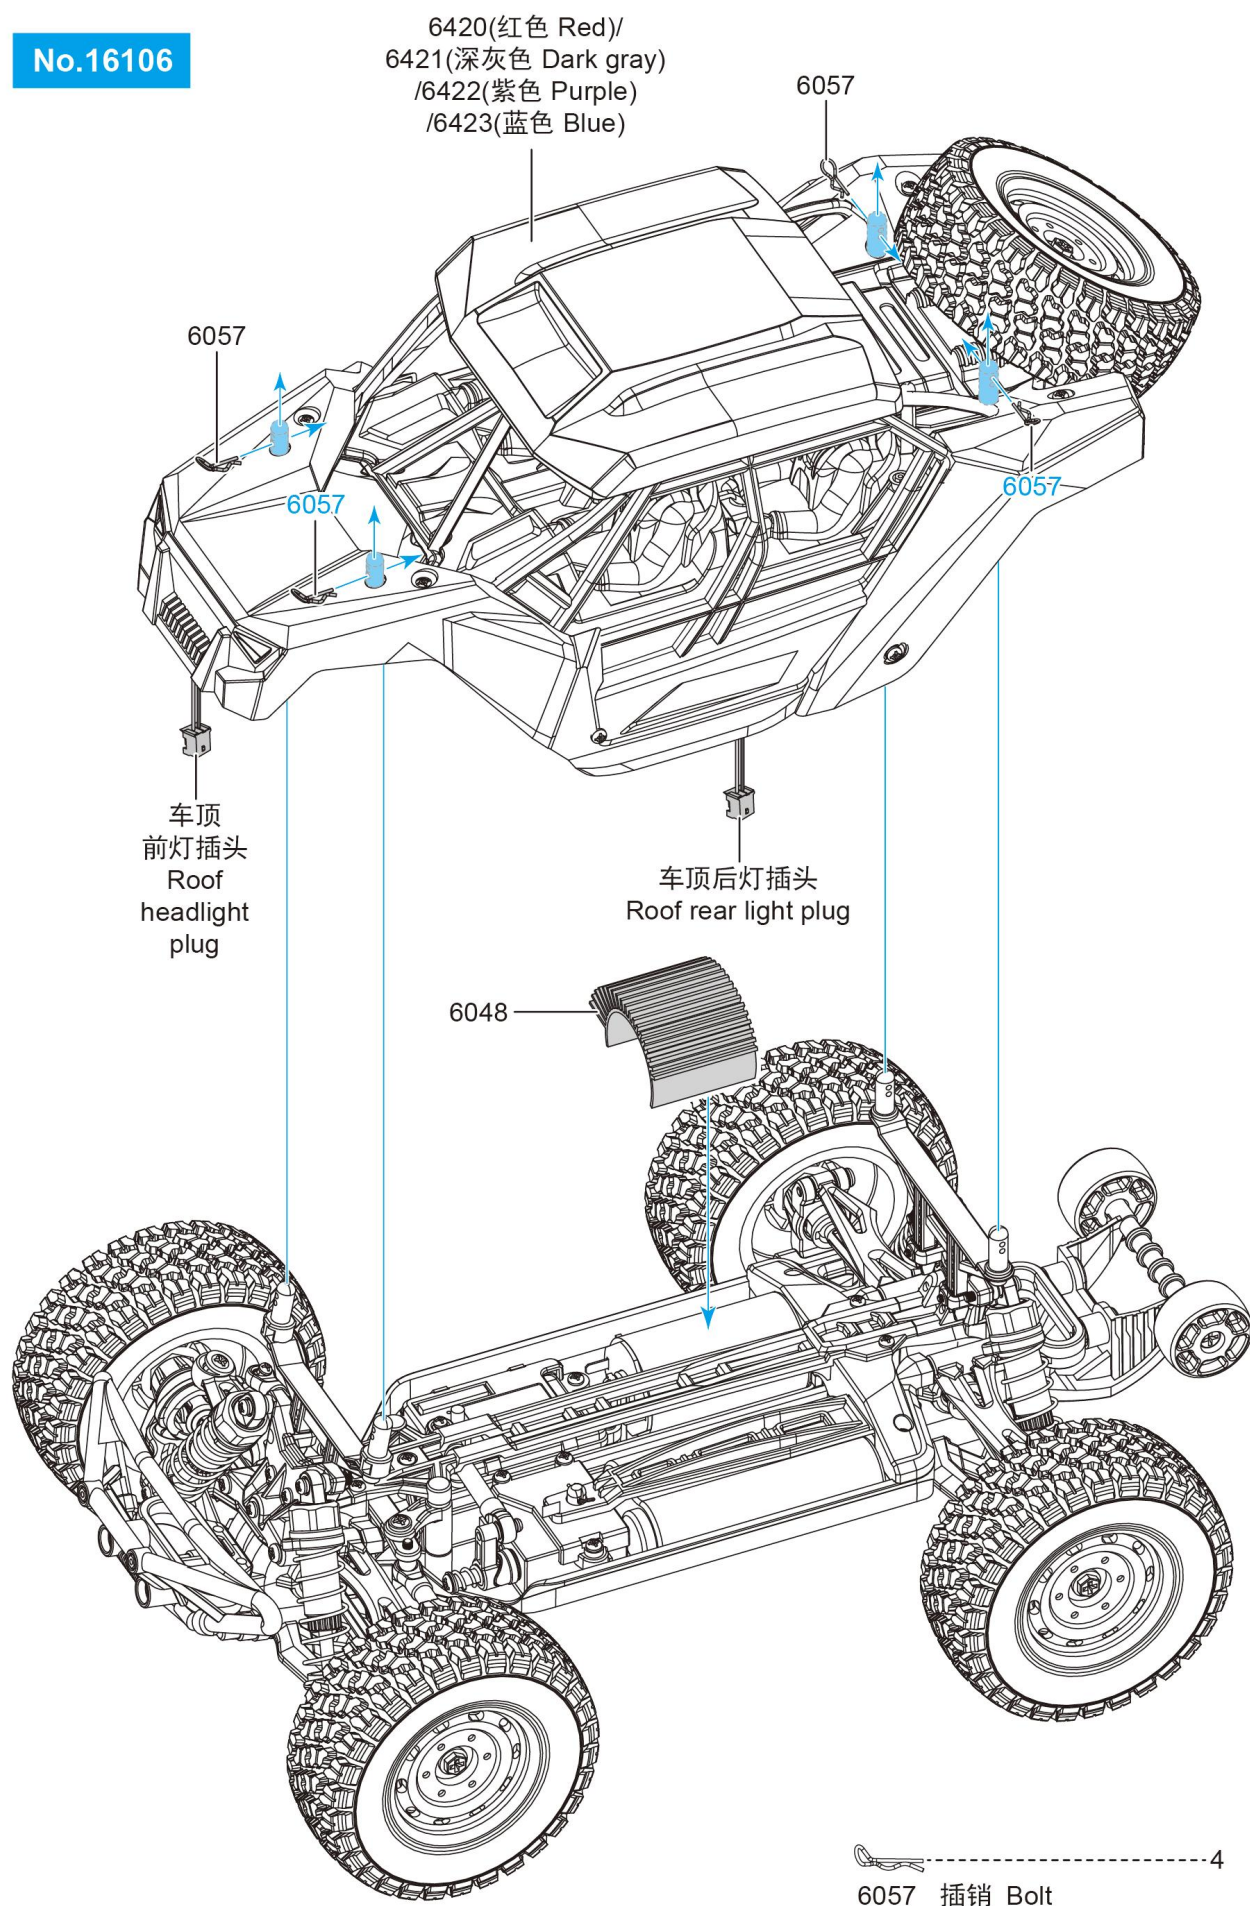


No.16201

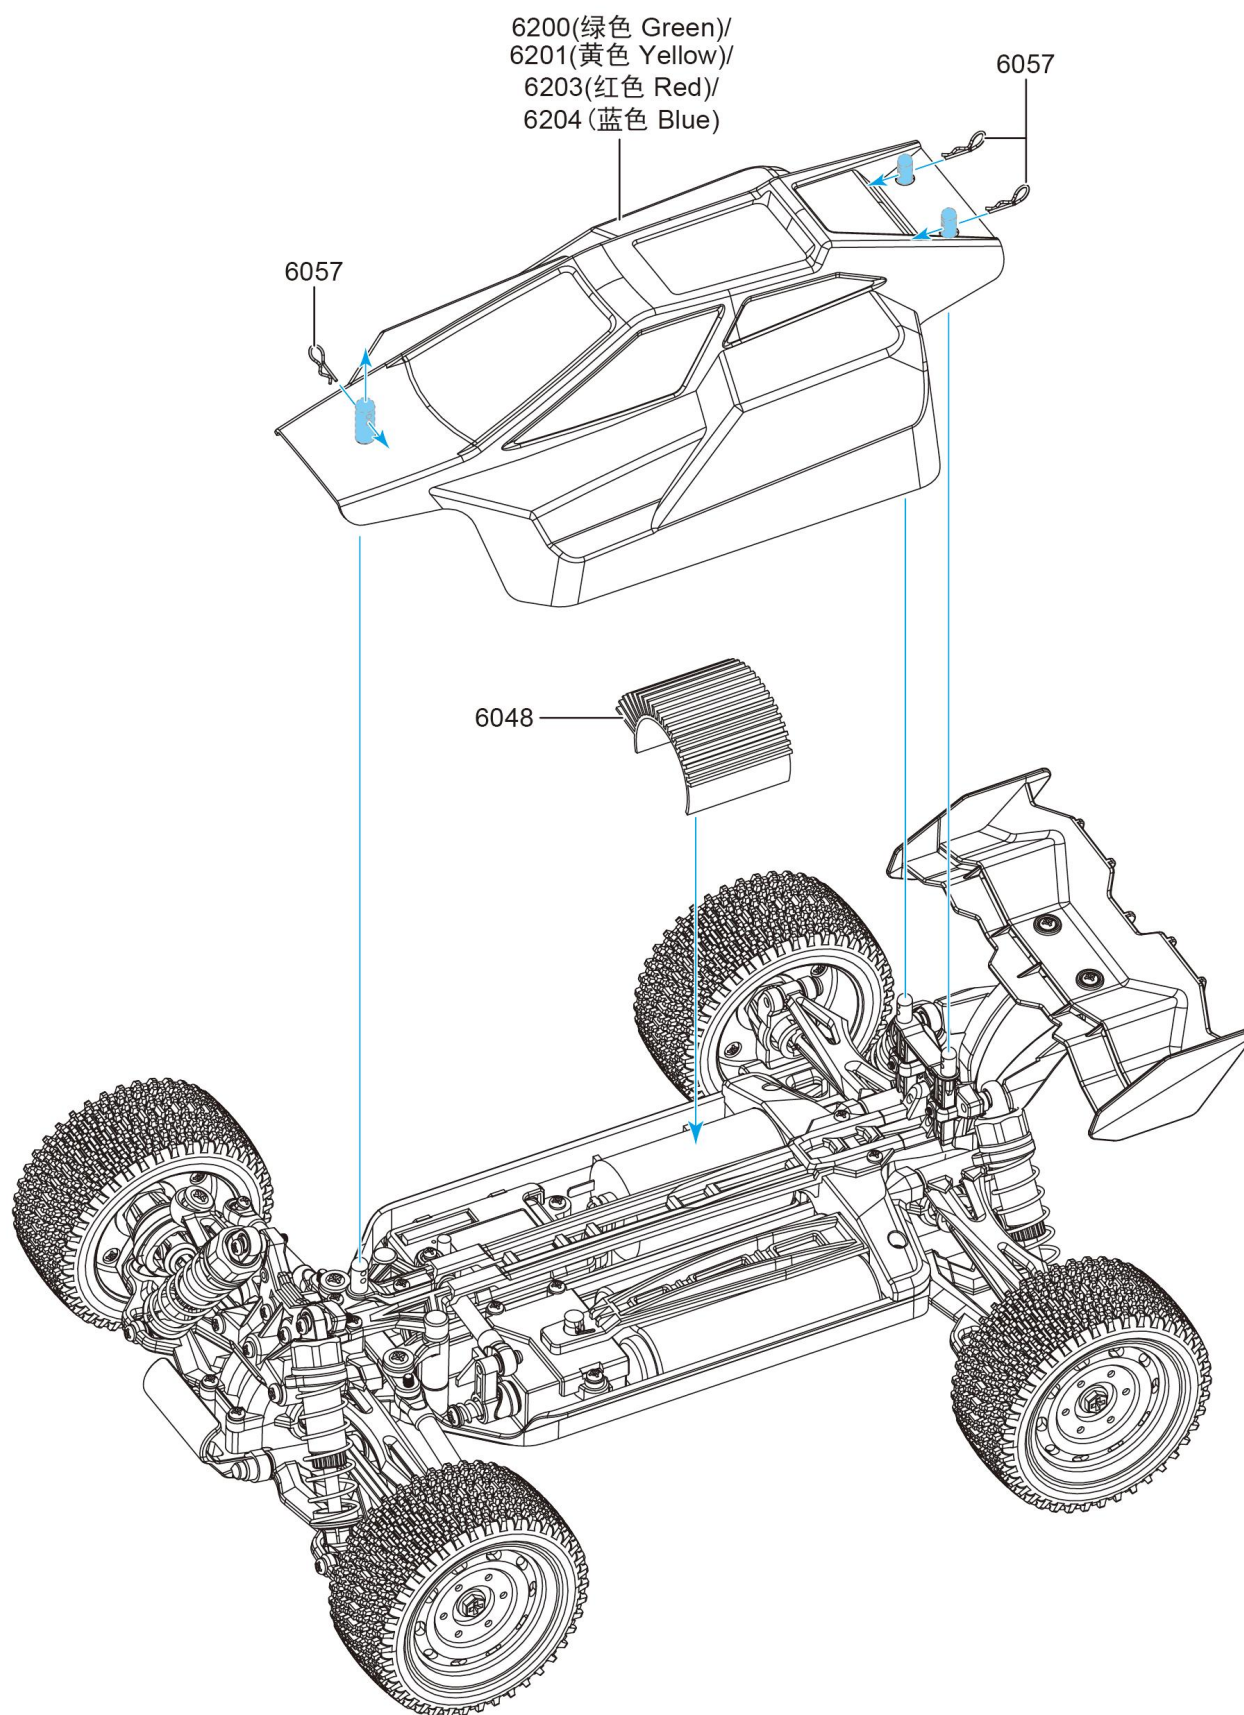 


6057 插销 Bolt

 
模型车配件表 Spare part list

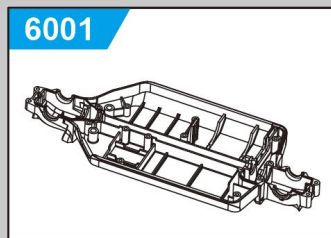


6001
底盘
Chassis

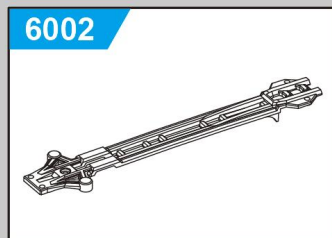 


6002
金属二楼板
Upper deck

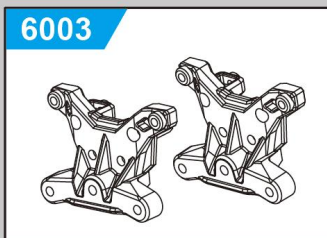 


6003
前后通用减震支架
Shock towers(Fr./Rr.)

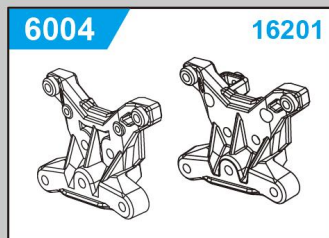 

 
6004 16201
减震支架组件
Shock absorber bracket assembly

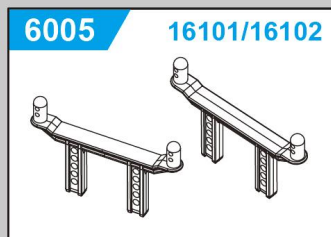


6005 16101/16102
车壳支柱组件
Car shell strut

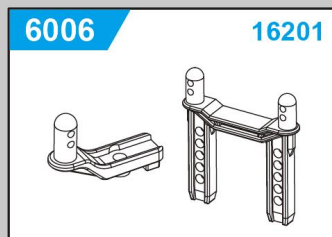 


6006 16201
车壳支柱组件
Car shell strut

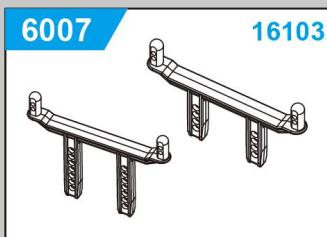 


6007 16103
车壳支柱组件
Car shell strut

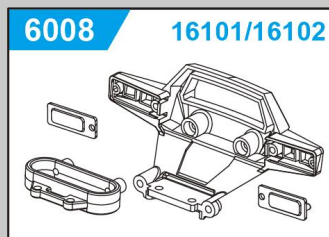 

 
6008 16101/16102
前保险杠组件
Front bumper assembly

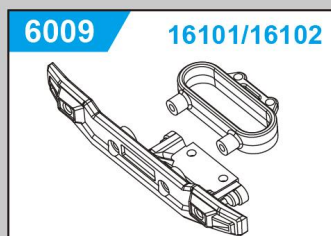

 
6009 16101/16102
后保险杠组件
Rear bumper assembly

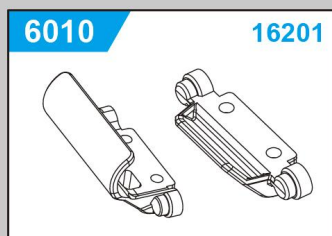

 
6010 16201
前后保险杠组件
Front and rear bumper assembly

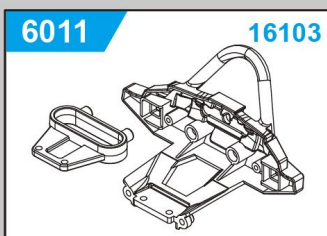


6011 16103
前保险杠组件
Front bumper assembly

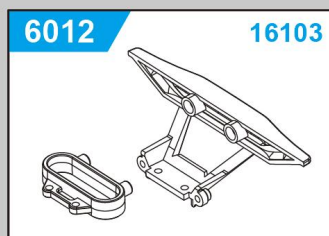 


6012 16103
后保险杠组件
Rear bumper assembly

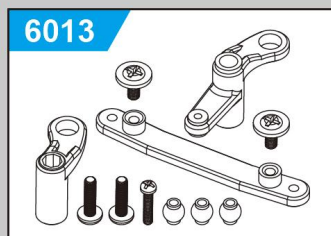 


6013
舵机曲臂组件
Steering assembly

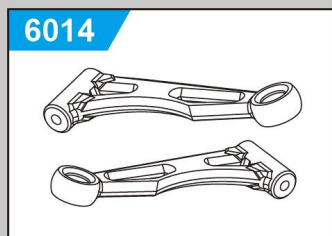 

 
6014
前上摆臂 (L+R)
Front upper sway arms(L/R)

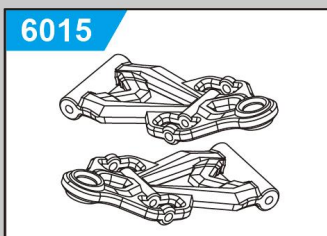


6015
前下摆臂
Front lower sway arms

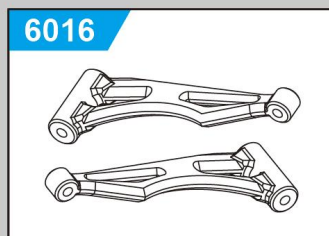 

 
6016
后上摆臂 (L+R)
Rear upper sway arms(L/R)

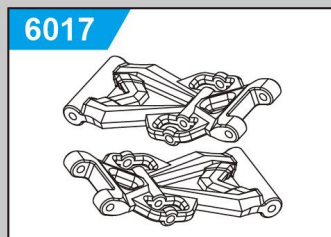


6017
后下摆臂
Rear lower sway arms

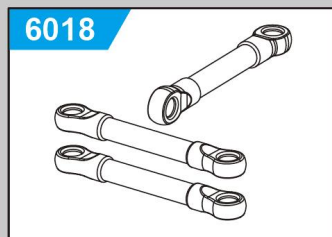 


6018
转向拉杆组件
Steering assembly

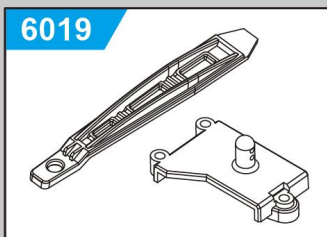 

 
6019
舵机座/电池压条组件
Ervo seat / Battery clasp assembly

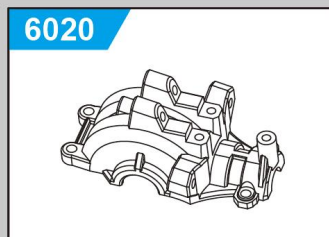


6020
前波箱盖
Front gear box top housing

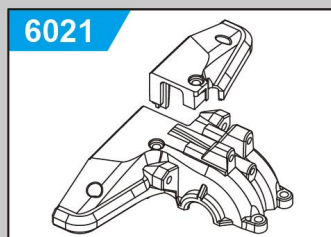 


6021
后波箱盖
Rear gear box top housing

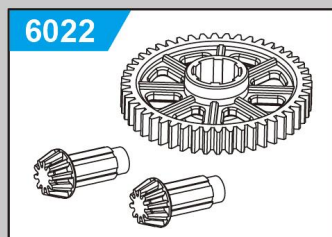 

 6022
主齿轮 / 主动齿轮
Spur gear / Drive pinions

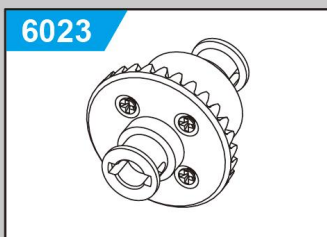


6023
差速器总成
Components differential

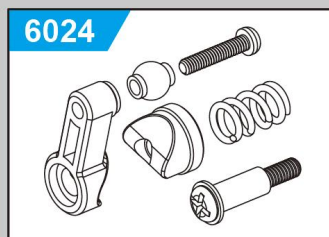 

6024
舵机保护结构组件
Servo protection structure assembly


模型车配件表 Spare part list

 6025

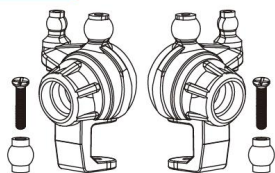

前轴座组件 (L+R)
Front steering assembly(L+R)

 6026

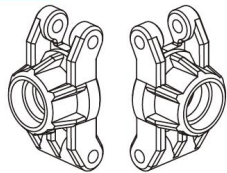


后轴座组件
Rear steering assembly

6027




减震器总成
Shock absorbers

 6028

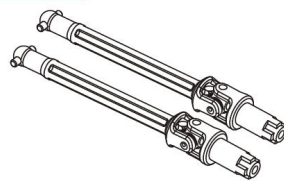

前万向传动节组件
Front universal drive shafts

 
6029

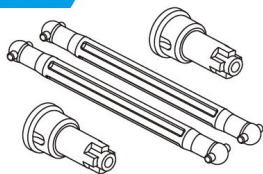

后传动节组件
Rear drive assembly


6030

 16101/16102
/16201

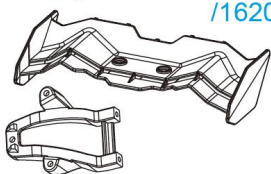

尾翼组件
Rear wing assembly

 6031

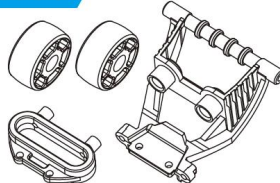

抬头轮组件
Head up wheel assembly

6032



 
塑胶球头
Plastic pivot balls

6033



70MM越野轮胎(黑轂)
70mm Off-road tires
(Black rims)

6034

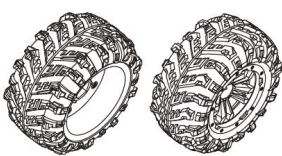

85MM大脚轮胎(黑轂)
85mm Monster tires
(Black rims)

6035



 
82MM越野轮胎 (深灰轂)
82mm Off-road tires
(Dark grey rims)

6036




中传动六角轴
Center drive shaft

6037

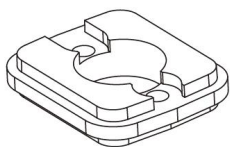


电机固定座(有刷)
Motor mount(Brush)

 6038

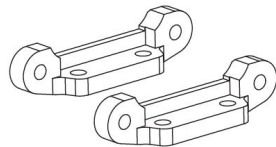


前后臂码
Suspension braces

 6039

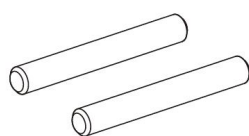


转向光轴
Steering posts

 6040

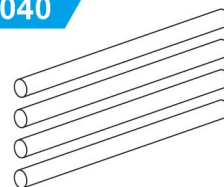

摆臂轴销
Sway arm inside hinge pins

 
6041

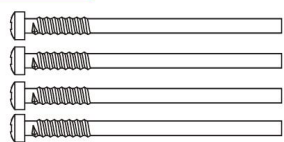

PBH 2.5x29.5 mm

自攻台阶圆头螺丝
Self tapping step round
head screw

 
6042

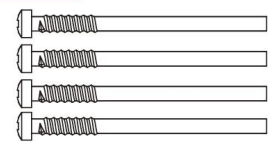

PBH 2.5x25.5 mm

自攻台阶圆头螺丝
Self tapping step round
head screw

 
6043



PBH 2.5x14 mm

自攻台阶圆头螺丝
Self tapping step round
head screw

 6044

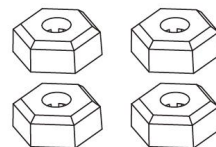

金属六角结合器
Metal hex coupler

 
6046



6.35x9.5x3.2 mm


滚珠轴承
Ball bearings

6047

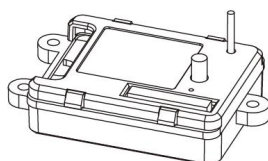


一体式有刷电调
Integrated brushed ESC

 6048

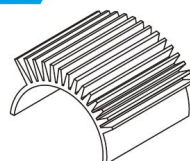

马达散热片
Aluminum motor heat sink

 6049

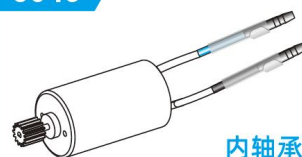


390电机总成
390 Motor assembly

内轴承
Inner bearing

模型车配件表 Spare part list

 6050

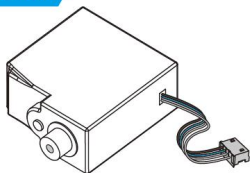


五线17G转向舵机
Steering servo(5-wire,17g)

6051



18650锂离子电池
18650 Li-ion battery

 6052

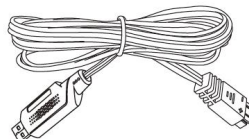

USB平衡充
USB charger

 
6053



有刷遥控器总成
Brush transmitter

6054


16101/16102

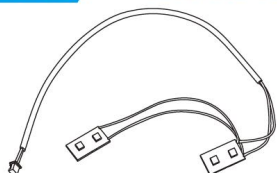

大脚车前灯组
Monster truck headlight assembly

6055

 
16103

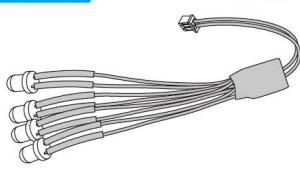

吉普车前灯组
Jeep headlight assembly


6056

 16103

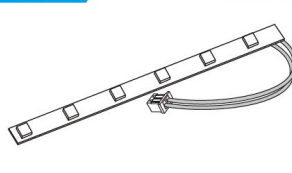

吉普车顶灯组
Jeep roof light assembly

 6057

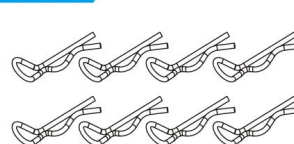

R型金属插销
R Metal clips

6058



2.6x15 mm

 
法兰螺丝
Flange screw

6059



减震调节扣环
Shock adjustment collar


6060



十字螺丝刀
Small screw driver


6061

 16103

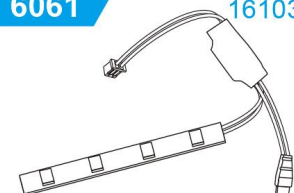

越野车前脸灯组
Off-road vehicle front light assembly

 6062



8x12x3.5 mm

滚珠轴承
Ball bearings

6095



无刷遥控器总成
Brushless transmitter

6100



BM 2.5x6 mm

机丝螺丝
Machine screw

6101



PBH 2.6x8 mm

自攻圆头螺丝
Self tapping round head screw


6103



PBH 2.6x10 mm

自攻圆头螺丝
Self tapping round head screw

 6104

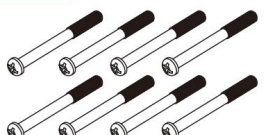

PBH 2.6x25 mm

半牙螺丝
Half thread screw


6105



BM 2.5x14 mm

机丝圆头螺丝
Machine round head screw

 
6106



PWB介(Meson)8 2.6x6 mm

自攻带介螺丝
Self tapping meson screw

 6107

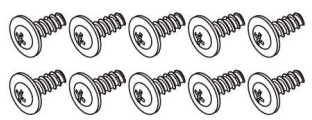

PWB介(Meson)6 2.6x6 mm

介子螺丝
Meson screw

6108



PWB介(Meson)8 2.3x11 mm

自攻带介螺丝
Self tapping meson screw

6109



3x4x13x6.2 mm

自攻台阶螺丝
Self tapping step screw

6110




KBH 2.3x7 mm

十字沉头自攻螺丝
Cross countersunk head self tapping screw


模型车配件表 Spare part list



 
6111
自攻圆头螺丝
Self tapping round head screw

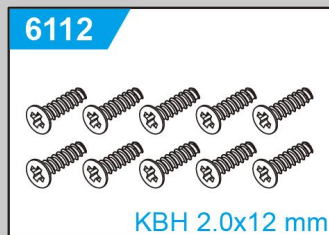

 
6112
自攻沉头螺丝
Countersunk self-tapping screw

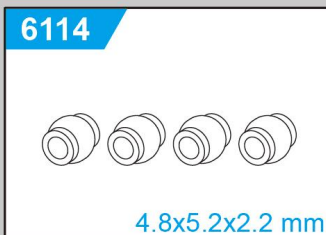


6114
金属球头套
Metal pivot balls

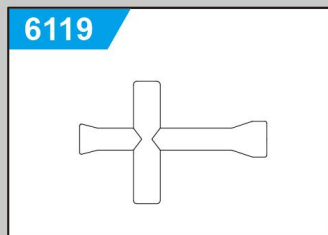 


6119
金属六角套筒
Metal hexagon cylinder

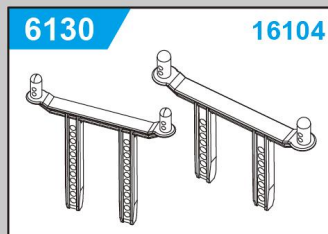 


6130
车壳支柱组件
Body stanchion

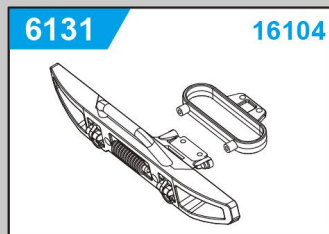 


6131
前保险杠组件
Front bumper assembly

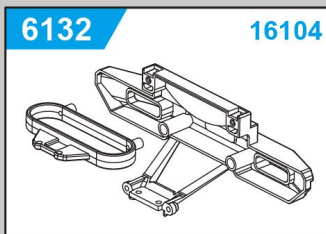 


6132
后保险杠组件
Rear bumper assembly

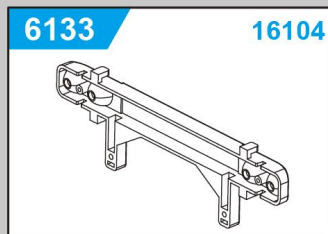 


6133
后灯座
Rear lamp holder

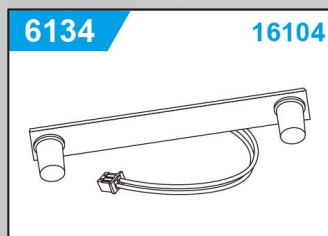 

6134
前雾灯
Front fog light

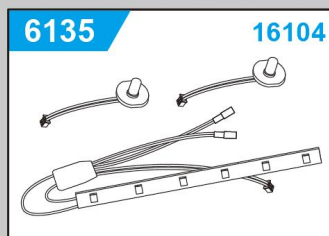 


6135
前灯组件
Front light assembly

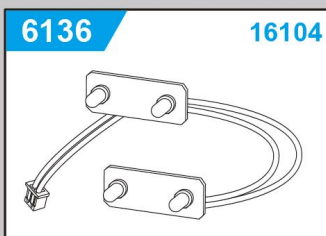 


6136
后尾灯
Rear tail light



 
6137
82MM越野轮胎 (印胎纹)
82mm Off-Road Tires
(Printed Tread Pattern)

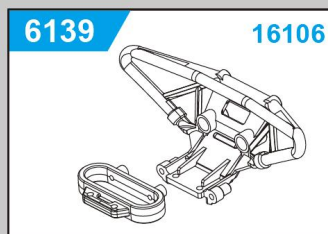


6139
前保险杠组件
Front bumper assembly

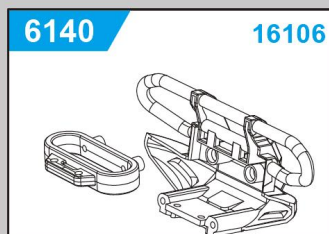 


6140
后保险杠组件
Rear bumper assembly

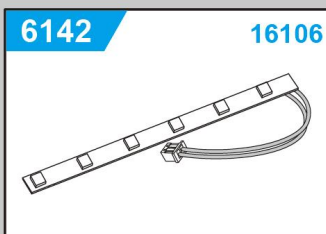 


6142
后顶灯
Rear roof light

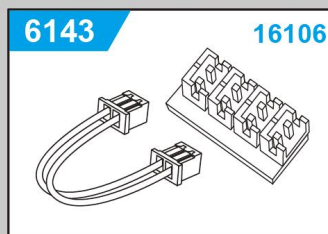 

 
6143
四孔端子接口
Four hole terminal interface

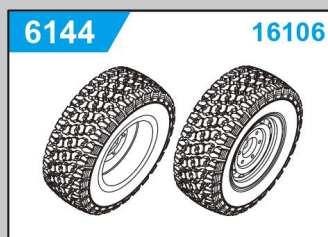

 
6144
82MM越野轮胎 (红圈)
82mm off-road tires
(Red rims)

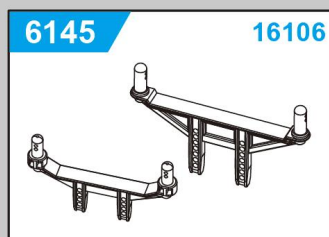


6145
车壳支柱组件
Body support assembly

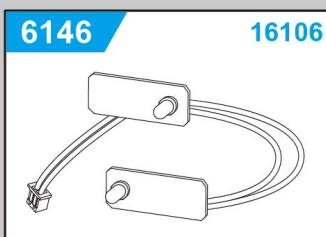 

6146
前脸灯
Front headlight

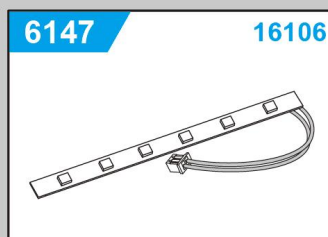 


6147
前顶灯
Front roof light

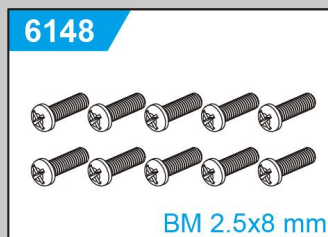 


6148
十字圆头机牙螺丝
Cross round head machine tooth screw



 6149
十字沉头机牙螺丝
Cross countersunk head machine screw

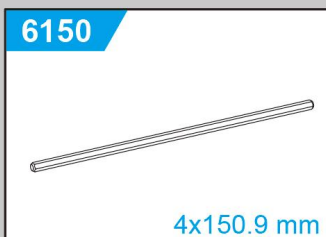


6150
中传动六角轴
Center drive shaft

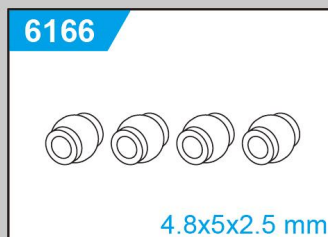 

6166
金属球头套
Metal pivot balls

模型车配件表 Spare part list

 6167



BM 2.5x10 mm

十字圆头机牙螺丝
Cross round head
machine tooth screw

6199




PBH 2.6x12 mm

十字圆头自攻螺丝
Cross round head self
tapping screw

6200

 
16201

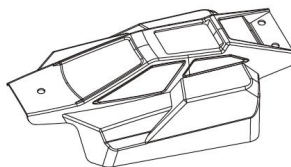

车壳(绿色)
Car shell(Green)

6201

 
16201

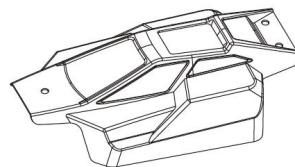

车壳(黄色)
Car shell(Yellow)

6203

 
16201PRO

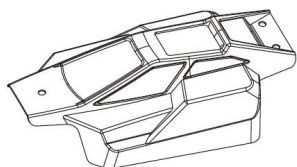

车壳(红色)
Car shell(Red)

6204

 
16201PRO

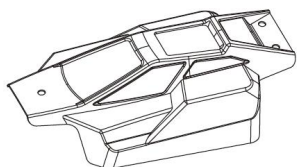

车壳(蓝色)
Car shell(Blue)

6210

 
16101

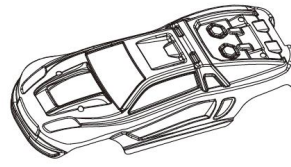

车壳(紫色)
Car shell(Purple)

6212

 
16101

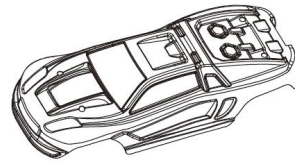

车壳(蓝色)
Car shell(Blue)

6213

 
16101PRO

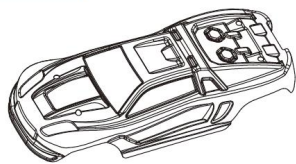

车壳(红色)
Car shell(Red)

6214

 
16101PRO

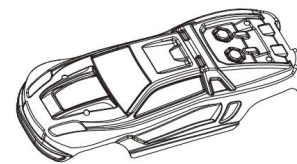

车壳(绿色)
Car shell(Green)

6220

 
16102

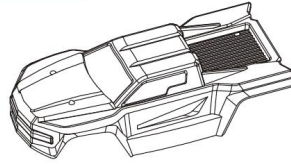

车壳(绿色)
Car shell(Green)

6221

 
16102

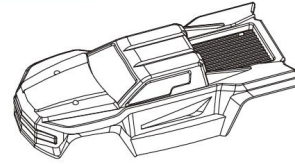

车壳(红色)
Car shell(Red)

6223

 
16102PRO

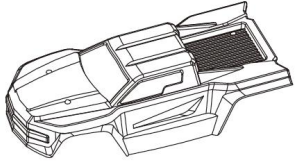

车壳(蓝色)
Car shell(Blue)

6224

 
16102PRO

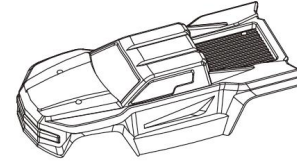

车壳(橙色)
Car shell(Orange)

6230

 
16103

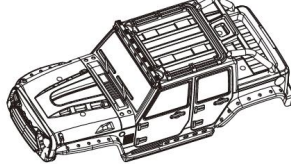

车壳总成(深灰色)
Car shell assembly
(Dark gray)

6231

 
16103

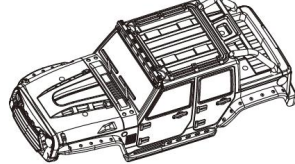

车壳总成(白色)
Car shell assembly
(White)

6233

 
16103

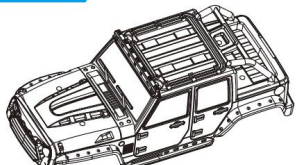

车壳总成(军绿色)
Car shell assembly
(Military green)

6235

 
16103PRO

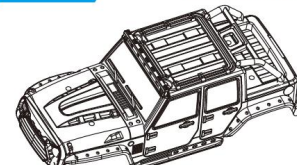

车壳总成(红色)
Car shell assembly
(Red)


6236

 16103PRO

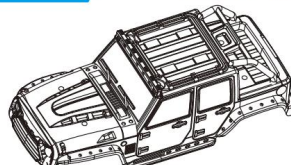

车壳总成(蓝色)
Car shell assembly
(Blue)

 6300

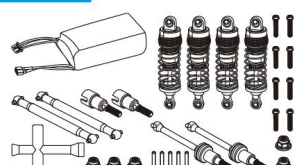


减震器+锂电池+金属传动轴
Shock absorbers+Li-Po
battery+Metal transmission
shaft

6301



金属液压减震总成
Metal hydraulic shock
absorber assembly

 
6302

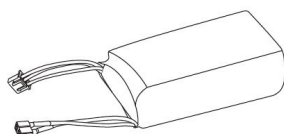

7.4V 1300mAh


703060锂电池(软包)
703060 Li-Po battery
(soft)

 6303

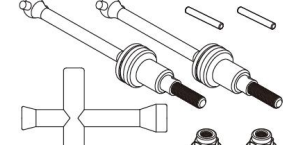

金属前一体式CVD传动轴
-有刷
Metal front integrative CVD
transmission shaft-brush

 
6304

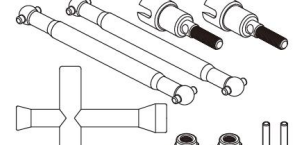

金属后传动轴-有刷
Metal rear transmission
shaft-brush


模型车配件表 Spare part list

 6305

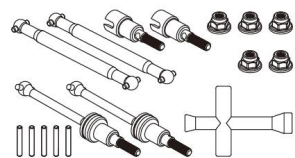


金属前+后传动轴-有刷(整套)
Metal front & rear drive shaft
- brushed (complete set)

 6306

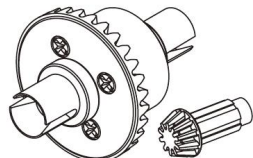


金属差速器总成
Metal components
differential

 6307

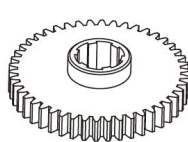


主齿轮 (粉末冶金)
Spur gear (Powder
metallurgy)

 6308

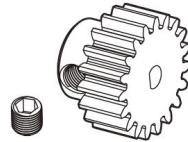


电机齿轮 (粉末冶金)
Motor gear (Powder
metallurgy)

 6309

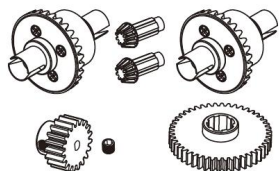


差速器传动组件
Differential drive assembly

 6310

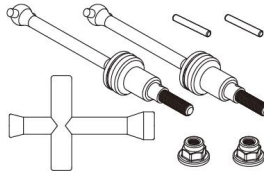


金属前一体式CVD传动轴(无刷)
Metal front integrative CVD
transmission shaft (Brushless)

 6311

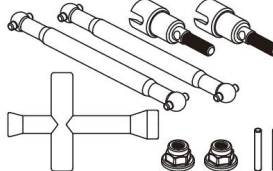


金属后传动轴(无刷)
Metal rear transmission
shaft (Brushless)

 6312

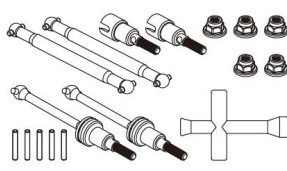

金属前+后传动轴-无刷(整套)
Metal front & rear drive shaft
- brushless (complete set)

 
6313

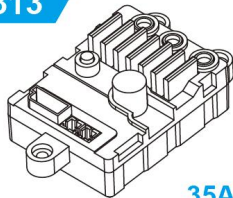

35A 2S


一体式无刷电调
Integrated brushless
electric adjustment

 6314

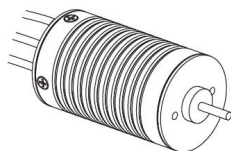

2847无刷电机
2847 Brushless motor

 6315

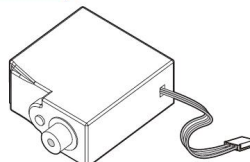

三线17G数字舵机
Three wire 17G digital
servo

 
6316



7.4V 1500mAh


18650锂离子电池
18650 Li-ion battery

6317

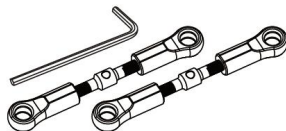


可调转向拉杆
Adjustable steering tie rod

 6318

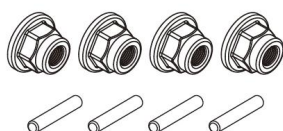


M4法兰防松螺母10
M4 jam nut flange 10

 6319

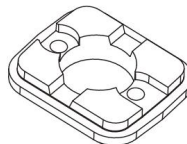


18牙电机座 (无刷)
18 tooth motor seat
(Brushless)

 6320

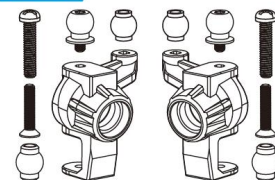


金属转向节组件(L+R)
Metal turn burl assembly
(L+R)

 6321

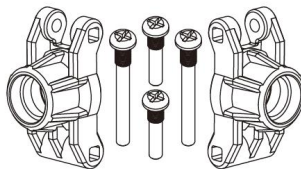

金属后轴座组件(L+R)
Metal rear steering
assembly (L+R)

 6322

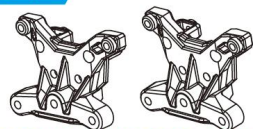

16101/102/103/104/106
(含 contain PRO)

金属减震支架组件(蓝色)
Metal Shock towers
assembly (Blue)

 
6323



16101/102/103/104/106
(含 contain PRO)


金属减震支架组件(红色)
Metal Shock towers
assembly (Red)

6324

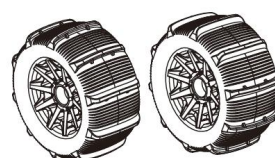


沙地轮胎 (L+R)
Sand tires (L+R)

 6326

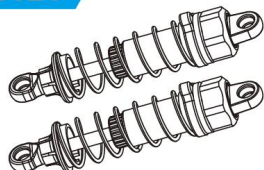


金属减震总成(可调)蓝色
Metal shock absorbers
(can adjust) blue

 6327

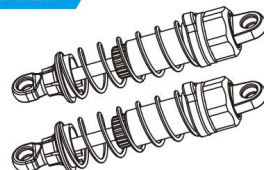

金属减震总成(可调)红色
Metal shock absorbers
(can adjust) red

 
6328

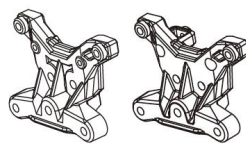

16201(含 contain PRO)

金属减震支架组件(蓝色)
Metal Shock towers
assembly (Blue)







 
6329

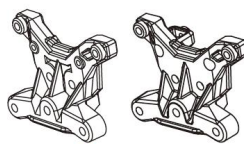

16201(含 contain PRO)

金属减震支架组件(红色)
Metal Shock towers
assembly (Red)

       模型车配件表 Spare part list

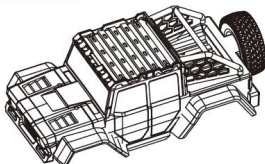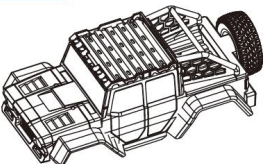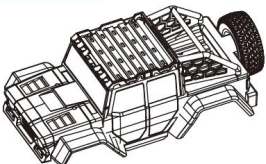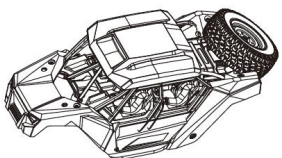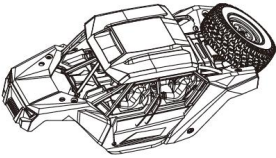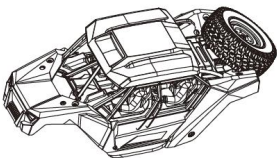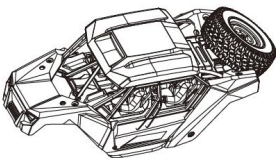6400 16104 	6401 16104 	6401-1 16104PRO 	6420 16106 
车壳总成 (酒红色) Car shell assembly (Wine red)	车壳总成 (沙黄色) Car shell assembly (Sandy yellow)	车壳总成 (军绿色) Car shell assembly (Military green)	车壳总成 (红色) Car shell assembly (Red)
6421 16106 	6422 16106PRO 	6423 16106PRO 	8085 
车壳总成 (深灰色) Car shell assembly (Dark gray)	车壳总成 (紫色) Car shell assembly (Purple)	车壳总成 (蓝色) Car shell assembly (Blue)	自攻圆头螺丝 Self tapping round head screw KBH 2.3x10 mm