

(产品仅适合14岁以上儿童使用)
(操作前请详阅此说明书)

Sea-god 6


2.4GHz remote control karting boat

TYXIN®
No. TX693



(使用说明书)

1. 对频: 按正确极性将电池连接到船上, 船发出声响, 按一下遥控器上的电源开关, 遥控器指示灯常亮, 对频成功。(遥控器若对频不成功, 指示灯闪烁)
2. 不要在距离遥控器超过50米的地方遥控船只, 否则会失去连接。
3. 当船在行驶过程中出现速度明显变慢时, 可能是电量偏低, 请及时将其带回范围内, 否则它可能会在您无法到达的地方耗尽电池。
4. 船没有自动扶正功能, 因此在操作过程中注意不要翻转或撞到障碍物。
5. 作业时避开水生植物, 因为它们可能会与螺旋桨纠缠在一起。
6. 遥控器方向微调控制左右偏移。
7. 低电提示: 当遥控船电池低电时, 遥控船和遥控器灯光闪烁, 遥控器凤鸣提示1声, 重复提示; 当遥控器电池低电时, 遥控器灯光闪烁, 没凤鸣提示。请重新为电池充电或更换新电池。

装饰件

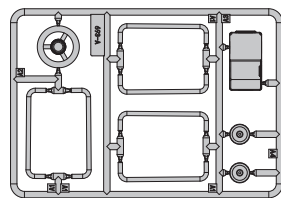


各部件名称

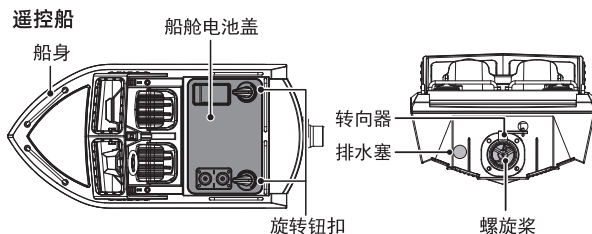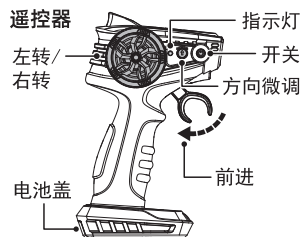

电池充电方式和安装


1 电池充电方式

- (1). 将USB充电线插入电脑的USB插口(如图), 此时USB充电线电源指示灯红灯亮起。
- (2). 充电时间约为90分钟, 充电时, 红色指示灯亮起, 充电完成后红色指示灯熄灭。

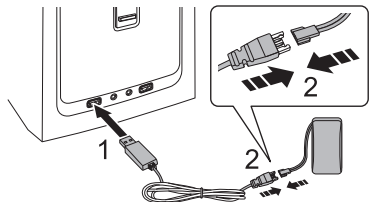


2 遥控船电池安装

- (1). 将旋钮按箭头所标示的方向旋转, 松开船舱电池盖。

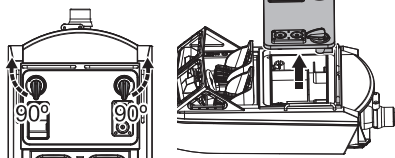


- (2). 将电池放在船体内部的定位内, 并确认其不会晃动。电池与接收机上的插口按正确极性连接好。装上船舱电池盖, 旋转钮扣锁紧。(电源连接后, 船舱发出声响)

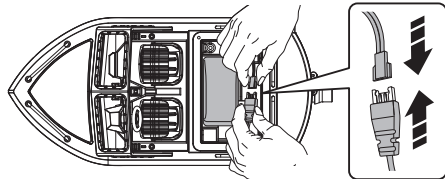


3 遥控器电池安装


打开遥控器的电池盖, 按正负极的方向装上2 x 1.5V "AA" (需另购) 电池, 合上电池盖。

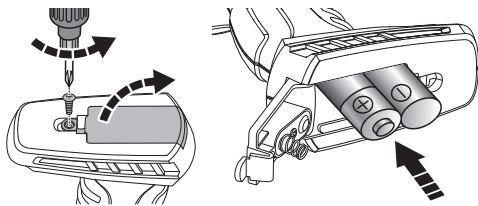

附属零件的安装

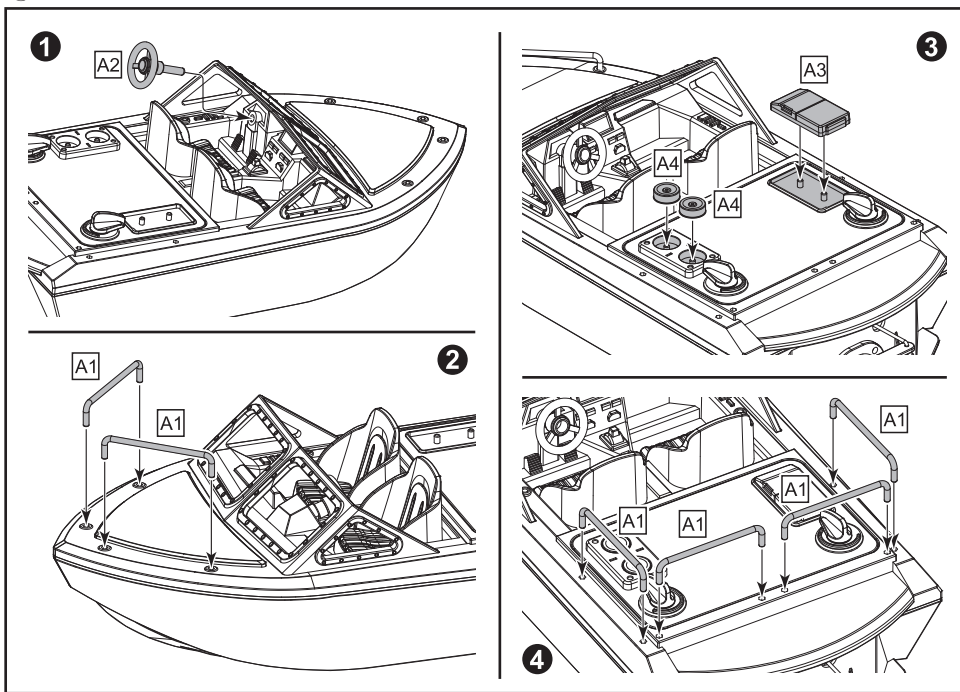

功能

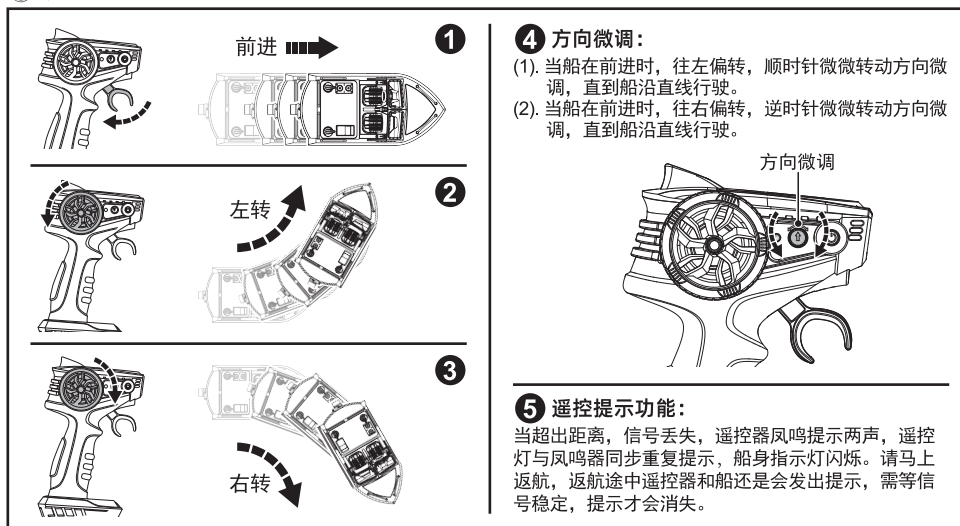

产品保养

使用完船后, 应当卸下船舱盖, 取出船内电池, 查看船体内部有无进水情况。如有, 请将水珠擦掉并晾晒一段时间, 晾干后再盖上船舱盖, 防止内部电子零件损坏。下次使用时, 再将充满的电池固定在电池架上, 连接电源使用即可。

(Not suitable for children under 14 years old)
(Please read through this manual before use)

Sea-god 6


2.4GHz remote control karting boat




(Instruction manual)

1. Frequency matching: Connect the battery to the ship with the correct polarity, and the ship makes a sound. Press the power switch on the remote control, and the indicator light on the remote control will remain on. Frequency matching is successful. (If the remote device fails to match the frequency, the indicator light will flash)
2. Do not pilot the boat more than 50m away from the remote control, otherwise connection will be lost.
3. When the speed of the ship slows down obviously in the course of driving, it may be that the power is low, please bring it back within range in time or it may drain the battery in places you cannot reach.
4. The boat does not have a self-righting function, so take care not to flip it or crash into obstacles during operation.
5. Avoid aquatic plants during operation, as these may get entangled with the propeller.
6. Fine adjust the direction of the remote control to control left and right deviation.
7. Low battery prompt: When the battery of the remote control ship is low, the lights of the remote control ship and remote control will flash, and the remote control will sound a chime and repeat the prompt: When the battery of the remote control is low, the remote control light flashes and there is no phoenix sound prompt. Please recharge the battery or replace it with a new one.


Decorate part

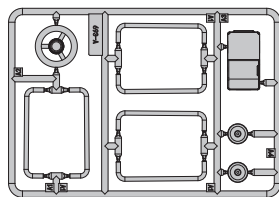

Remote control boat

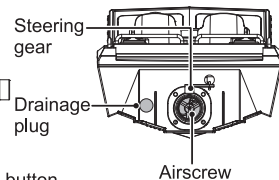


Name of each component

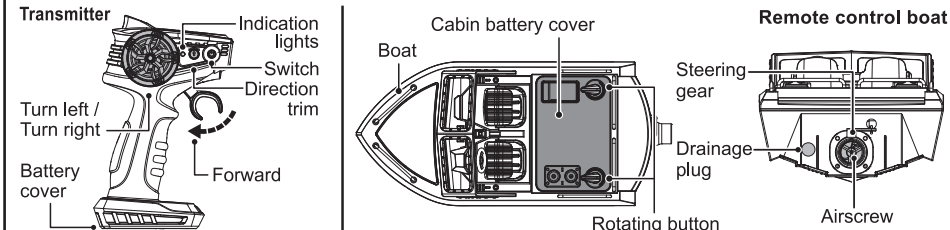

Battery charging method and installation


1 Battery charging method

- (1). Insert the USB charging cable into the USB socket of the computer (as shown in the figure), and the USB charging cable power indicator light will turn on red.
- (2). The charging time is about 90 minutes. When charging, the red indicator light lights up, and after charging is completed, the red indicator light goes out.

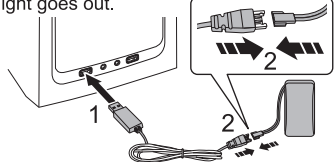


2 Installing the battery pack

- (1). Rotate the knob in the direction indicated by the arrow and release the cabin battery cover.

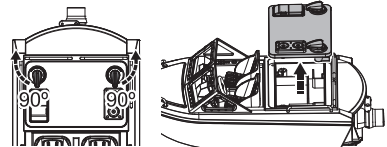


- (2). Place the battery in its position inside the hull and ensure that it does not shake. Connect the battery to the socket on the receiver according to the correct polarity. Install the battery cover in the cabin and lock it with a rotating button. (After the power is connected, the cabin makes a sound)

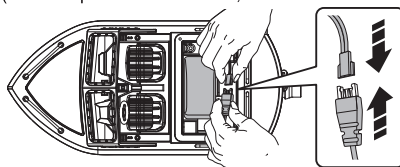


3 Remote control battery installation


Open the battery cover of the remote control, install 2 x 1.5V "AA" batteries in the positive and negative directions (to be purchased separately), and close the battery cover.

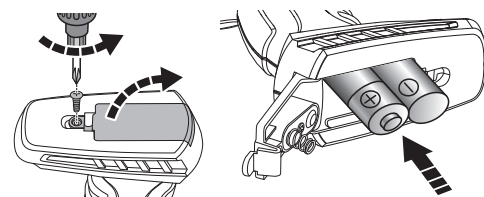

Installation of accessory parts

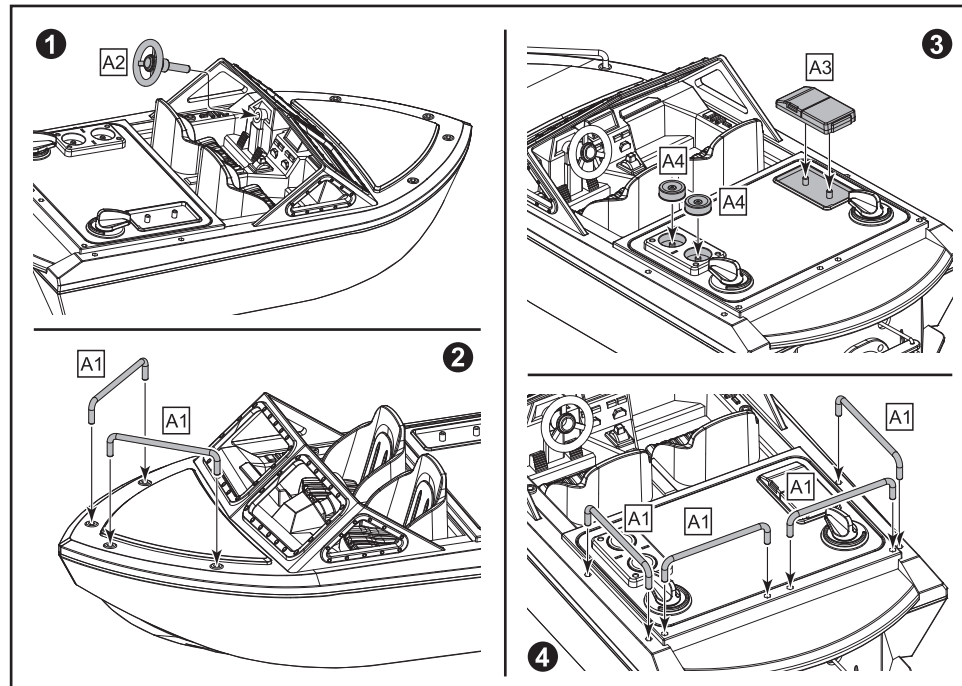

Function

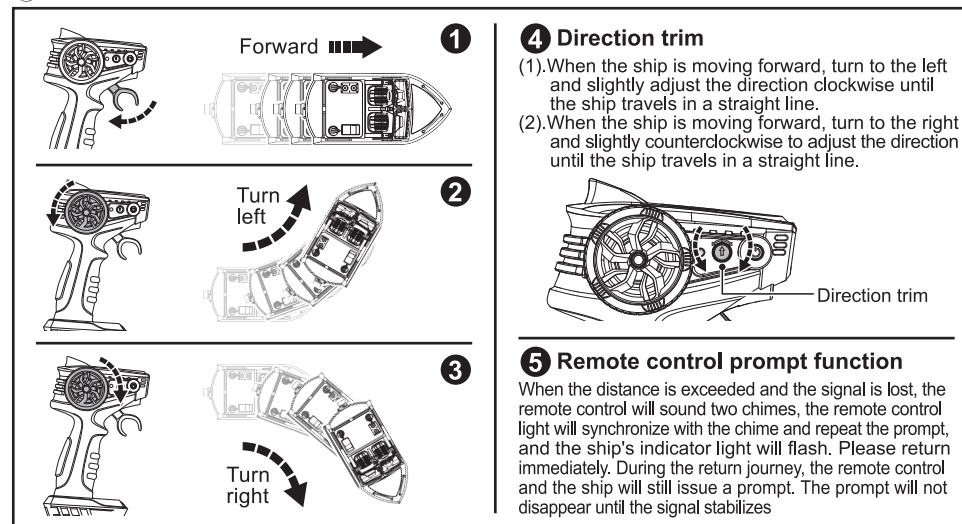

4 Direction trim

- (1). When the ship is moving forward, turn to the left and slightly adjust the direction clockwise until the ship travels in a straight line.
- (2). When the ship is moving forward, turn to the right and slightly counterclockwise to adjust the direction until the ship travels in a straight line.

5 Remote control prompt function

When the distance is exceeded and the signal is lost, the remote control will sound two chimes, the remote control light will synchronize with the chime and repeat the prompt, and the ship's indicator light will flash. Please return immediately. During the return journey, the remote control and the ship will still issue a prompt. The prompt will not disappear until the signal stabilizes.

Product maintenance

After using the ship, the hatch cover should be removed, the batteries inside the ship should be removed, and there should be no water ingress inside the ship. If any, please wipe off the water droplets and let them dry for a period of time before covering the cabin cover to prevent damage to internal electronic parts. Next time you use it, fix the fully charged battery on the battery rack and connect it to the power source for use.